


BAYLINER®

Ciera

22' - 28' Cruisers

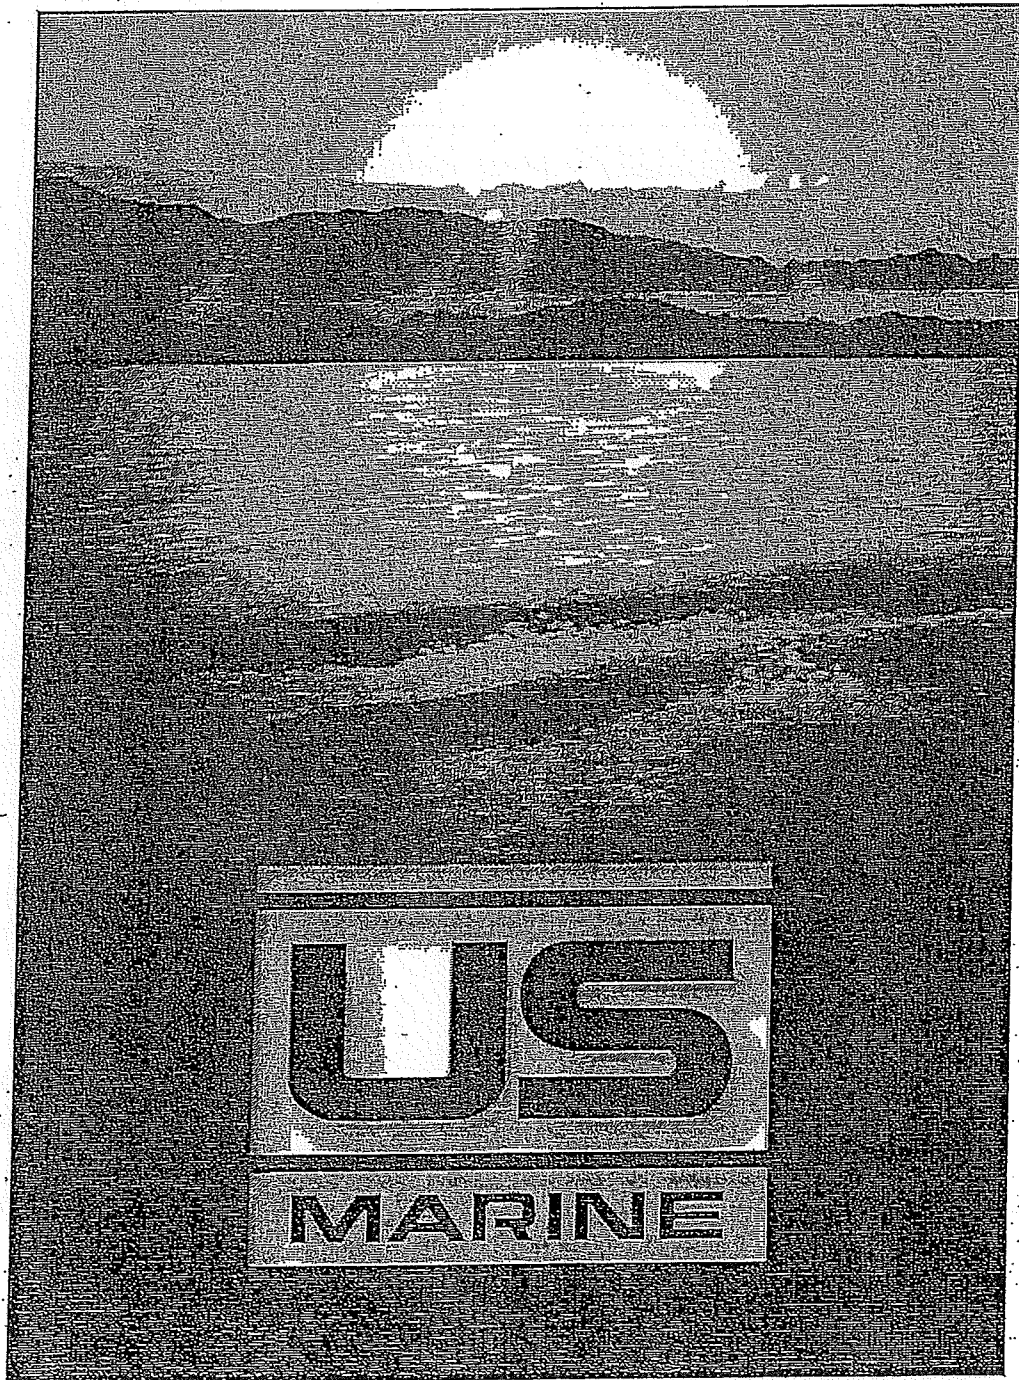

Owner's Manual Supplement

The information provided in this Owner's Manual *Supplement*
relates to 1998 & 1999 Bayliner Ciera 22' - 28' Cruisers


Hull Identification Number: _____

Engine Serial Number: _____

Hull Identification Number

The Hull Identification Number (HIN) is located on the starboard side of the transom. Record the HIN and the engine serial number in the space provided above.

Please refer to the HIN for any correspondence or orders.

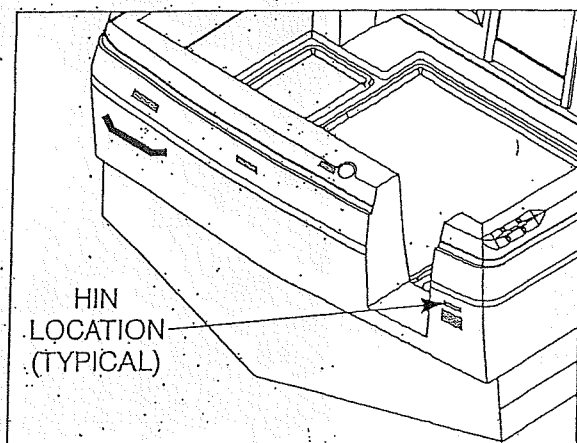

© 1998 Bayliner Technical Publications. All rights reserved.

No part of this publication may be reproduced, stored in any retrieval system, or transmitted in any form by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of Bayliner. Printed in the United States of America.

Changes

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Bayliner assumes no liability resulting from errors or omissions in this document, or from the use of information contained herein.

Bayliner reserves the right to make changes in the product design, specifications, and equipment at any time without notice or obligation.

Illustrations and/or photos may show optional equipment.

CONTENTS

CHAPTER 1: WELCOME ABOARD

- 1 Hazard Warning Symbols
- 1 Dealer Service
- 1 Boating Experience
- 2 Engine/Accessories Guidelines
- 2 Structural Limitations
- 2 Safety Standards
- 2 Qualified Maintenance
- 2 Proprietary Rights
- 2 General Notes

CHAPTER 2: COMPONENTS / SYSTEMS

- 3 Electrical System
- 6 Water Heater
- 6 Navigation and Interior Lights
- 6 Depth Finder
- 6 Alcohol or Alcohol/Electric Stove
- 7 110-Volt AC/12-Volt DC Refrigerator
- 7 Structural Limitations
- 7 Compass
- 7 Air Conditioning (Optional)
- 8 Portable toilet
- 8 Marine Head with Holding Tank
- 8 Bilge Blower
- 8 Fuel System
- 10 Bilge Pump
- 11 Fresh Water System
- 11 Sleeper Seat Adjustment
- 12 Typical Label Locations

CHAPTER 3: DRAWINGS & DIAGRAMS

- 13 2252 Express (CP)
- 16 2355 Express (SJ)
- 20 2452 Express (CD)
- 23 2655 Sunbridge (SB)
- 25 2855 Sunbridge (ST)
- 28 2858 Command Bridge (EC)
- 33 2859 Express (SC)

CHAPTER 4: WIRING DIAGRAMS

- 40 2252 Express (CP)
- 41 2355 Sunbridge (SJ)
- 42 2452 Express (CD)
- 43 2655 Sunbridge (SB)
- 44 2855 Sunbridge (ST), Gas Engine
- 45 2855 Sunbridge (ST), Diesel Engine
- 46 2858 Command Bridge (EC), Gas Engine
- 47 2858 Command Bridge (EC), Diesel Engine
- 48 2859 Express (SC), Gas Engine
- 49 2859 Express (SC), Diesel Engine
- 50 Single Dockside Wiring Diagram
- 51 Double Dockside Wiring Diagram

CHAPTER 5: ISO SYMBOLS

- 52 Definitions

LIMITED WARRANTY


- 54 What Is Not Covered
- 54 Other Limitations
- 54 Your Obligation


CHAPTER 1: WELCOME ABOARD


This Owner's Manual Supplement was prepared to provide specific information about your boat. Please study this supplement and the Owner's Manual carefully, paying particular attention to the LIMITED WARRANTY section. Keep this supplement in a secure place and hand it over to the new owner when you sell the boat.

Hazard Warning Symbols




The hazard warning symbols shown below are used throughout this supplement to call attention to potentially dangerous situations which could lead to either personal injury or product damage. We urge you to read these warnings carefully and follow all safety recommendations.

 **DANGER**
This symbol alerts you to immediate hazards which WILL cause severe personal injury or death if the warning is ignored.

 **WARNING**
This symbol alerts you to hazards or unsafe practices which COULD result in severe personal injury or death if the warning is ignored.

 **CAUTION**
This symbol alerts you to hazards or unsafe practices which COULD result in minor personal injury or cause product or property damage if the warning is ignored.

NOTICE
This symbol calls attention to installation, operation or maintenance information, which is important to proper operation but is not hazard-related.

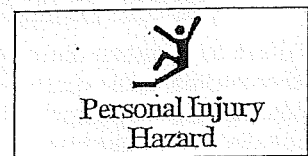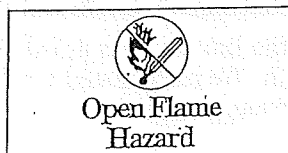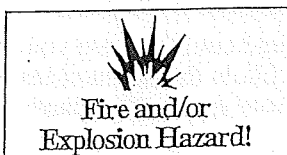


Dealer Service

Make certain that you receive a full explanation of all systems from the selling dealer before taking delivery of your boat. Your selling dealer is your key to service. If you experience any problems with your new boat, immediately contact the selling dealer. If for any reason your selling dealer is unable to help, you can call us direct on our customer service hotline: 360-435-8957 or send us a FAX: 360-403-4235

Boating Experience

If this is your first boat or if you are changing to a type of boat you are not familiar with, for your own comfort and safety, please ensure that you obtain handling and operating experience before assuming command of the boat. Your selling dealer, national sailing federation or yacht club can advise you of local sea-schools or competent instructors.

 **WARNING**
CONTROL HAZARD - A qualified operator must be in control of the boat at all times. **DO NOT** operate your boat while under the influence of alcohol or drugs.

Engine/Accessories Guidelines

Your boat's engines and accessories were selected to provide optimum performance and service. Installing different engines or other accessories may cause unwanted handling characteristics. Should you choose to install different engines or to add accessories that will affect the boat's running trim, have an experienced marine technician perform a safety inspection and a handling test before operating your boat by yourself again.


Structural Limitations

The command bridge, transom platform and bow platform are designed to be lightweight for proper boat balance. The load limit for these platforms and the command bridge is 30 pounds per square foot evenly distributed.

Safety Standards

Your boat's mechanical and electrical systems were designed to meet safety standards in effect at the time it was built. Some of these standards were mandated by law. All of them were designed to insure your safety, and the safety of other people, vessels and property.

Please read the Owner's Manual for important safety standards and hazard information.

⚠ DANGER	
	EXTREME SAFETY HAZARD - NEVER allow anyone to ride on parts of the boat that were not designated for such use. Sitting up on the seat backs, bow riding, gunwale riding, occupying the transom platform or the aft sundeck cushions while underway is especially hazardous and will cause personal injury or death.

Qualified Maintenance

⚠ WARNING	
To maintain the integrity and safety of your boat, only qualified personnel should perform maintenance on, or in any way modify: The steering system, propulsion system, engine control system, fuel system, environmental control system, or electrical system.	

Failure to maintain these systems as designed could violate the laws in your jurisdiction and could expose you and other people to the danger of bodily injury or accidental death. We recommend that you follow the instructions provided in this supplement, the Owner's Manual, the engine owner's manual and the accessory instruction sheets included with your boat.

Proprietary Rights

This document discloses subject matter in which Bayliner has proprietary rights. The information and design disclosed herein were originated by and are the property of Bayliner. Neither receipt nor possession thereof confers or transfers any right to reproduce, copy, alter or disclose the document or any part thereof, any information contained therein, or to construct boats or any item from it, except by written permission from or written agreement with Bayliner. This document is to be returned upon request to Bayliner.

General Notes

The information contained herein is subject to change without notice and is not to be used in conjunction with sales or advertising, except as may be expressly permitted in writing by Bayliner. Actual operating results will vary depending on conditions and variables.

All Bayliner products meet or exceed USCG and/or NMMA construction standards.


Due to our commitment to product improvement, we reserve the right to change, without notice or other obligation, the specifications or other information contained in this publication.




Manufactured with 1,1,1-Trichloroethane, a substance which harms public health and environment (during the manufacturing process) by destroying ozone in the upper atmosphere.

CHAPTER 2: COMPONENTS / SYSTEMS


Electrical System





We strongly recommend that you read and understand the Electrical Section of the Owner's Manual.


DANGER





EXTREME FIRE/EXPLOSION HAZARD!


- To minimize the risks of fire and explosion, *NEVER* install knife switches or other arcing devices in the fuel compartments.
- *NEVER* substitute automotive parts for marine parts. Electrical, ignition and fuel system parts were designed and manufactured to comply with rules and regulations that minimize risks of fire and explosion.
- *DO NOT* modify the electrical systems or relevant drawings.
- Only qualified personnel should install batteries and/or perform electrical system maintenance.
- Insure that all battery switches are in the OFF position before performing any work in the engine spaces.


WARNING





FIRE/EXPLOSION HAZARD!

- Fuel fumes are heavier than air and will collect in the bilge areas where they can be accidentally ignited. Visually and by smell (sniff test), check the engine and fuel compartments for fumes or accumulation of fuel. Operate the bilge blower for at least four minutes prior to engine starting, electrical system maintenance or activation of electrical devices.
- Minimize the danger of fire and explosion by not exposing batteries to open flame or sparks. It is also important that no one smoke anywhere near the batteries.


CAUTION


SHOCK/ELECTRICAL SYSTEM DAMAGE HAZARD!

- Never disconnect the battery cables while the engine is running as this can cause damage to your boat's electrical system components.
- The battery charging systems (alternator and, if applicable, battery charger) installed on your boat are designed to charge conventional lead-acid batteries. Before installing gel-cell or other new technology batteries, consult with the battery manufacturer about charging system requirements.

NOTICE

- Electrical connections are susceptible to corrosion. Minimize electrical problems due to corrosion by keeping all exposed electrical connections clean and protected with with a spray-on protectant such as Corrosion Guard®.
- **VOLTAGES** - All boats use either 110-volt AC/60 Hertz, 240-volt AC/60 Hertz or 220-volt AC/50 Hertz single phase systems, and 12-volt DC or 24-volt DC. Electrical distribution panels are labeled with voltage and frequency of AC and DC.

12 Volt DC System - Fuses and Circuit Breakers

Both the engine and accessory circuits are protected by a large circuit breaker located on the engine. In addition, a fuse block for branch accessory circuits is located behind the helm panel. Wires are color-coded to indicate which accessory each fuse services. Some items, such as radios and bilge pumps, may be fused individually at the unit. Autofloat switches are fused at the battery.

Battery Charger

Your boat may be equipped with a battery charger. Please refer to the manufacturer's operating instructions included in the boat's owner's packet. The battery charger operates when AC dockside power is connected and the battery charger circuit breaker is ON. The battery charger will charge batteries regardless of the battery switch position.



CAUTION

The battery charger is designed to charge conventional lead-acid batteries. Before installing gel-cell or other new technology batteries, consult with the battery manufacturer about charging system requirements.

Shore Power/110 Volt AC System

Your boat may be equipped with an AC system. AC systems are energized by dockside shore power. Standard dockside receptacles and cords provided are rated at 30 amps. Since some shore installations do not have 30 amp service, we recommend the purchase of 15 amp and 20 amp adapters. Note: When 15 amp or 20 amp adapters are used there will be a corresponding drop in supplied AC power.



DANGER



FIRE/EXPLOSION/SHOCK HAZARD!

- To minimize shock and fire hazard, DO NOT modify electrical systems or relevant drawings.
- DO NOT alter shore power connectors and use only compatible connectors.
- Only qualified personnel should install batteries and/or perform electrical system maintenance.



CAUTION



SHOCK/ELECTRICAL SYSTEM DAMAGE HAZARD!

- Never connect dockside power to your boat outside North America unless you have purchased the International electrical conversion option, which is rated for 220-volt/50 Hertz. North American systems are rated for 110-volt/60 Hertz power.
- Use double insulated or three-wire protected electrical appliances when possible.

NOTICE

When using shore power, the simultaneous operation of several AC accessories can result in an overloaded circuit. It may be necessary to turn off one accessory while operating another.

⚠ WARNING

*FIRE/EXPLOSION/SHOCK/ELECTRICAL SYSTEM
DAMAGE HAZARD!*

Before connecting to shore power, all breakers and switches on the AC master panel must be in the OFF position. Always attach the shore power cord to the boat inlet first, then to the dock connection, thereby avoiding accidental submersion of the "HOT" cord into the water. To disconnect, first remove the dock connection before removing the cord from the boat.

⚠ WARNING

*FIRE/EXPLOSION/SHOCK/ELECTRICAL SYSTEM
DAMAGE HAZARD!*

Monitor the electrical control panel's polarity indicators when connecting shore power to your boat. A **GREEN** light illuminating after the power cord is plugged into the boat's external power receptacle indicates acceptable electrical power in which you may energize the main breaker switches. A **RED** light, however, indicates reversed polarity, which could cause electrical system damage and possibly electrical shock injuries. In this case, **DO NOT** energize the main breaker switches. Instead, immediately disconnect the shore power cord (always from the dockside outlet first) and notify marina management.

⚠ CAUTION

***WATER HEATER DAMAGE HAZARD!** - Do not energize the water heater electrical circuit until the heater is COMPLETELY filled with water. Even momentary operation in a dry tank will damage the heating elements. Warranty replacements WILL NOT be made on elements or tank damaged in this manner.*

TYPICAL SHORE POWER RECEPTACLE

TYPICAL AC POWER PANEL

On boats with a single dockside inlet, check for proper polarity as outlined in the previous warning. Activate the AC system by first turning on the master breaker, then each individual component breaker as required.

On boats with dual dockside inlets, check for proper polarity as outlined in the previous warning. Each dockside inlet is labeled inside the weather-proof cover, line 1 or line 2, which corresponds to the line each operates on the AC master panel. This system is designed so that each line operates independent of each other. Activate the AC system by first turning on the master breakers, then each individual component as required.

Water Heater

Your boat may come equipped with a water heater. Be sure to refer to the manufacturer's operating instructions supplied in the owner's packet. The water heater is connected to the AC power system. If your boat is equipped with optional freshwater engine cooling, the coolant from the closed engine cooling system may be circulated through the hot water tank for heating of potable water.

CAUTION

Water heaters must be kept full of water to avoid damage to the 110-volt heating elements. They should also be drained (with the power OFF) when the possibility of freezing exists.

Navigation and Interior Lights

We strongly recommend that you understand navigation light usage by reading the navigation section of the Owner's Manual. The navigation and interior lights supplied with your boat are of top quality, but you should be aware that failure may periodically occur for a variety of reasons:

1. There may be a blown fuse (Replace the fuse in the switch panel).
2. The bulb may be burned out (Carry spare bulbs for replacement).
3. The bulb base may be corroded (Clean the base periodically and coat it with non-conductive grease).
4. A wire may have come loose or may be damaged (Repair as required).

CAUTION

- Avoid the storage of gear where it would block navigation lights from view.
- Prolonged operation of cabin interior lights (overnight) will result in a drained battery. Be conservative in the use of battery power.

Depth Finder

Your boat may come equipped with a depth finder. It will provide you with measurements of water depth beneath the boat. In many cases it may help you locate schools of fish. We suggest that you read the manufacturer's owner's operating instructions included in the boat's owner's packet before using the unit.

WARNING

DO NOT use the depth finder as a navigational aid to prevent collision, grounding, boat damage or personal injury. When the boat is moving, submerged objects will not be seen until they are already under the boat. Bottom depths may change too quickly to allow time for the boat operator to react. If you suspect shallow water or submerged objects, operate the boat at very slow speeds.

Alcohol or Alcohol/Electric Stove


Operating instructions for the alcohol or alcohol/electric stove can be found in the boat's owner's packet. Carefully read and follow the manufacturer's operating instructions and warnings before using the stove.

WARNING

FIRE HAZARD - Reduce the possibility of fire by removing all combustible materials away from the stove before/during use.

⚠ WARNING

FIRE/PERSONAL INJURY HAZARD - Before each use of the 2858 (EC) galley stove, the lower helm seat's back rest **MUST** be lowered into the counter top position to reduce the possibility of fire or injury (see drawing below).

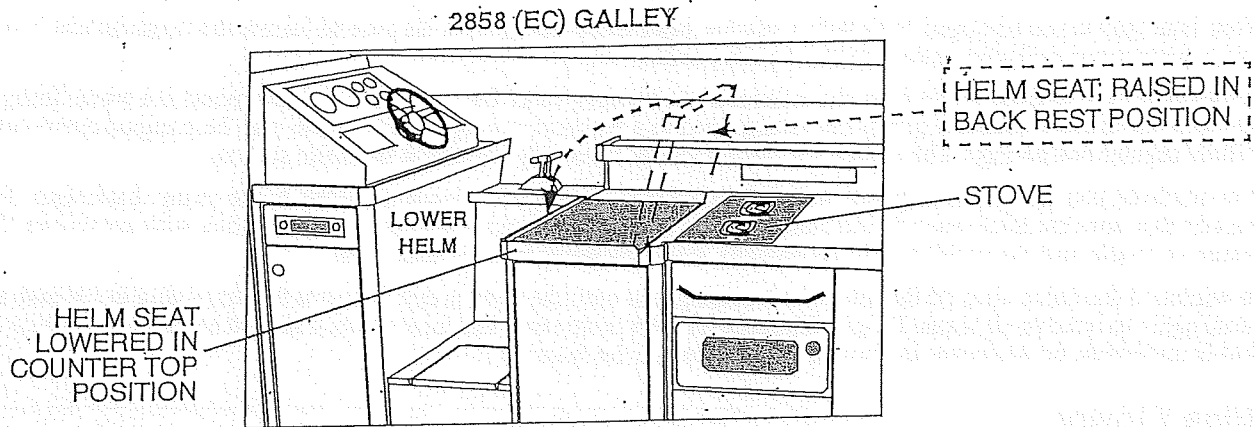

110-Volt AC/12-Volt DC Refrigerator

Your boat may come equipped with a 110-volt AC/12-volt DC refrigerator. Please refer to the manufacturer's instructions included in the boat's owner's packet. The refrigerator operates on 110-volt AC and 12-volt DC power. When the 110-volt AC system is not hooked up to an AC source, the refrigerator operates on 12-volts DC. When a 110-volt AC source is supplied by dockside power and the AC refrigerator breaker is ON, the refrigerator automatically switches to 110-volt AC.

NOTICE

The refrigerator has the heaviest continuous draw on the 12-volt system. In less than 24 hours, the refrigerator can render a 100-amp battery useless for engine starting. For this reason, it is recommended that when operating on 12-volts, the cold setting on the refrigerator should not be set higher than position two (2). It is also advisable to turn off your refrigerator at night or when not in use. If you are going to be out for more than one day and cannot connect to dockside power, you should plan to run the engine each day to maintain a charged battery.

Structural Limitations

1. Command bridge, bow platform and transom platform loads must not exceed 30 pounds per square foot, evenly distributed.
2. Periodically check the platform mounting hardware (if applicable) for looseness and corrosion.

Compass

Your boat may come equipped with a compass. Carefully read and follow the manufacturer's calibration and operating instructions provided in the boat's owner's packet.

Air Conditioning (Optional)

Your boat may be equipped with an optional air conditioning system. Please refer to the manufacturer's operating instructions included in your boat's owner's packet.

Portable toilet

Your boat may come equipped with a portable toilet. Be sure to read and carefully follow the manufacturer's operating instructions included in your boat's owner's packet.

Marine Head with Holding Tank

Your boat may come equipped with with a marine head and holding tank. Be sure to follow the manufacturer's operating instructions included in the boat's owner's packet.


Seawater is used to flush waste from the toilet into the holding tank. The holding tank is plumbed to a waste fitting on the deck for use at a dockside pump-out station, and to a macerator pump so that waste may be pumped overboard (where regulations permit). The switch for the macerator is usually located at the helm station.

If at any time you are unable to pump water into the bowl, the probable cause is debris in the pump diaphragm. To remedy this, shut the inlet seacock and dismantle the pump. The pump is generally held together with six screws. The design is simple and the problem will be obvious when the pump body is split open.


To winterize the toilet, shut off the intake valve and pump until the bowl is dry. Remove the drain plug in the base and pump again to remove all water. Do not fill the bowl with antifreeze. The inlet seacock should be left closed while the boat is underway, or whenever the boat is left moored in the water.

Bilge Blower

The bilge blower removes fumes from the engine compartment and draws fresh air into the compartment through the deck vents. To ensure fresh air circulation, operate the bilge blower for at least four minutes before starting the engine, during starting, and while operating the boat below cruising speed.

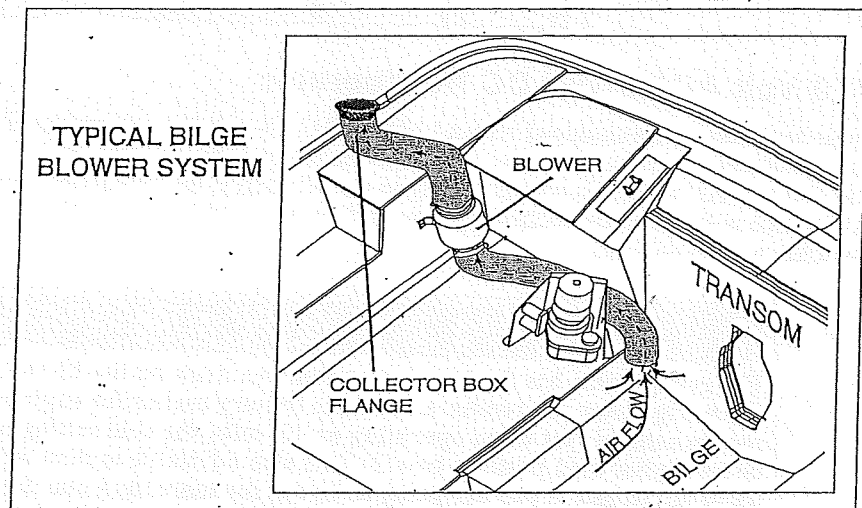

WARNING



Operation of the blower system is *NOT A GUARANTEE* that explosive fumes have been removed. If you smell any fuel, *DO NOT* start the engine. If the engine is already running, immediately shut off the engine and all electrical accessories. Investigate immediately. *DO NOT* obstruct or modify the ventilation system.

Fuel System

Fuel Fills and Vents:

Fuel fills are located either on the aft deck or on the side decks adjacent to the aft cockpit. Fuel receptacle caps are marked "Diesel" or "GAS". Fuel vents are normally located in the hull or transom below and in the same general area as the fill. If you experience difficulty filling the fuel tank, check to see that the fuel fill and vent lines are free of obstructions and kinks.

Anti-siphon Valve:



Your boat may be equipped with an anti-siphon valve, which is an integral part of the barb fitting on the fuel tank in which the neoprene fuel line attaches. The valve is spring loaded and is opened by fuel pump vacuum. These valves will prevent fuel from siphoning from the tank in the event of a fuel line rupture.

NOTICE

If an engine running problem is diagnosed as fuel starvation, check the anti-siphon valve. In the event the valve is stuck or clogged, it should be changed or replaced while the engine is shut down. Under NO circumstances should the anti-siphon valve be removed, except in an emergency.

Fuel Filters:

All tanks are equipped with a fine mesh screen filter on the fuel pickup tube (located inside or on the outside of the tank) to the fuel line fitting. In addition, when supplied by the engine manufacturer, an additional filter is installed on the engine. Fuel filters should be replaced periodically to ensure they remain clean and free of debris. Consult your selling dealer or local marina concerning fuel additives that help to prevent fungus or buildup in your fuel tanks.

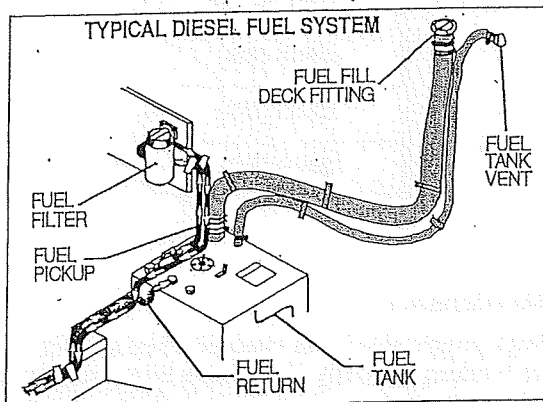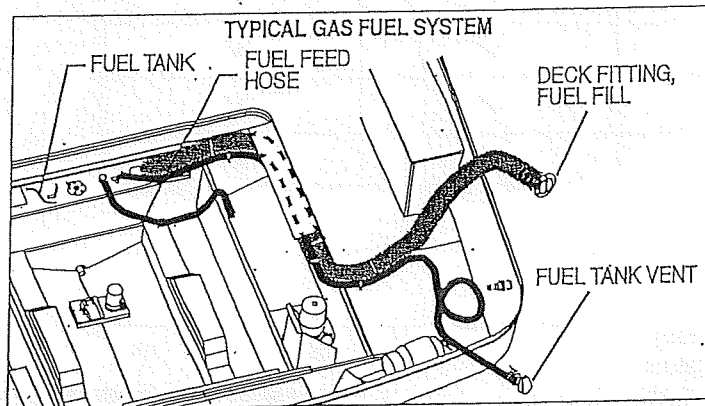

⚠ WARNING



FIRE/EXPLOSION HAZARD - It is very important that the fuel system be inspected thoroughly the first time it is filled and at each subsequent filling. For your safety and the safety of your passengers, the fueling instructions in the Owner's Manual must be carefully followed.

NOTICE

Air in the diesel supply system can stop an engine or severely restrict performance. If you suspect air in your diesel fuel lines, refer to your engine owner's manual for detailed instructions on how to "bleed" the system.

⚠ CAUTION

Avoid the storage or handling of gear near the fuel lines, fittings and tank.

Bilge Pump

Your boat is equipped with two impeller-type bilge pumps. They are controlled by a switch on the dash panel, which should be activated whenever water begins to accumulate in the bilge. Some models will also have an automatic bilge pump switch ("autofloat switch"), mounted next to the bilge pump. This is a float-type switch that will activate a bilge pump automatically whenever the bilge water accumulates above a pre-set level. It is wired directly to the battery so it will normally function even when the boat is completely shut down and unattended, such as when the boat is moored at a marina.

Locations and flow rates of bilge pumps:

Model	Aft (8.3 gpm)	Aft (20.83 gpm)	Fwd (8.3 gpm)
2252 (CP)		✓	✓
2355 (SJ)	✓		✓
2452 (CD)		✓	✓
2655 (SB)		✓	✓
2585 (EC)		✓	✓
2859 (SC)		✓	✓

Maintenance



Bilge pumps should be checked often to verify that they are working properly. To check a bilge pump's operation, activate the dash-mounted switch. Verify that water in the bilge is pumped overboard. If bilge water is present and the pump motor is running but not pumping, inspect the discharge hose for a kink or collapsed area. If no problems are found, check the bilge pump housing for clogging debris:

To remove the power cartridge:

1. Lift the tab while rotating the fins counter-clockwise and lift out the power cartridge (Fig. 1).
2. Clear the housing of debris.


To reinstall the power cartridge:

1. Make sure the "O" ring is properly located and coat the "O" ring with a light film of vegetable oil or mineral oil (Fig. 2).
2. Align the two cams on either side of the power cartridge with the two slots on the outer housing. Press the power cartridge into the housing and twist clockwise. Ensure proper reinstallation by attempting to twist the fins counter-clockwise without lifting the tab. The cartridge should stay in place.

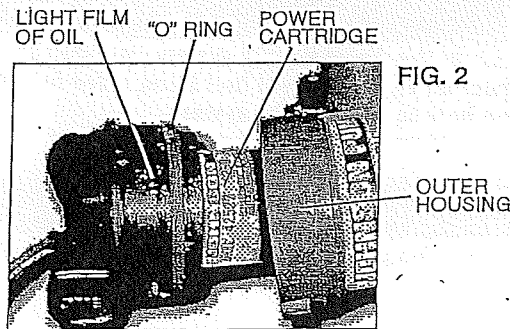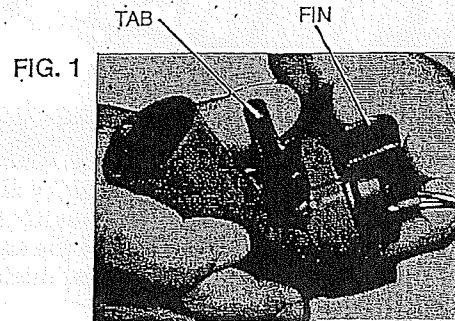

If applicable, the autofloat switch should also be checked often for proper operation. Lift the float by turning the plastic insert where the wires enter the housing, 1/4 turn counter-clockwise (Fig. 3).

As the float is lifted, the bilge pump should turn on. If lifting the float does not turn the pump on, check the inline fuse. If the fuse is good but the switch does not work, it may indicate a bad switch or possibly a low battery

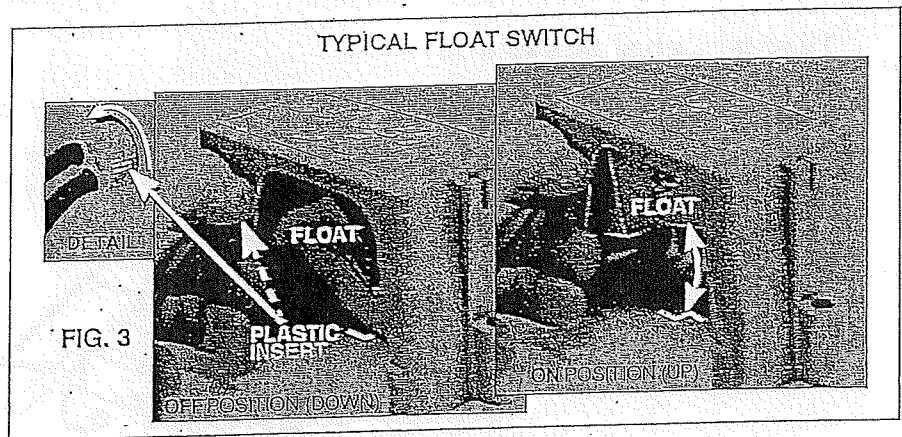

NOTICE

Discharge of oil, oil waste or fuel into navigable waters is prohibited by law. Violators are subject to legal action by the local authorities.

Fresh Water System

Fresh water systems are available on some models. These pressure-type (demand) systems operate when the water pump switch (located near the sink in the cuddy cabin) is in the ON position. Turn the pump switch OFF when the boat is not in use and when the water tank is empty.

Stored water can become stagnant and distasteful. Pump the water tank dry before leaving your boat unattended for long periods of time. Occasionally you may want to disinfect your water system. Ask your selling dealer about available treatments and procedures.

Your boat may be equipped with a shower. Please read and follow the manufacturer's operating instructions supplied in the owner's packet.

Sleeper Seat Adjustment


Your boat may be equipped with adjustable sleeper seats. These seats can be adjusted fore and aft in the upright position. The seat bottoms of these models also adjust into backrests while the seats are in the lounge position.

Fore-aft positions:


To slide a seat forward or backward, lift up on the front edge of the seat bottom (A). Move the seat forward until the locking mechanism engages in one of the three different positions. Lift the aft seat at point (B) and slide the aft seat towards the forward seat.

Lounge positions:

1. To put the seat into the lounge position, lift up on the front edge of the seat (A) and pull the seat all the way forward. Lift the aft seat at (B) and pull the aft seat away from the forward seat until the seat is laid out flat.
2. Lift up on the forward or aft seat bottom at point (C) until the seat bottom drops into the locked position.
3. To lower the seat bottom, lift the seat at points (C) and (D) at the same time. Drop the seat bottom flat while holding the seat up at point (D).
4. To return the seat to the operating position, lift the seat back at point (E) and push the seat bottom toward the center of the seat until it locks into place.

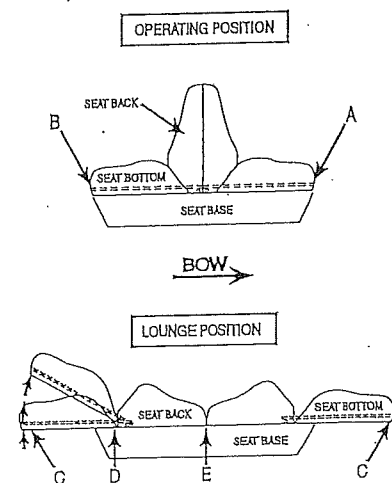


Typical Label Locations

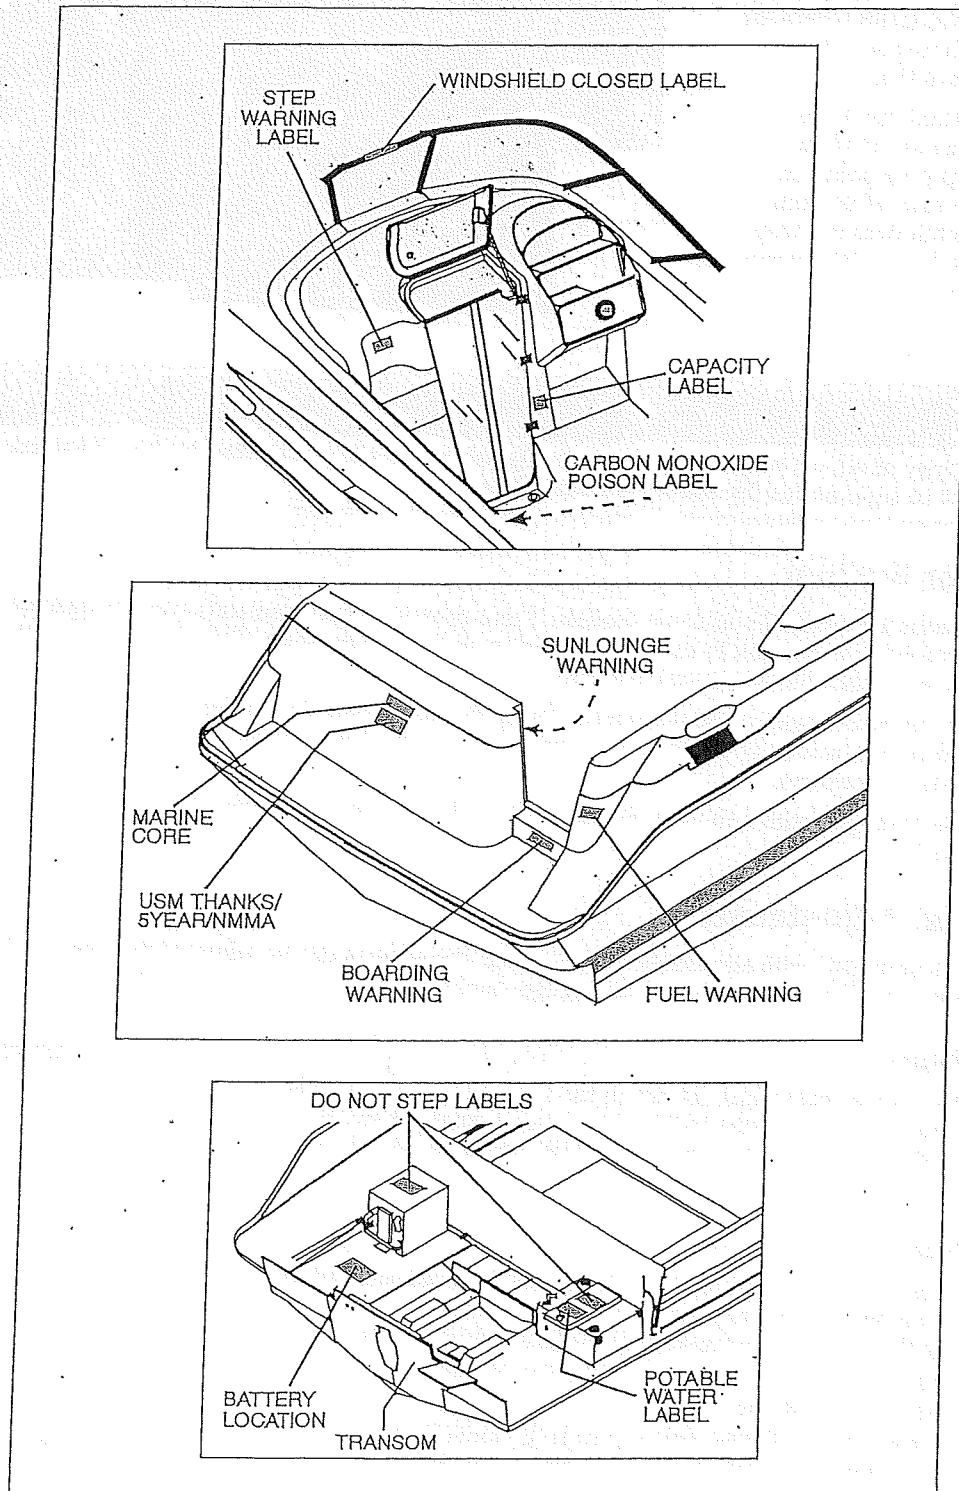

CHAPTER 3: DRAWINGS & DIAGRAMS


2252 Express (CP)

Layout View

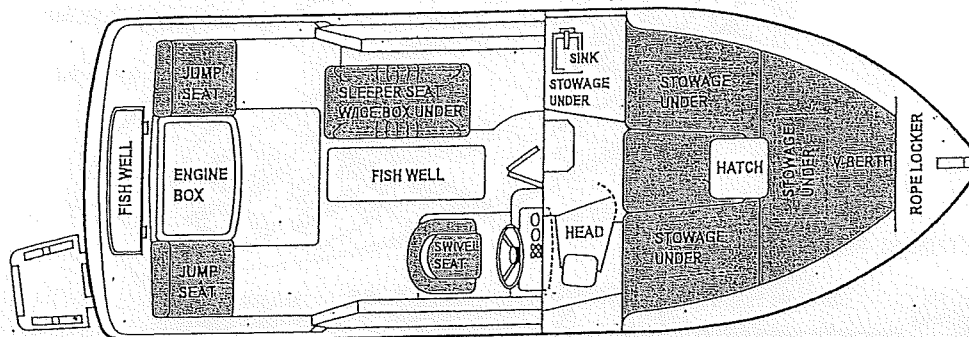


Overall Length	Bridge Clearance	Beam	Maximum Draft	Fuel Tank Capacity (gal)	Water Tank Capacity (gal)
22' 3"	6' 6"	8' 1"	2' 10"	55	13


Hull Exterior Hardware

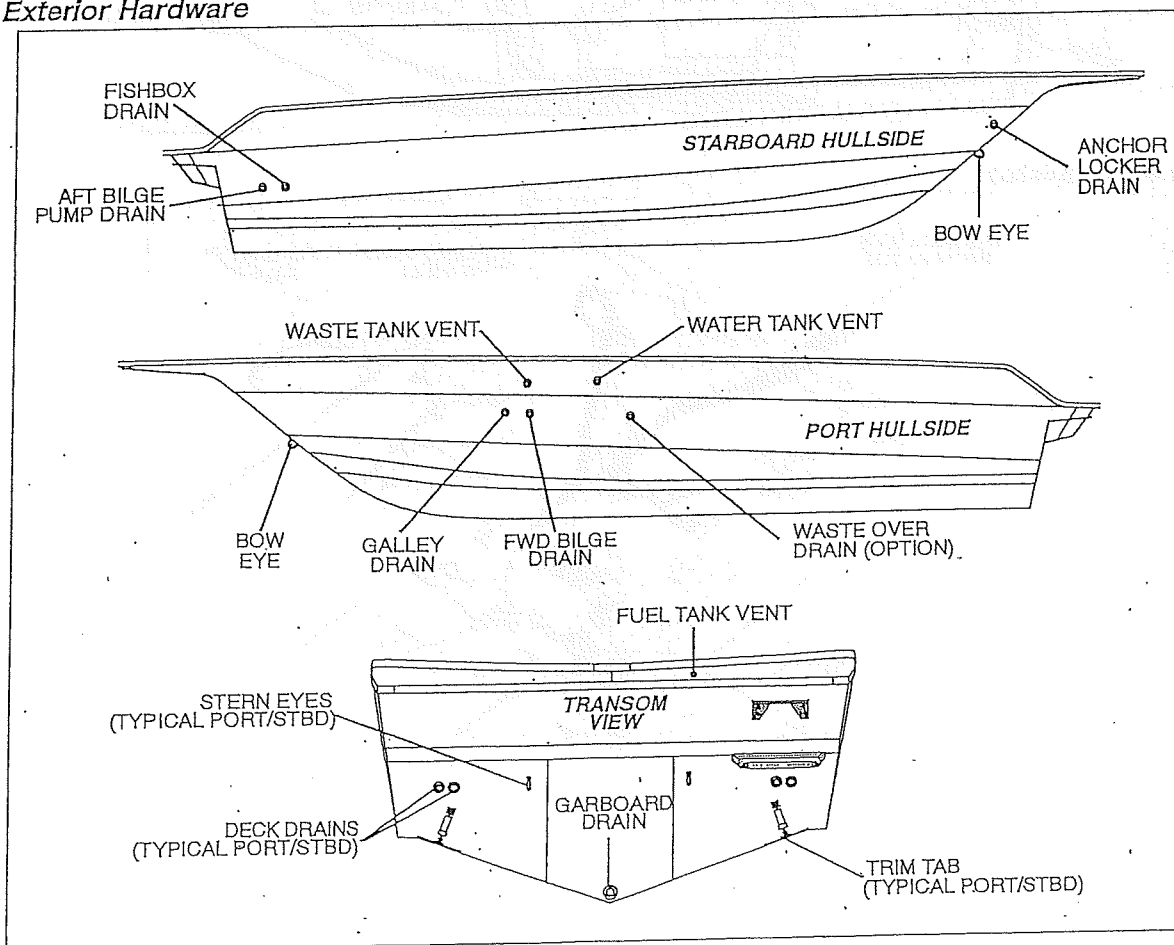


Electrical Routing

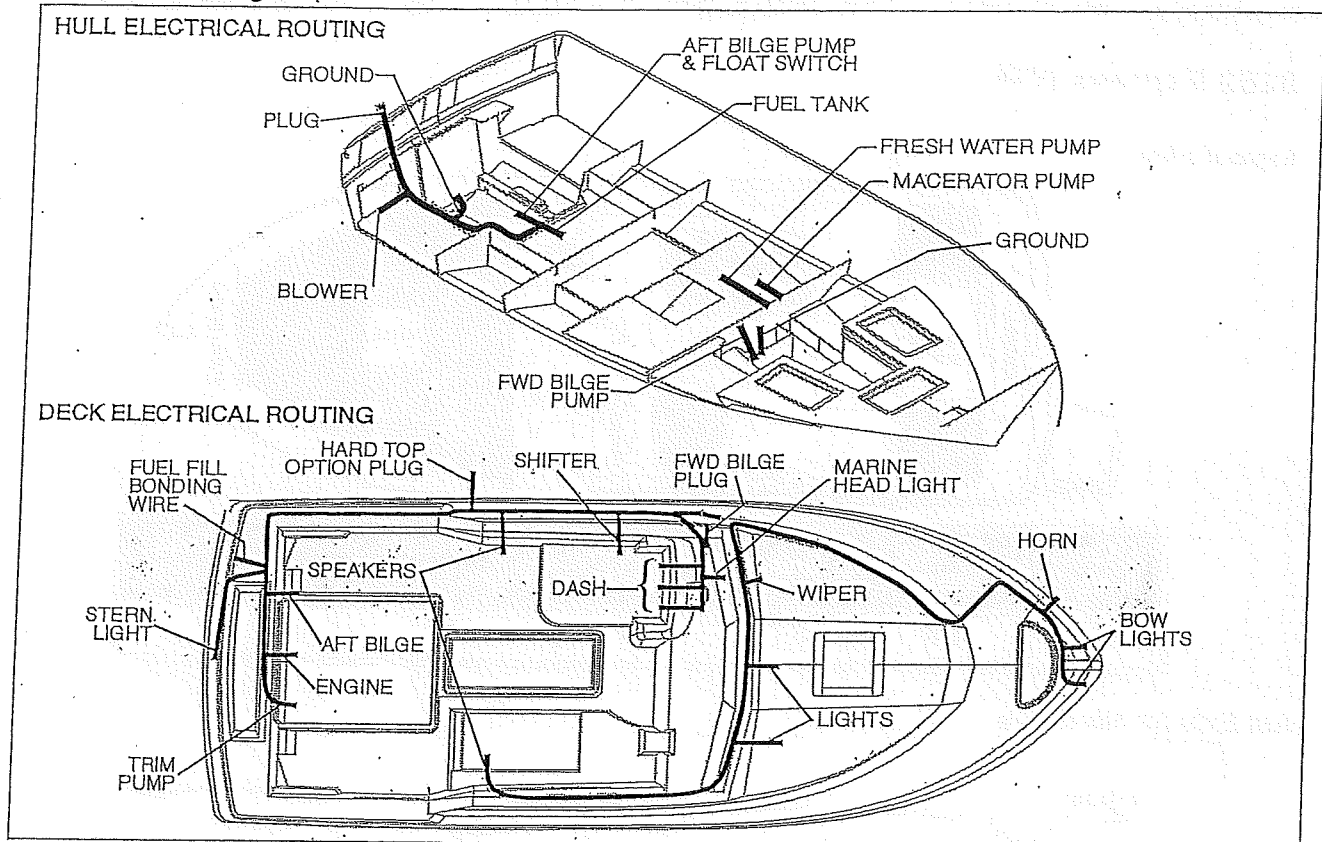


Fresh Water System

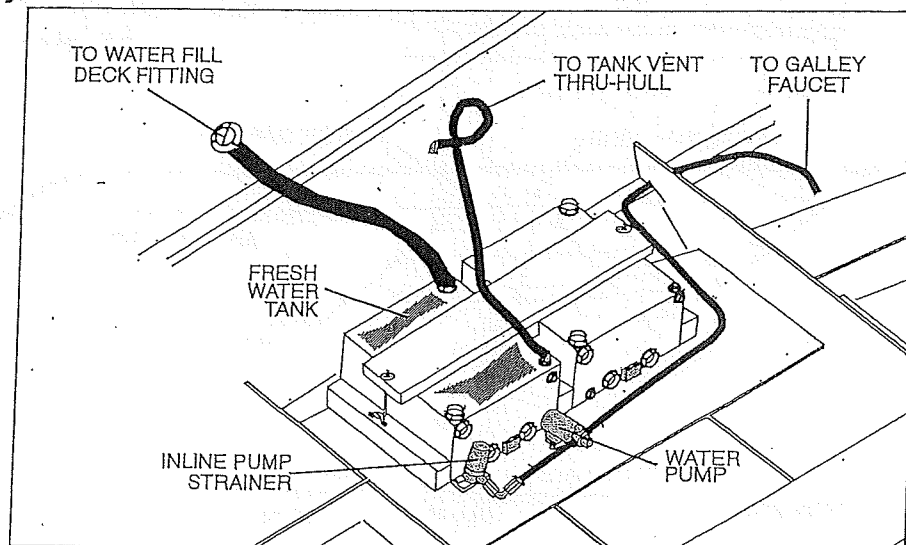

Galley Drain System

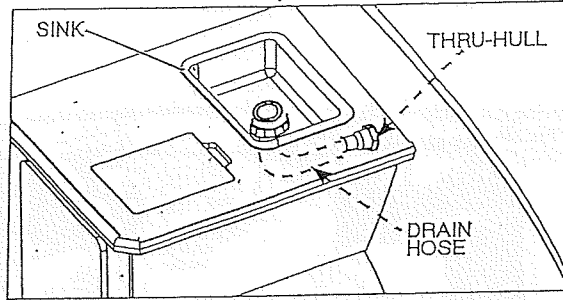


Marine Head (Option)

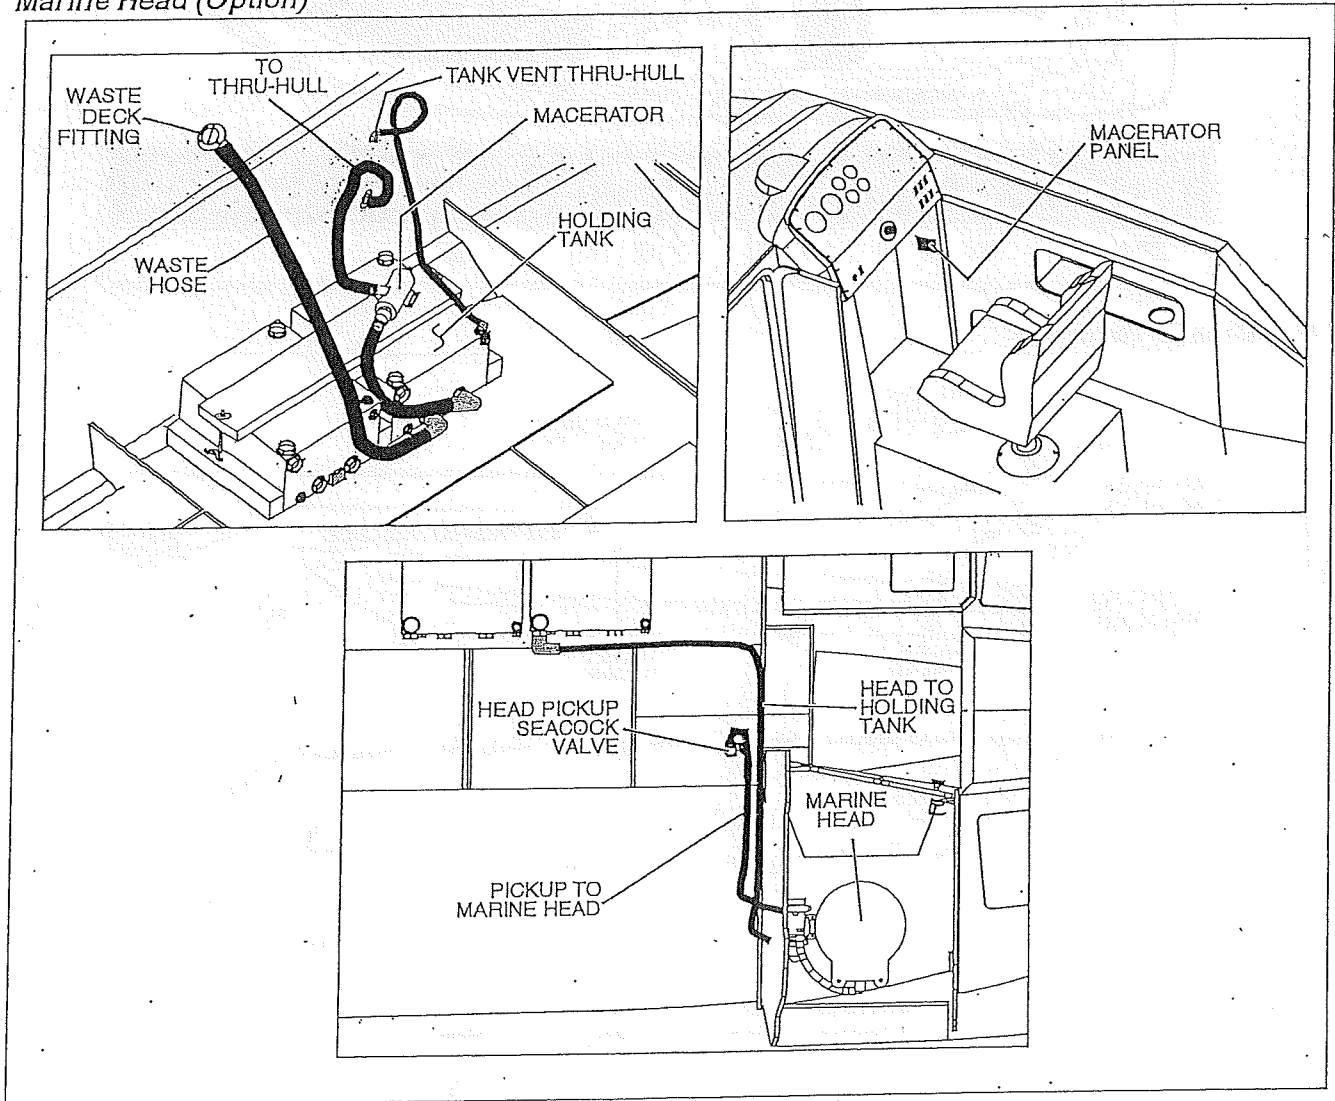


2355 Express (SJ)

Layout View

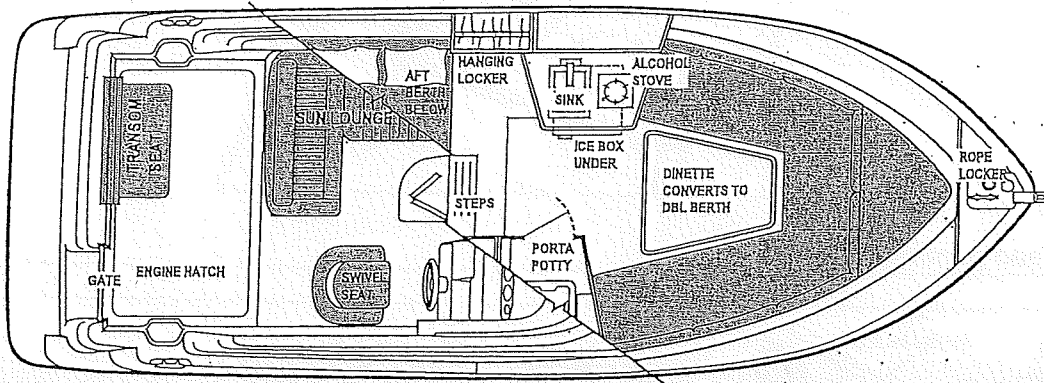


Overall Length	Bridge Clearance	Beam	Maximum Draft	Fuel Tank Capacity (gal)	Water Tank Capacity (gal)
23' 4"	6' 2"	8' 6"	2' 10"	55	13


Hull Exterior Hardware

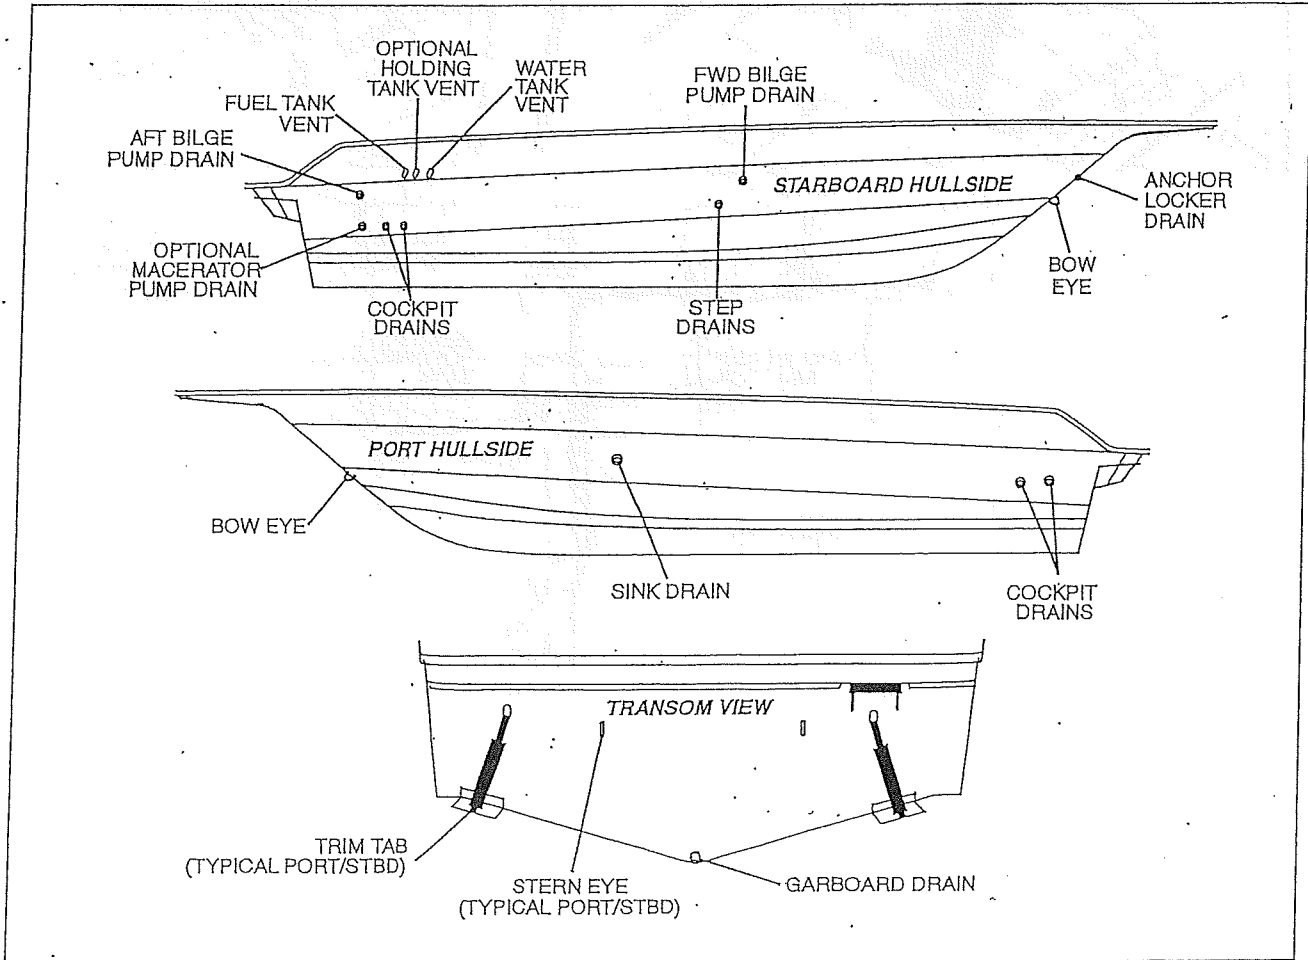


Electrical Routing

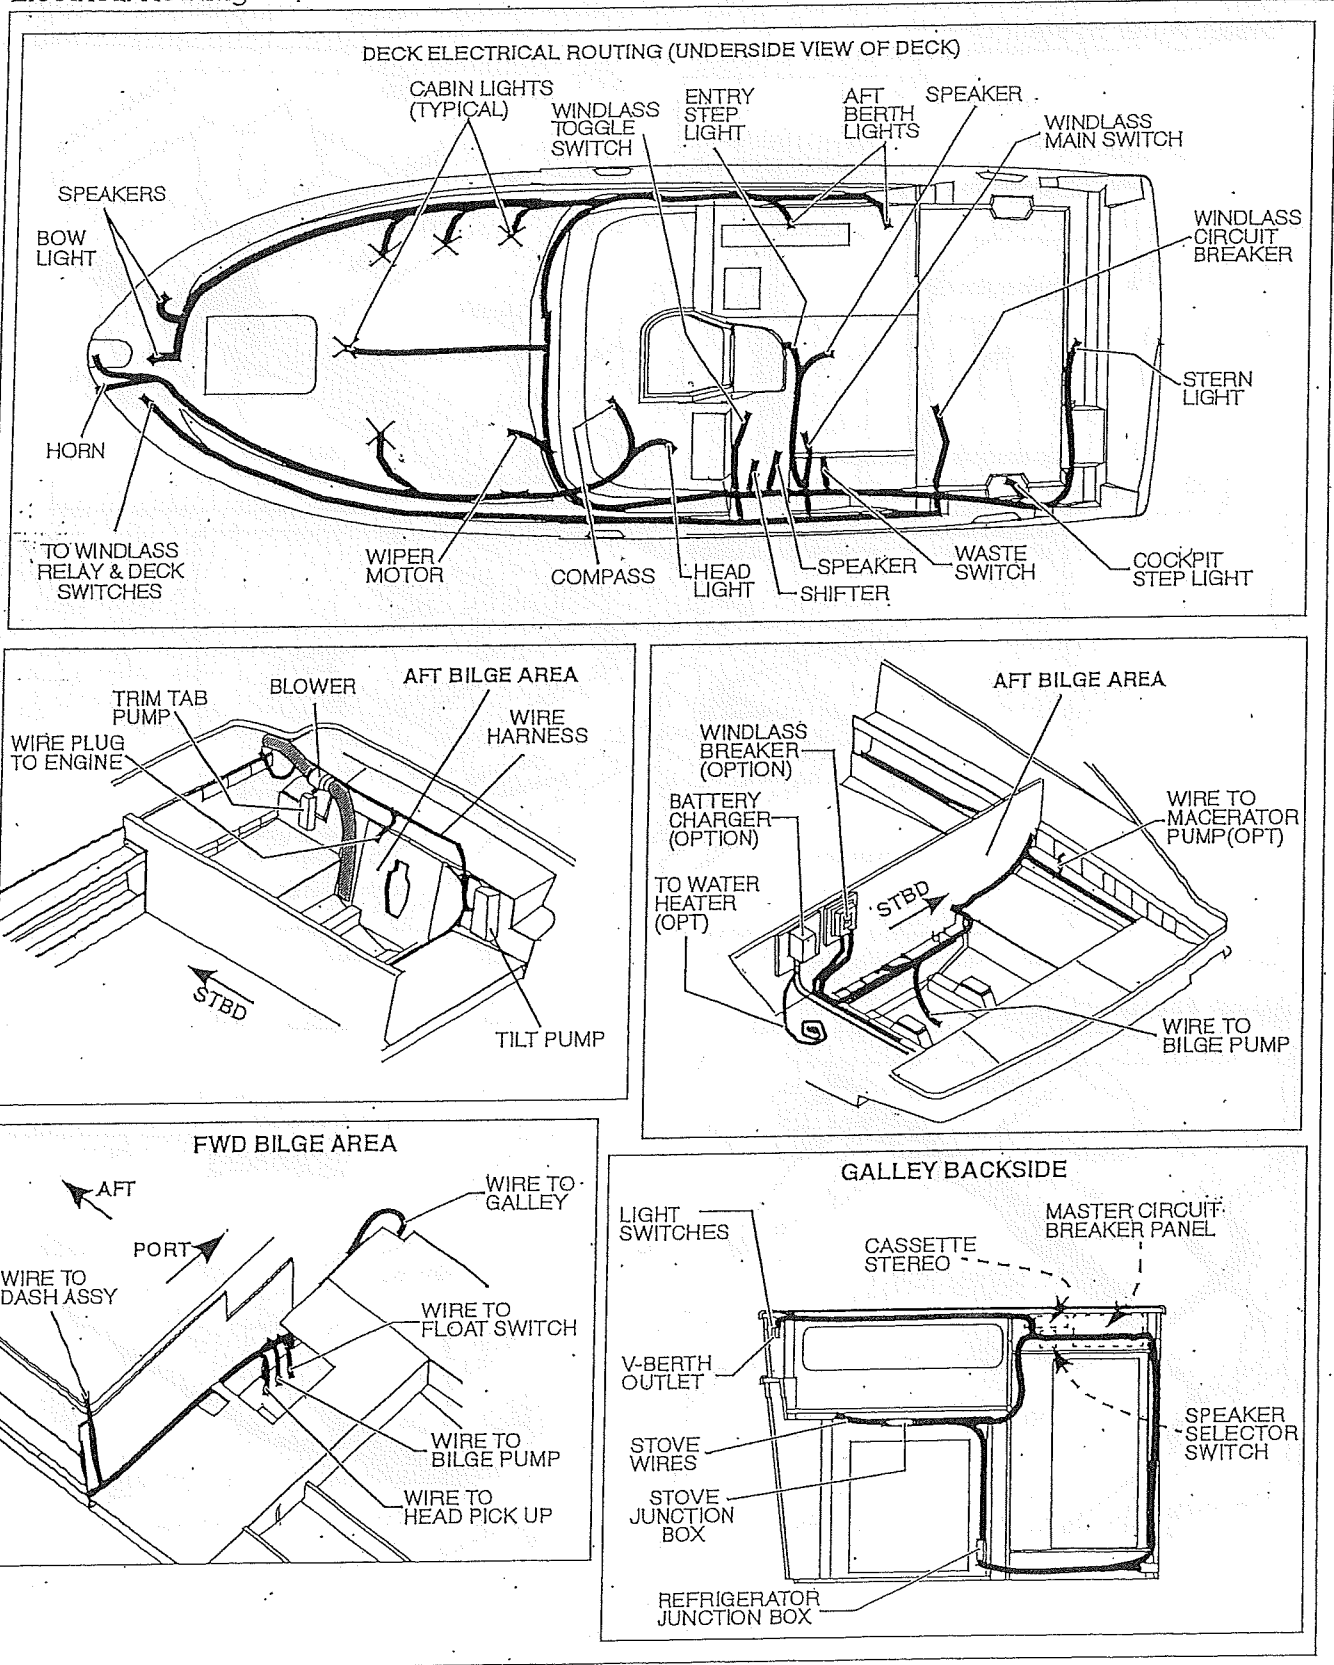


Fresh Water System Option

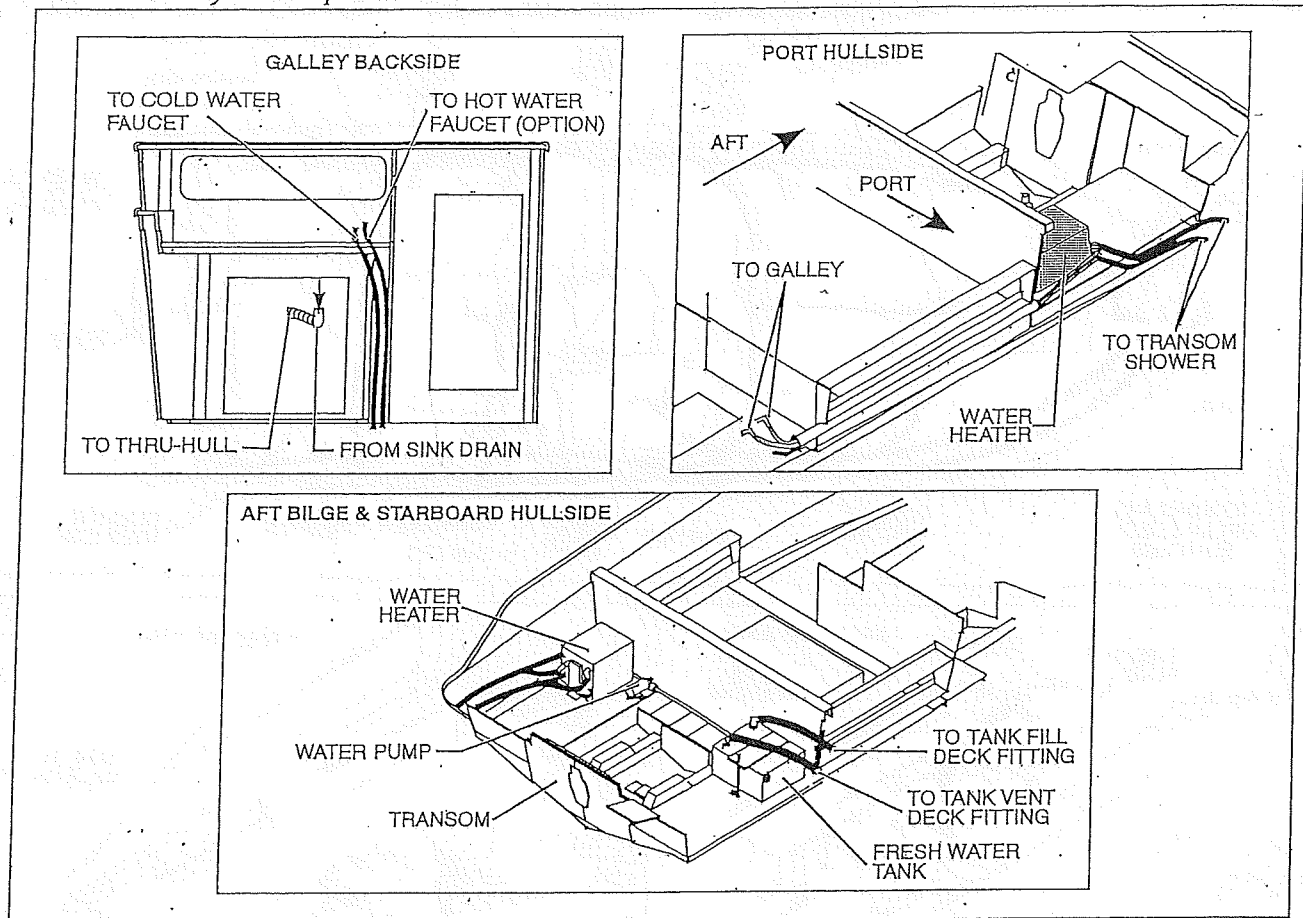

Waste System Option

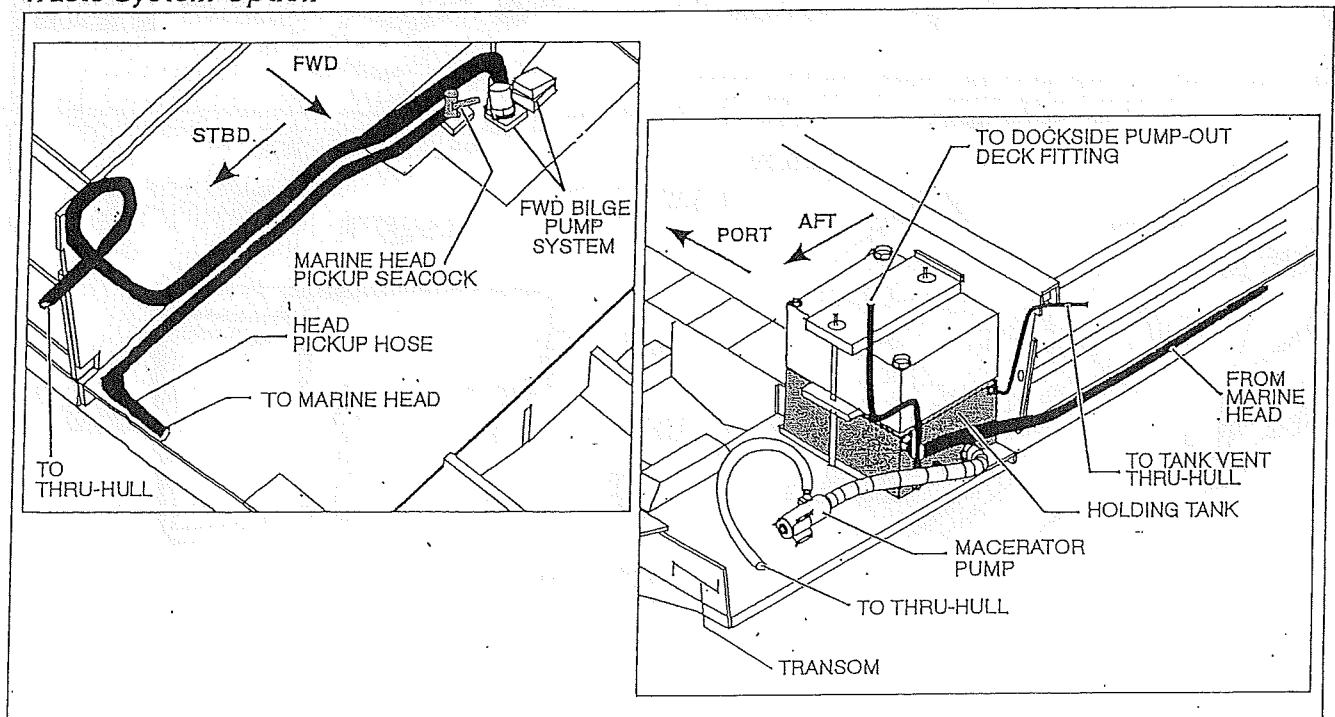


Air Conditioning Option

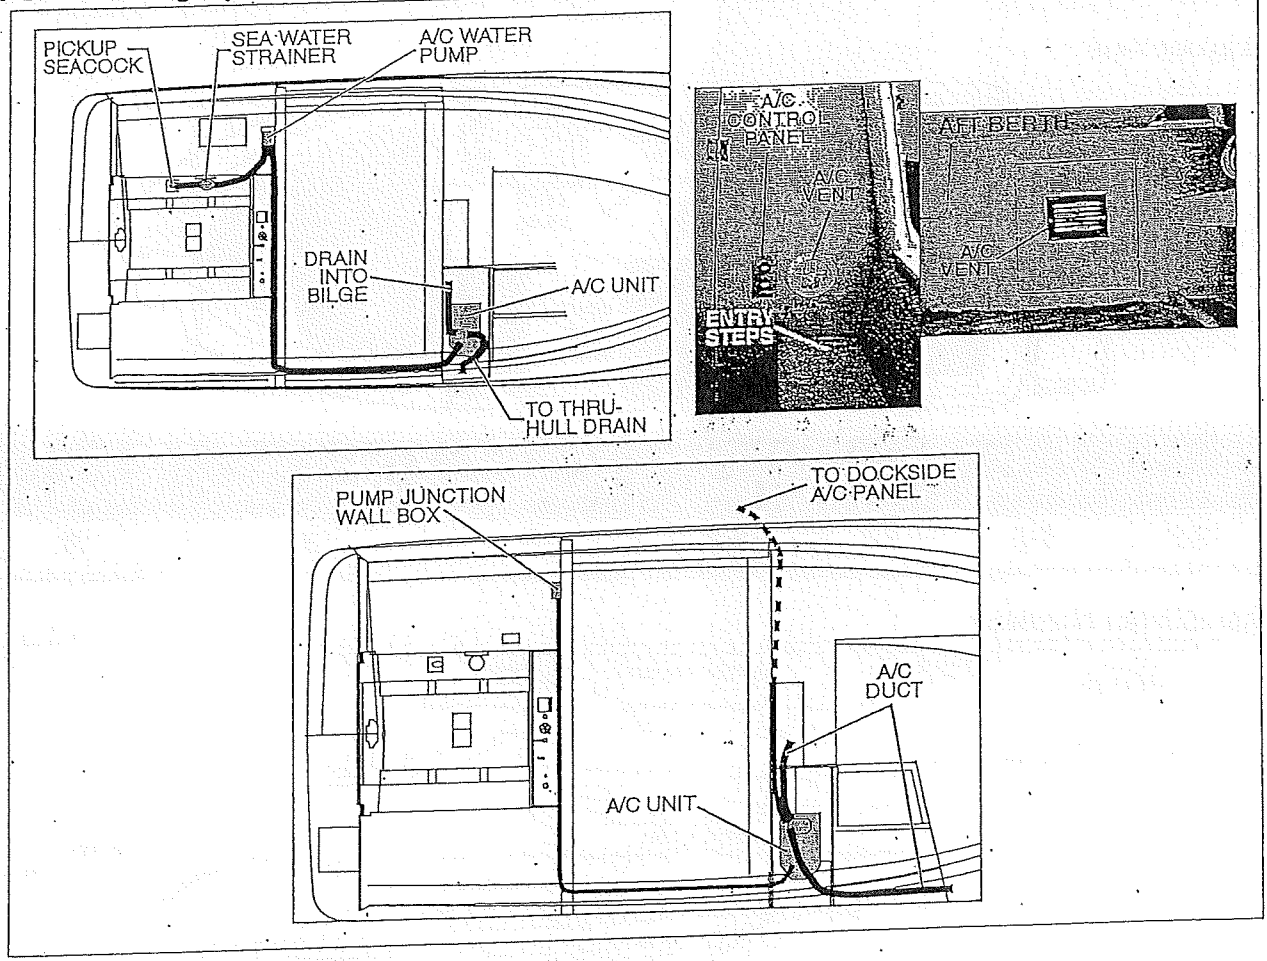


2452 Express (CD)

Layout View

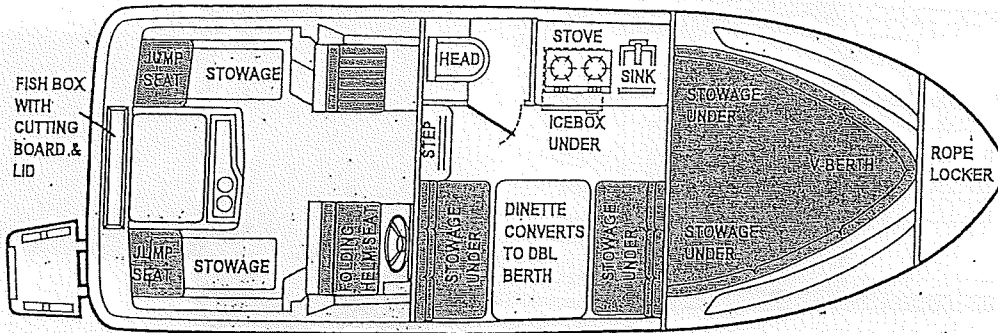


Overall Length	Bridge Clearance	Beam	Maximum Draft	Fuel Tank Capacity (gal)	Water Tank Capacity (gal)	Holding Tank Capacity (gal)
23' 5"	8' 4"	8' 4"	2' 11"	78	20	78


Hull Exterior Hardware

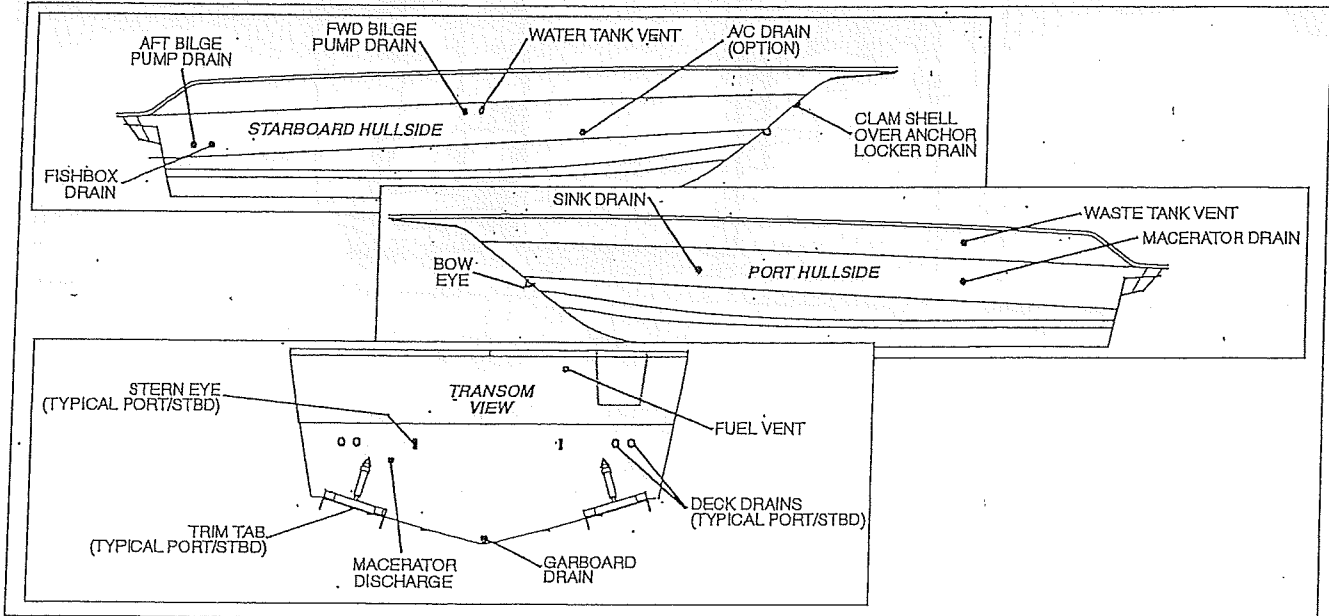


Air Conditioning Option

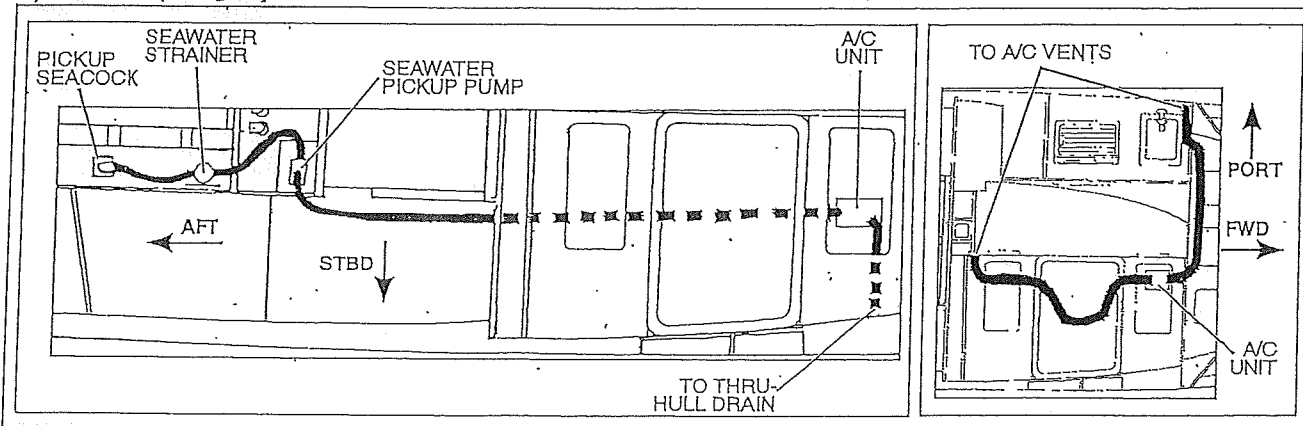


Electrical Routing

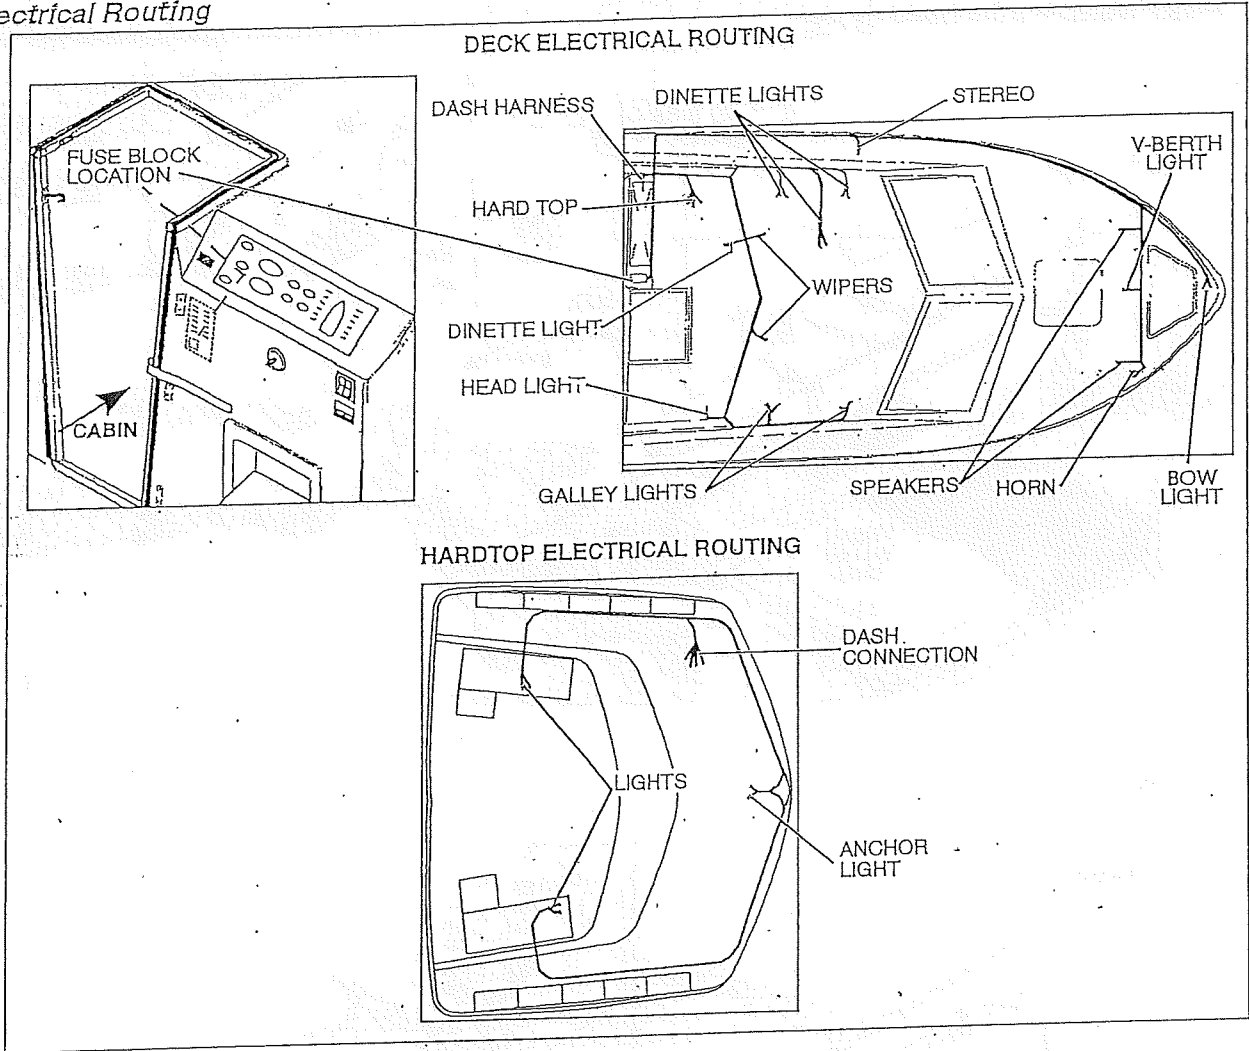


Macerator Option

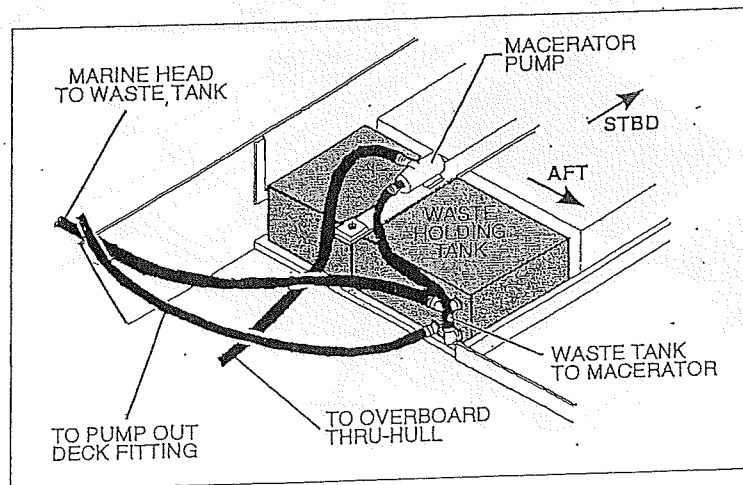

Fresh Water/Marine Head System

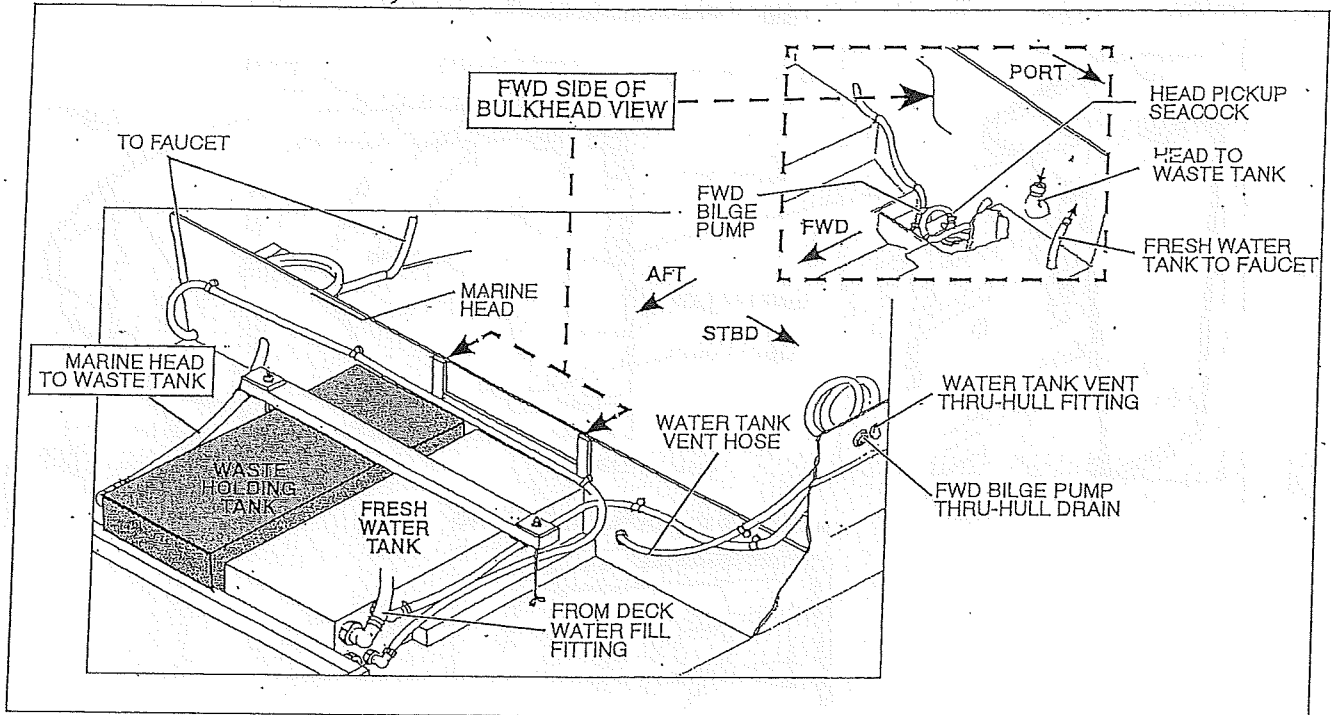


Hot Water System Option

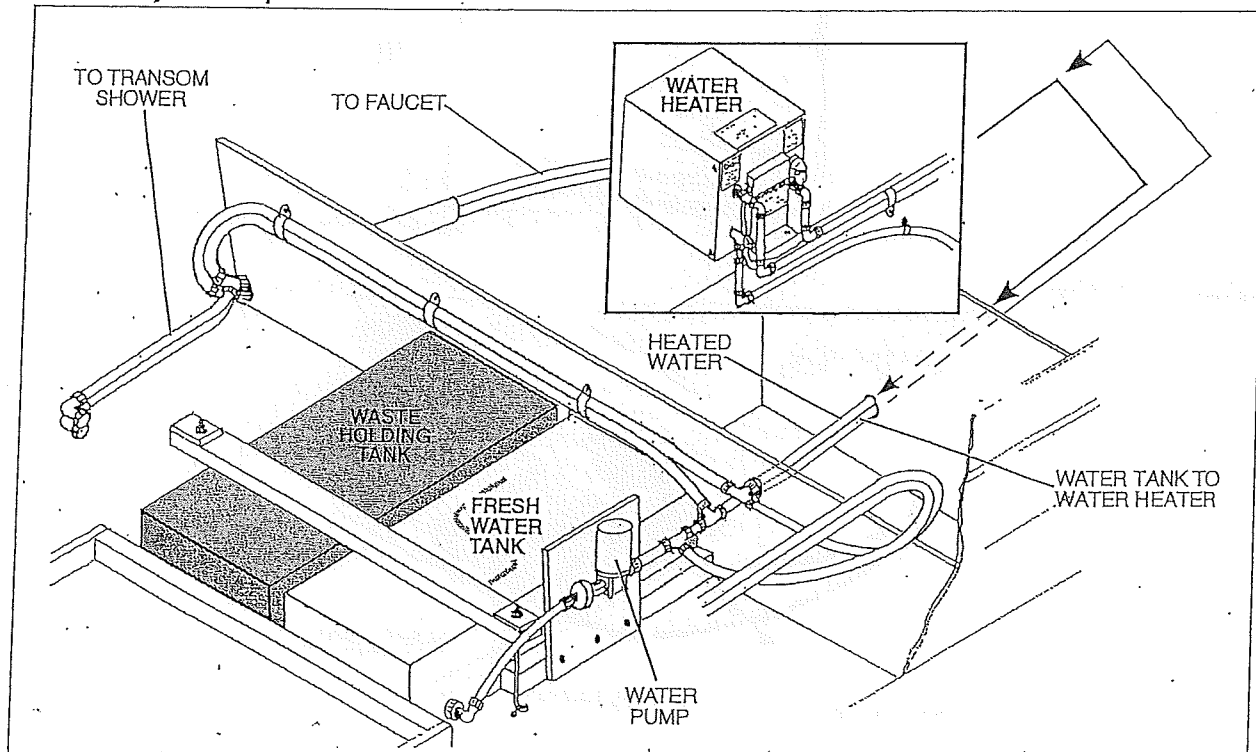


2655 Sunbridge (SB)

Layout View

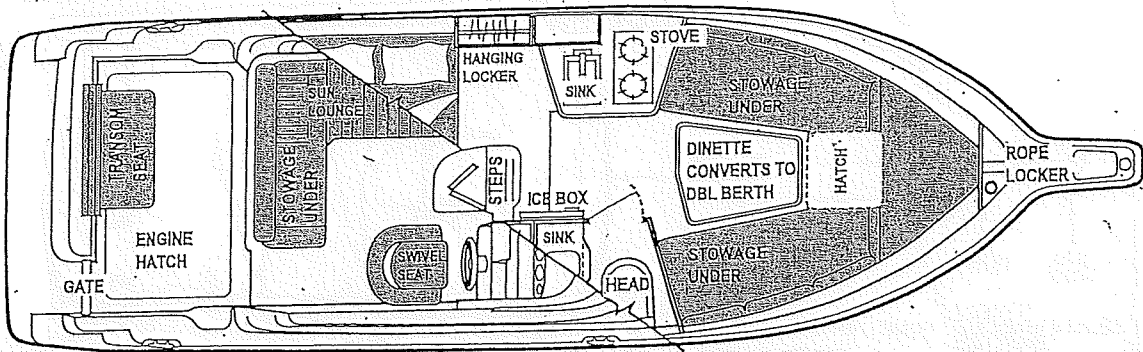


Overall Length	Bridge Clearance	Beam	Maximum Draft	Fuel Tank Capacity (gal)	Water Tank Capacity (gal)	Holding Tank Capacity (gal)
27' 9"	7' 0"	8' 5"	2' 10"	70	27	13


Hull Exterior Hardware

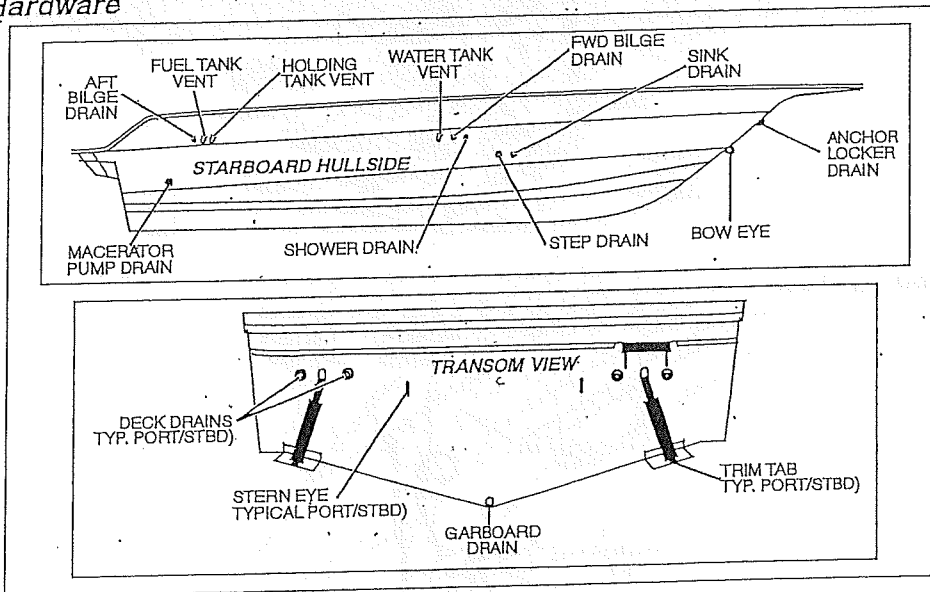


Hull Electrical Routing

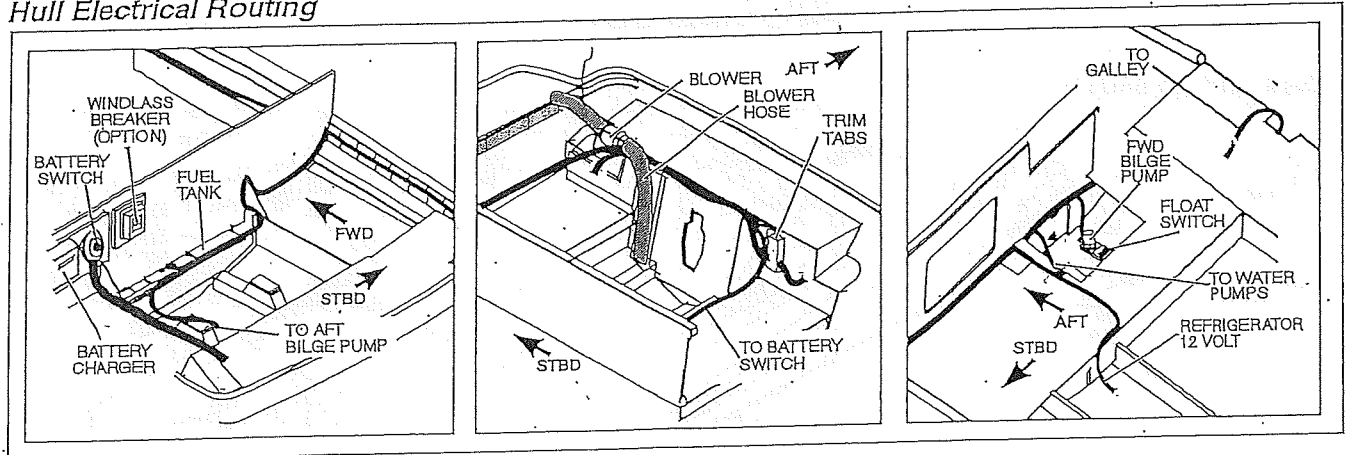


Deck Electrical Routing

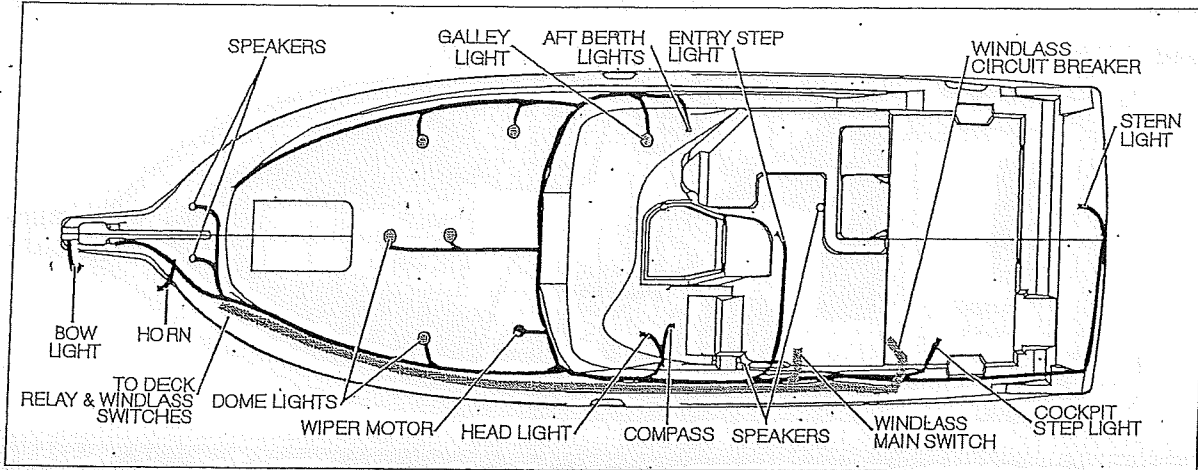


Galley Details

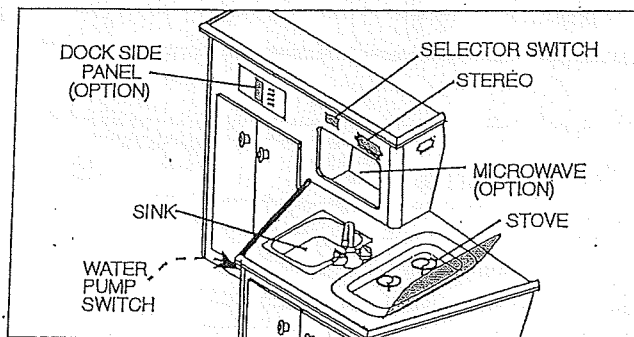

Marine Head Holding Tank

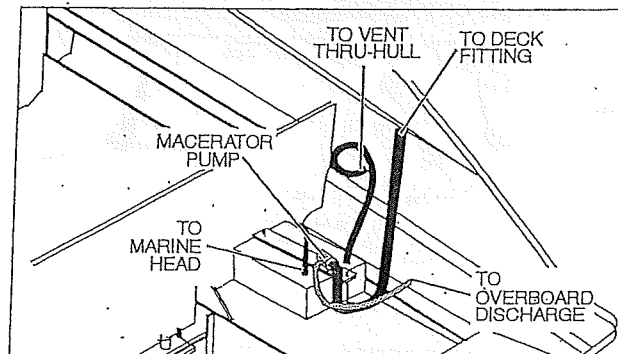


Deck Fittings and Drains

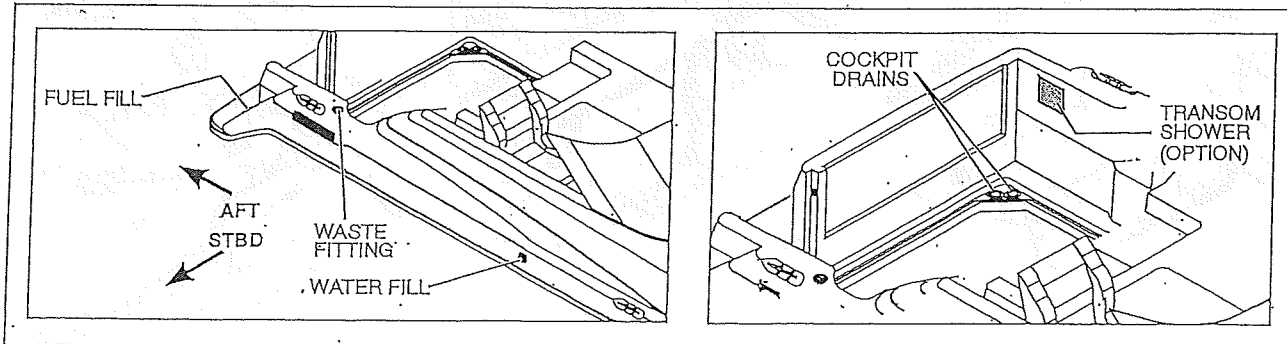


2855 Sunbridge (ST)

Layout View

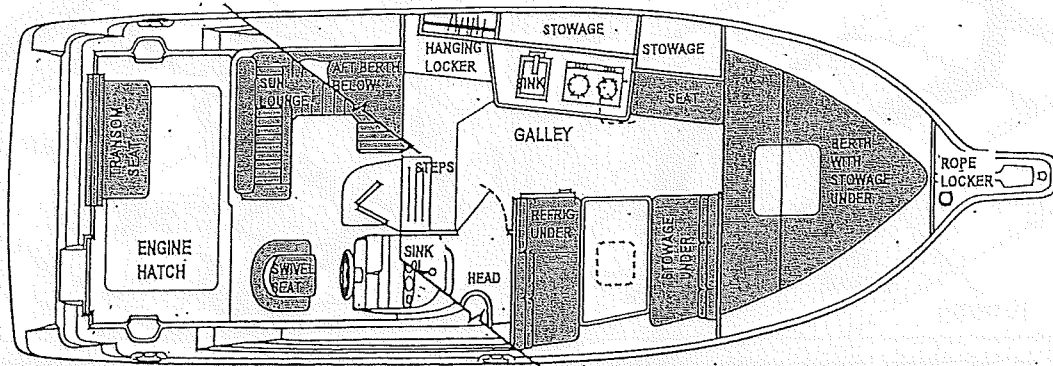


Overall Length	Bridge Clearance	Beam	Maximum Draft	Fuel Tank Capacity (gal)	Water Tank Capacity (gal)	Holding Tank Capacity (gal)
30'3"	7'5"	9'7"	3'1"	109	33	13


Hull Exterior Hardware

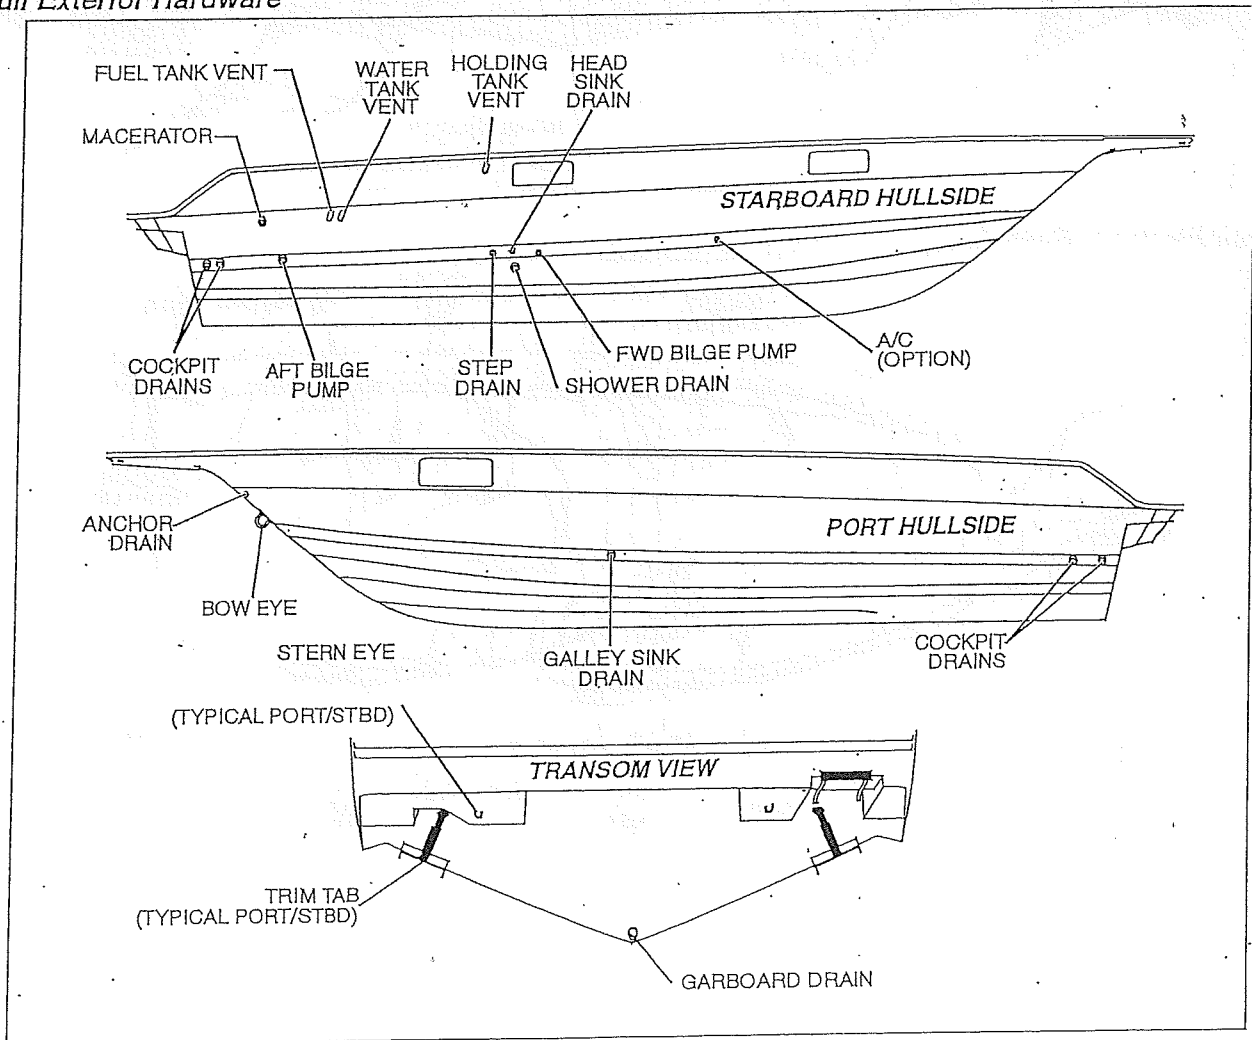


Hull Electrical Routing

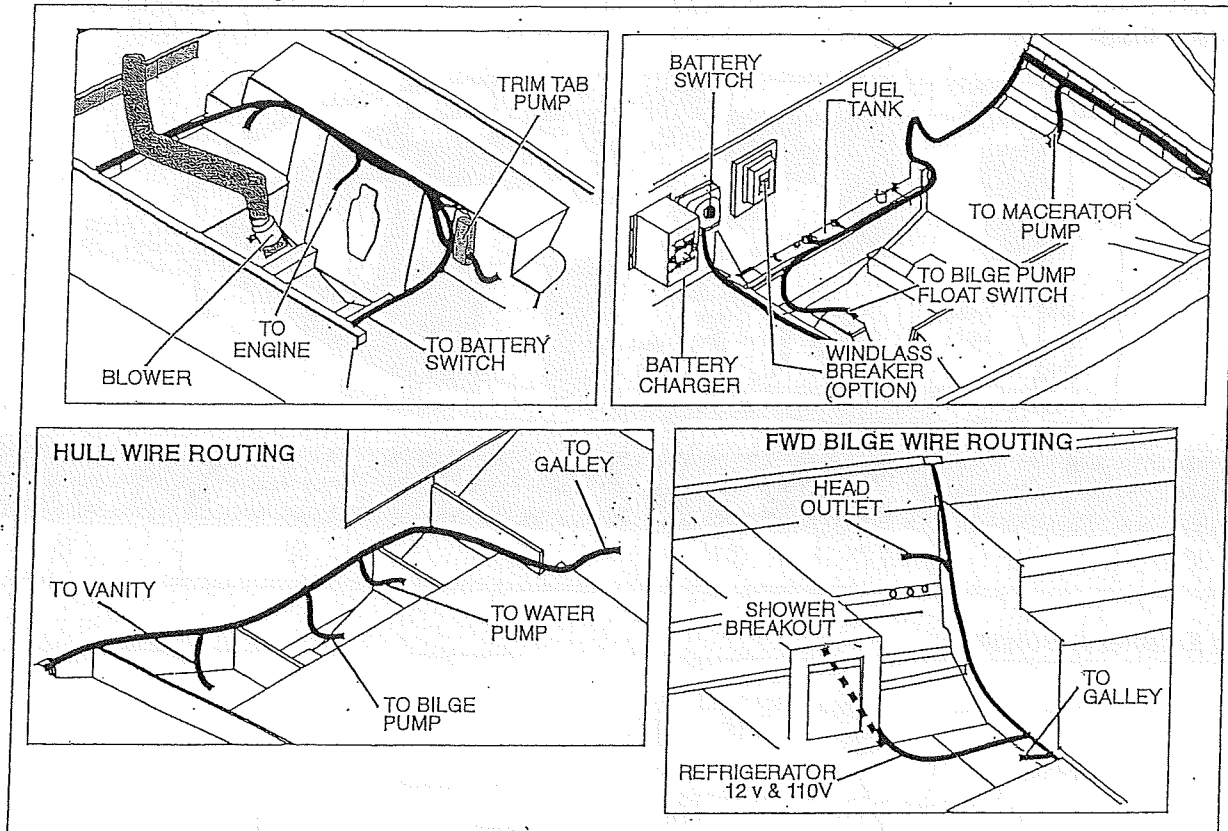


Deck Electrical System

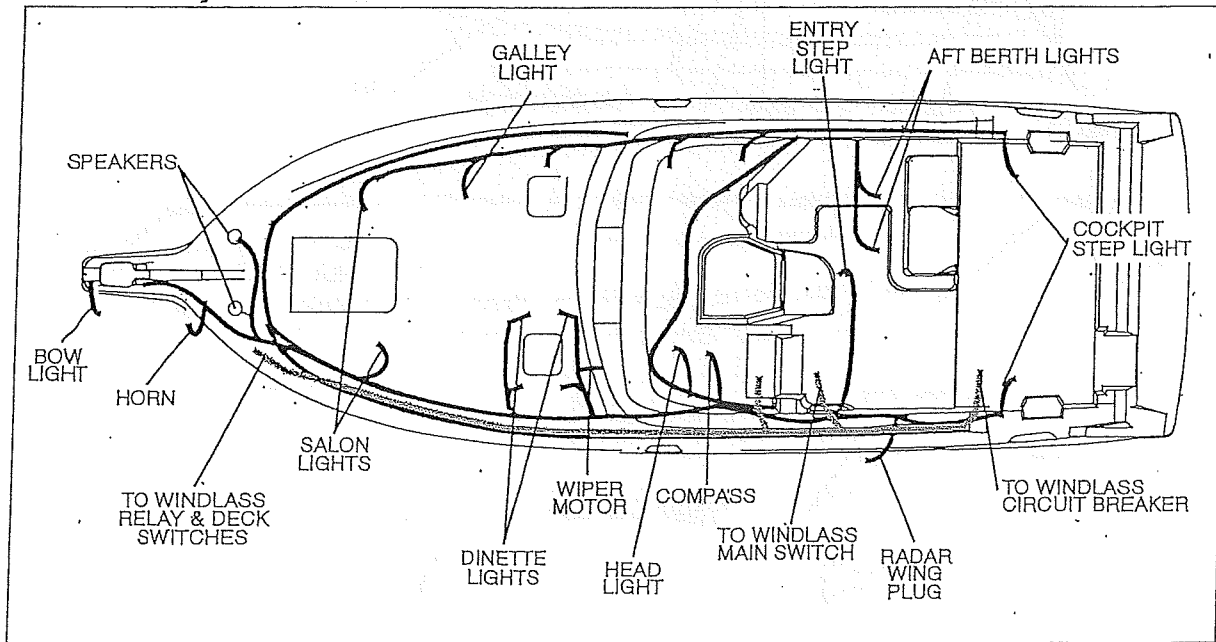


Helm Area

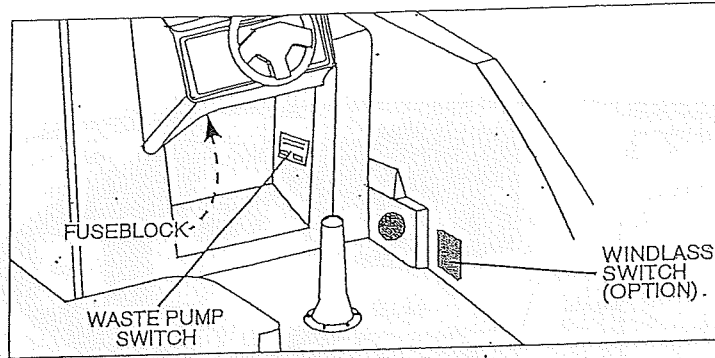


Air Conditioning System

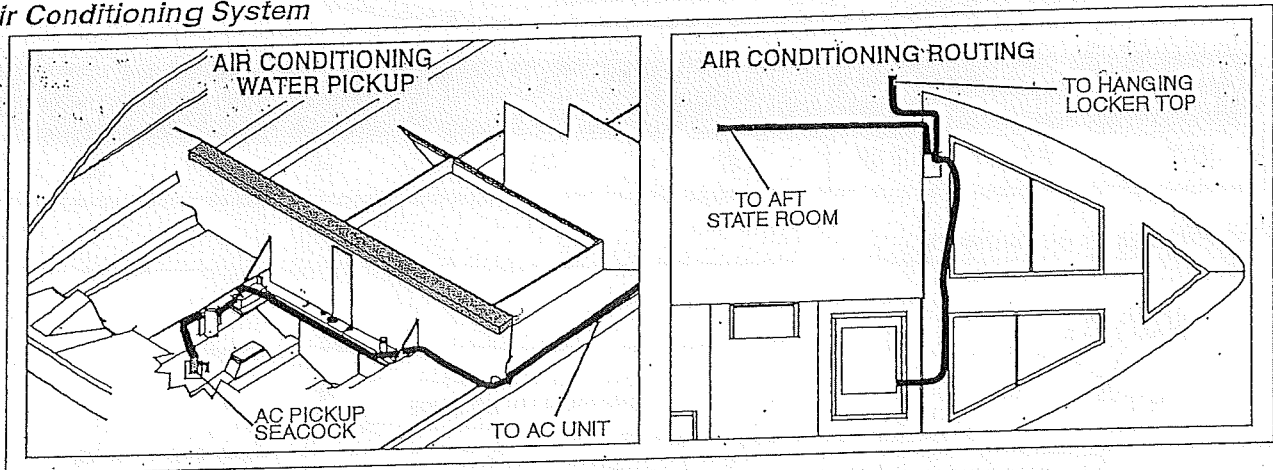

Freshwater System

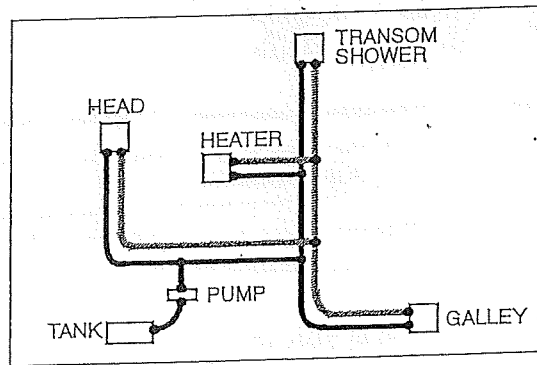


Marine Head System and Waste Fitting

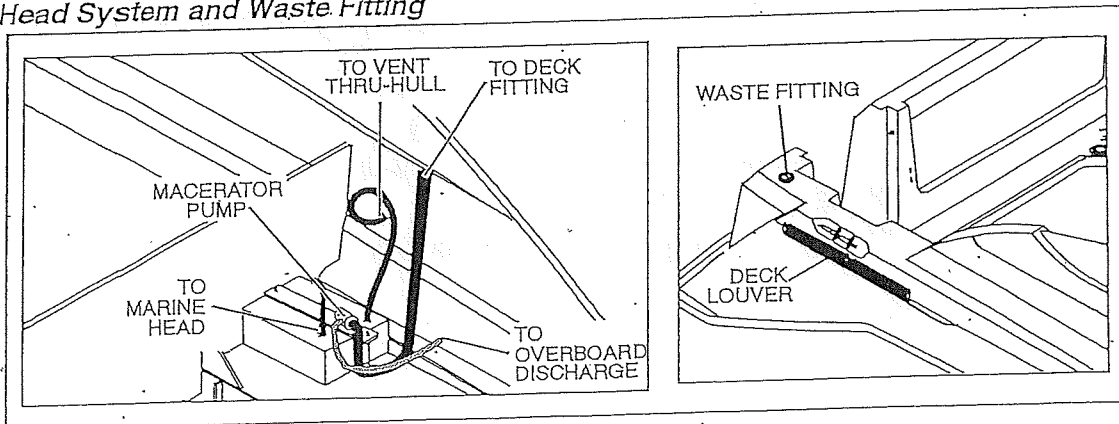


2858 Command Bridge (EC)

Layout View


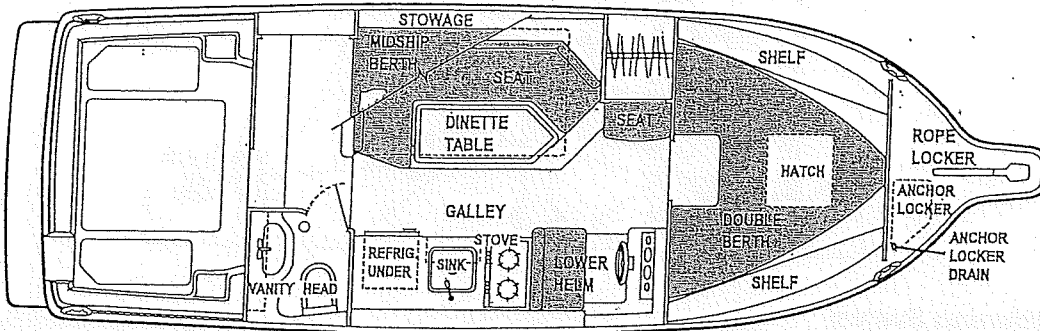


Overall Length	Bridge Clearance	Beam	Maximum Draft	Fuel Tank Capacity (gal)	Water Tank Capacity (gal)	Holding Tank Capacity (gal)
30' 6"	9' 3"	9' 10"	3' 6"	113	34	26


Hull Fittings and Hardware

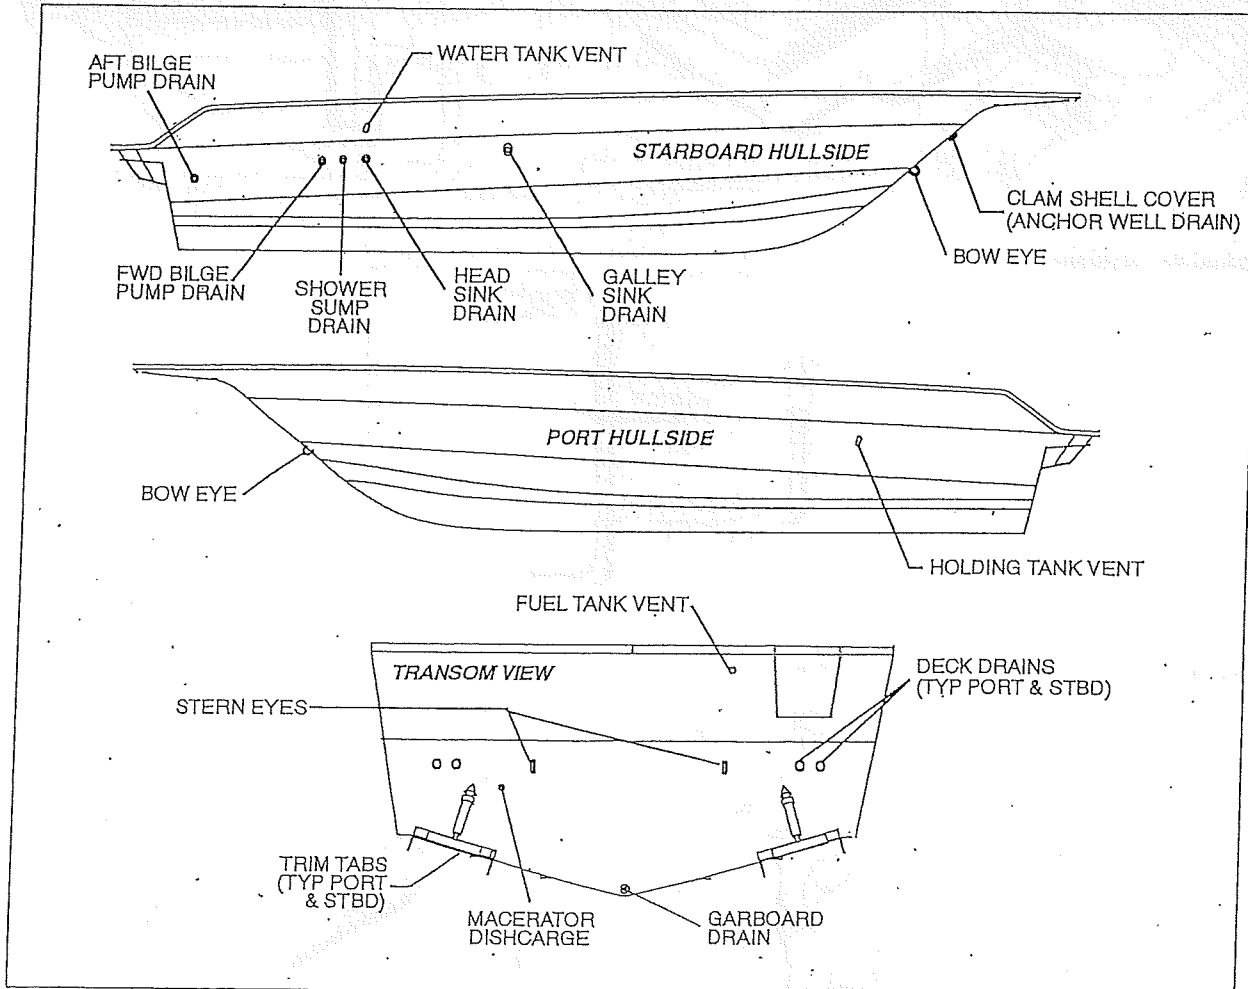


12 Volt DC Wire Routing

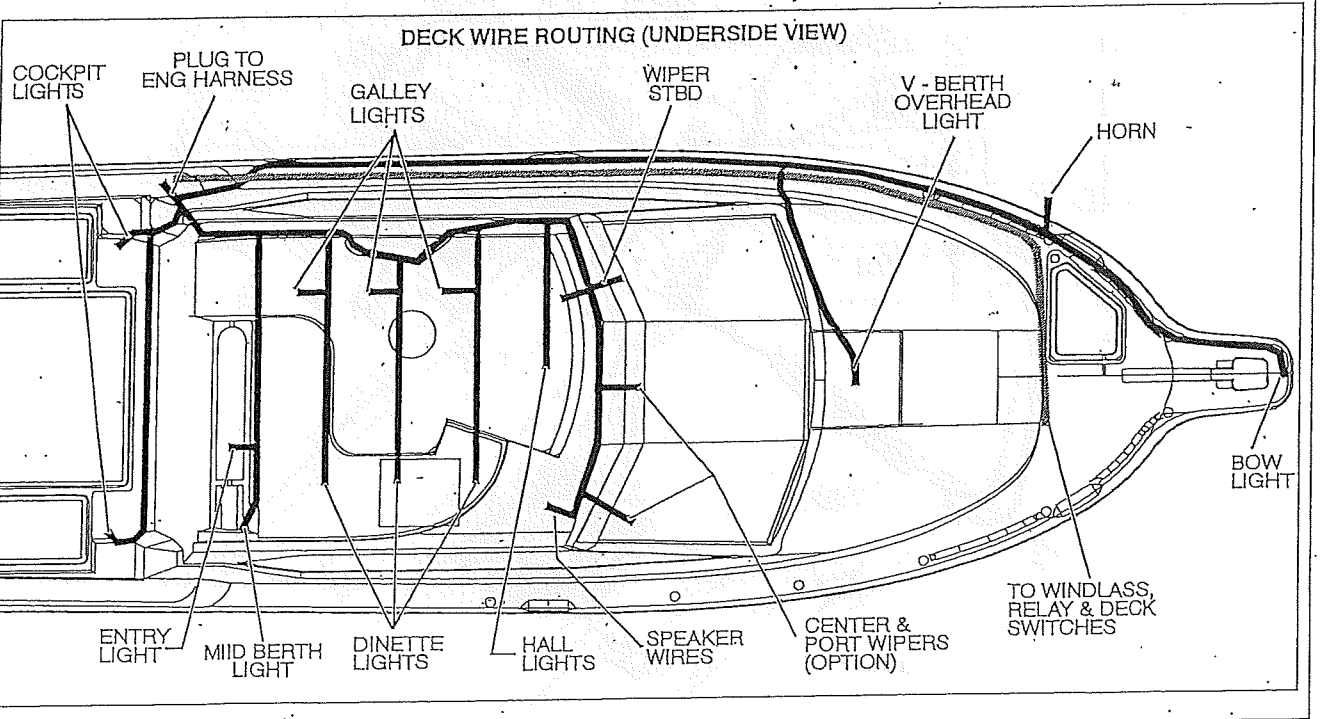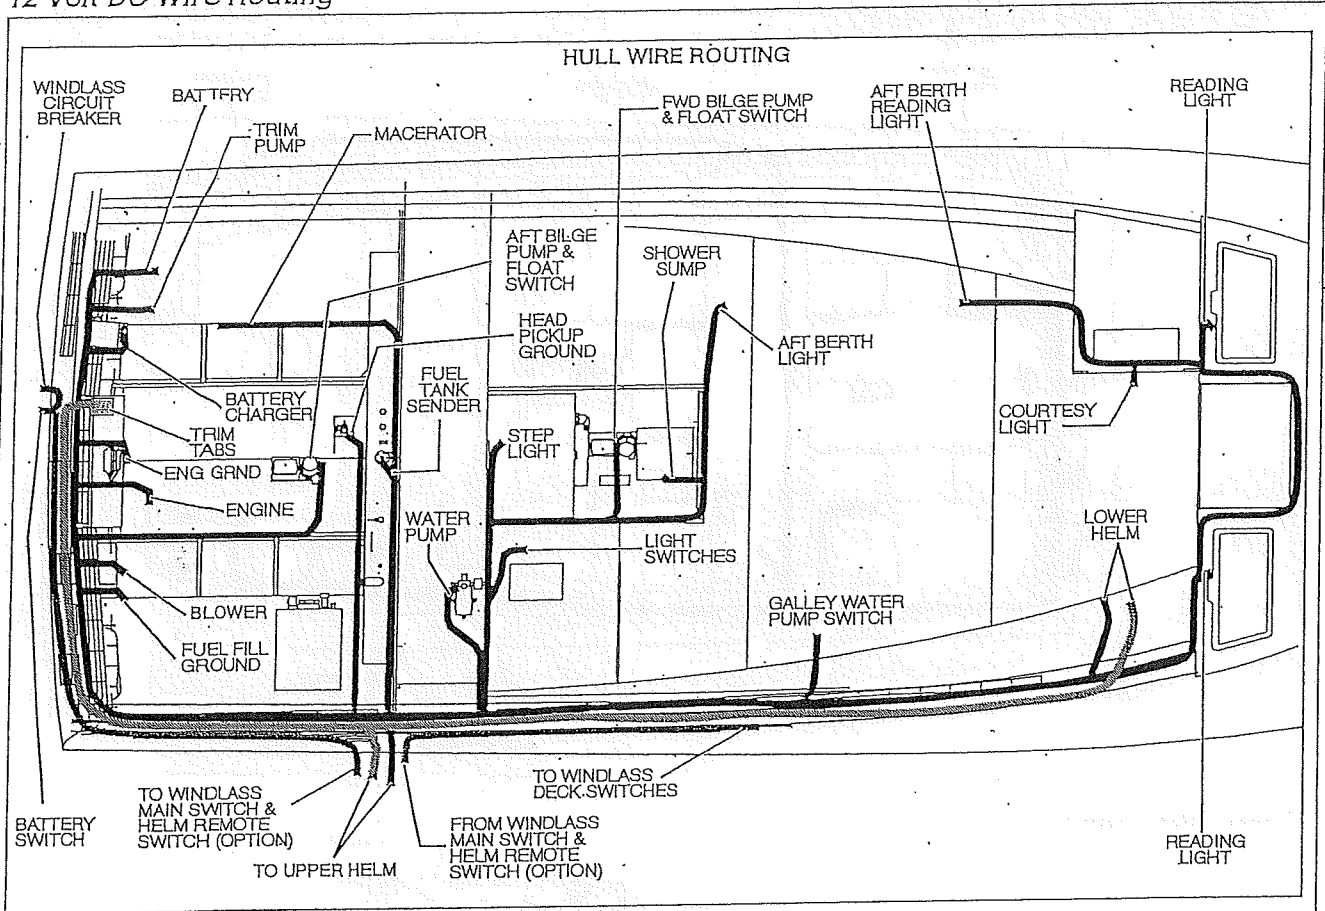


110 Volt AC Wire Routing (Romex)

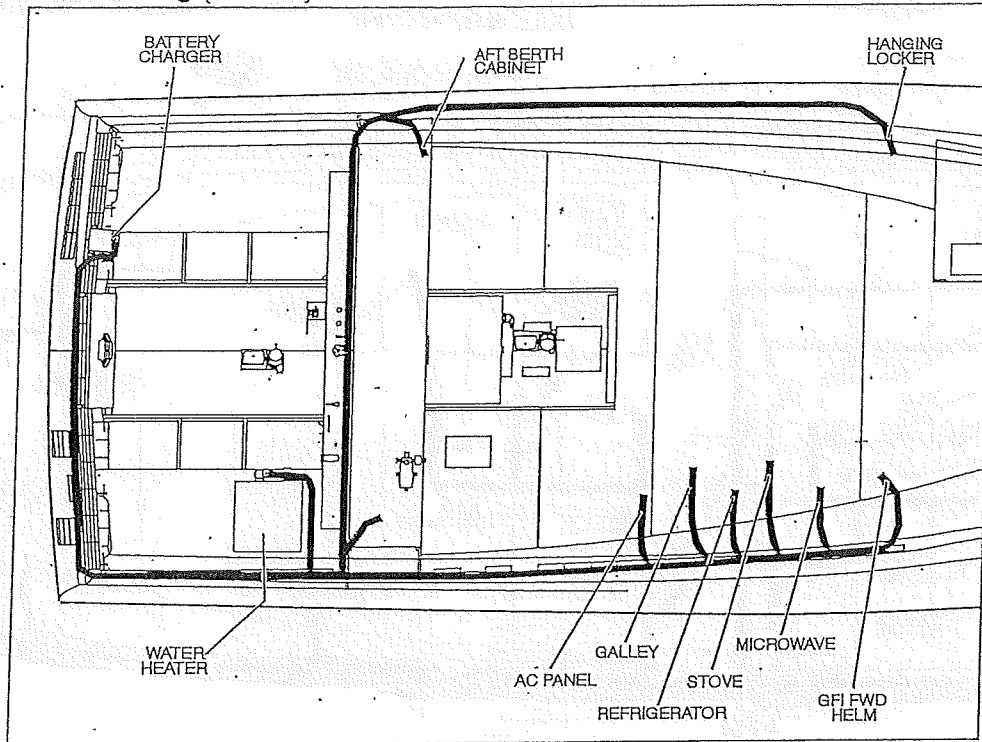


Fresh Water System

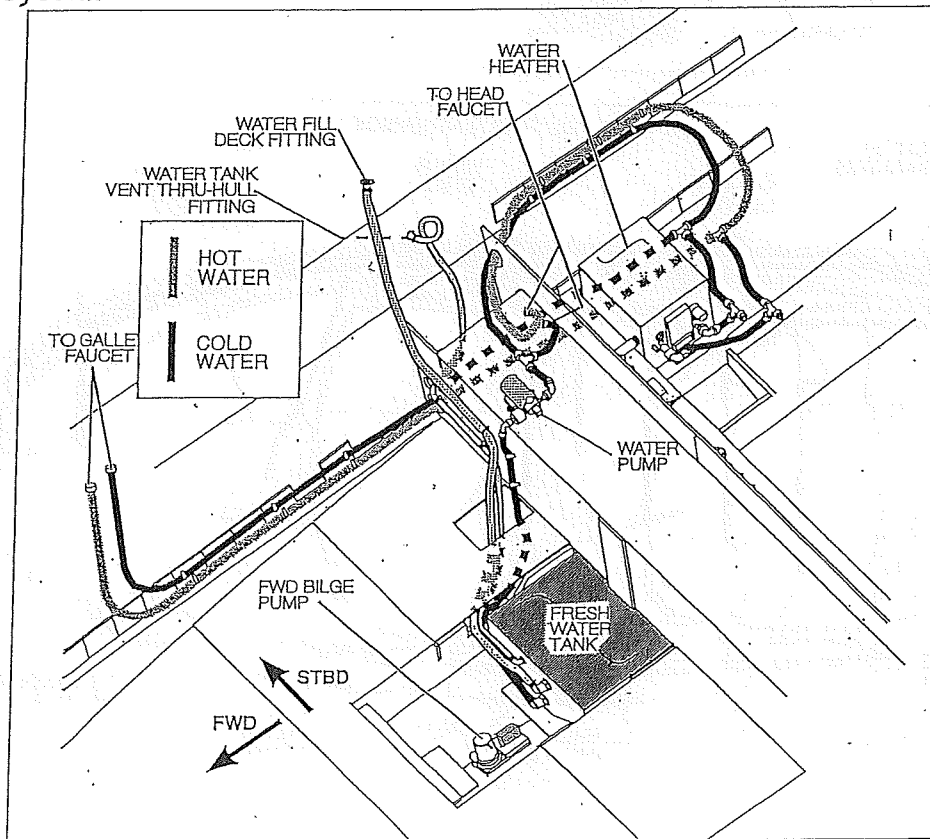


A/C Hose Routing (OAB)

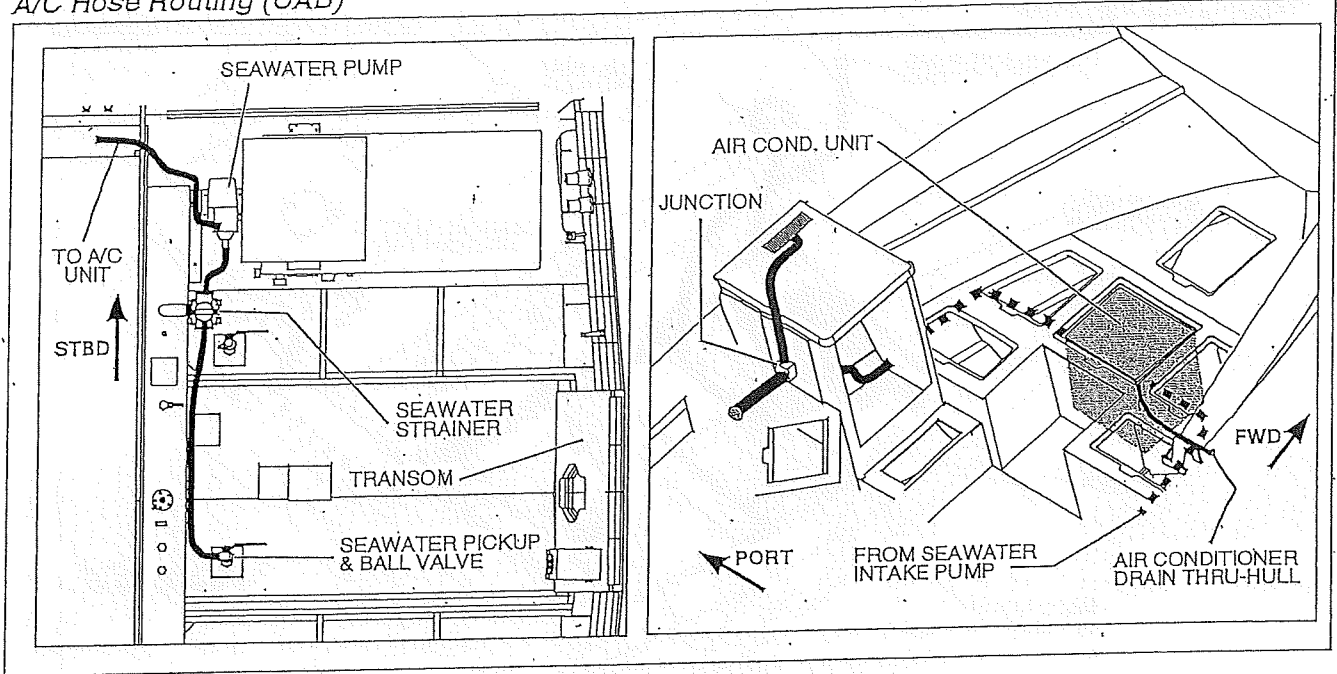


Shower Drain System

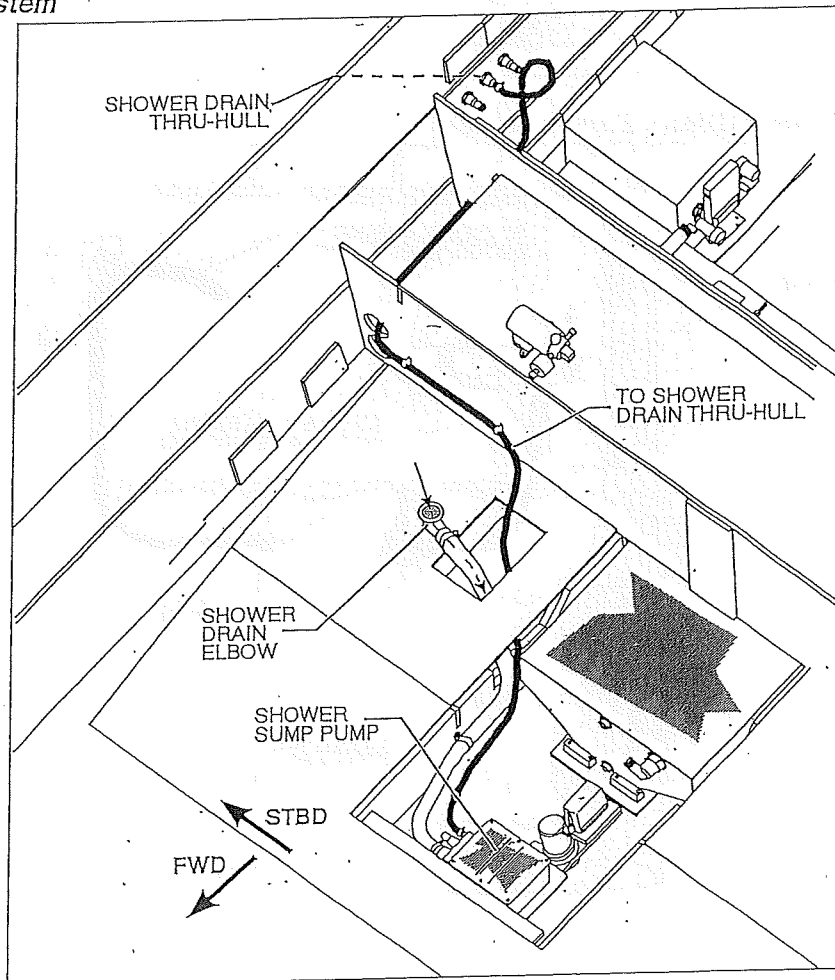

Marine Head System

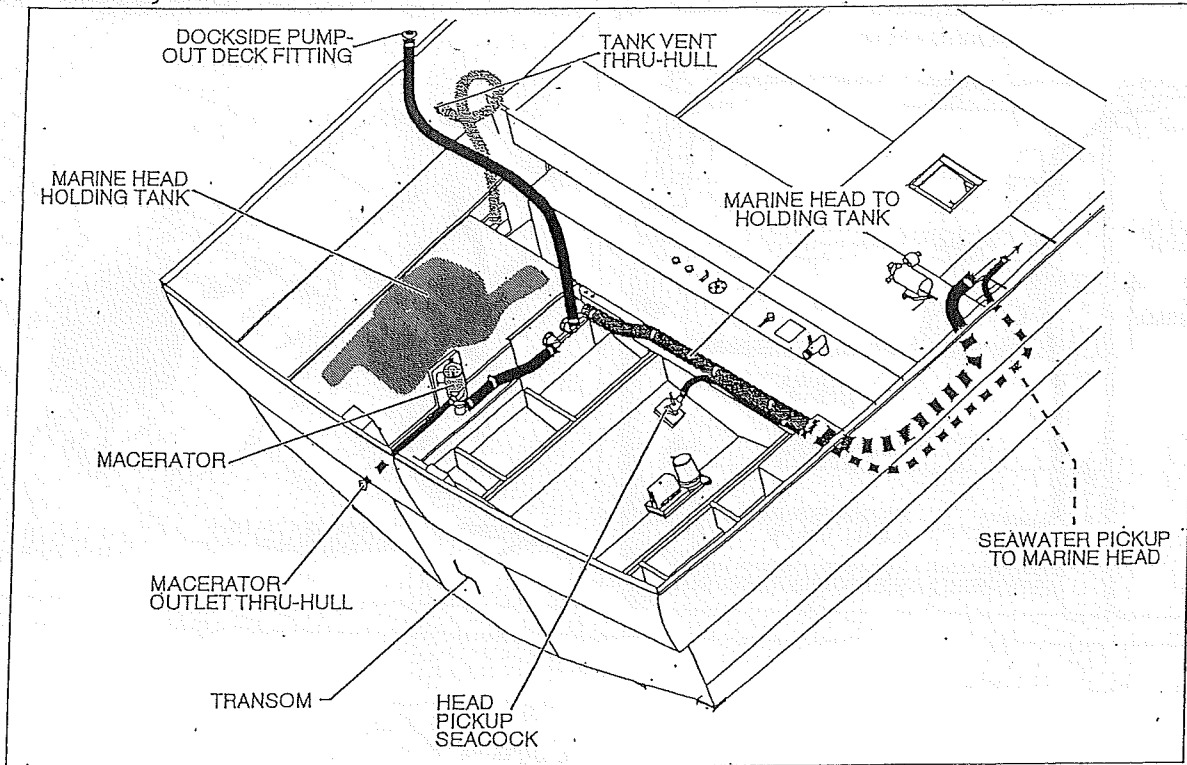


Seawater Pickup System (Diesel Engine Option)

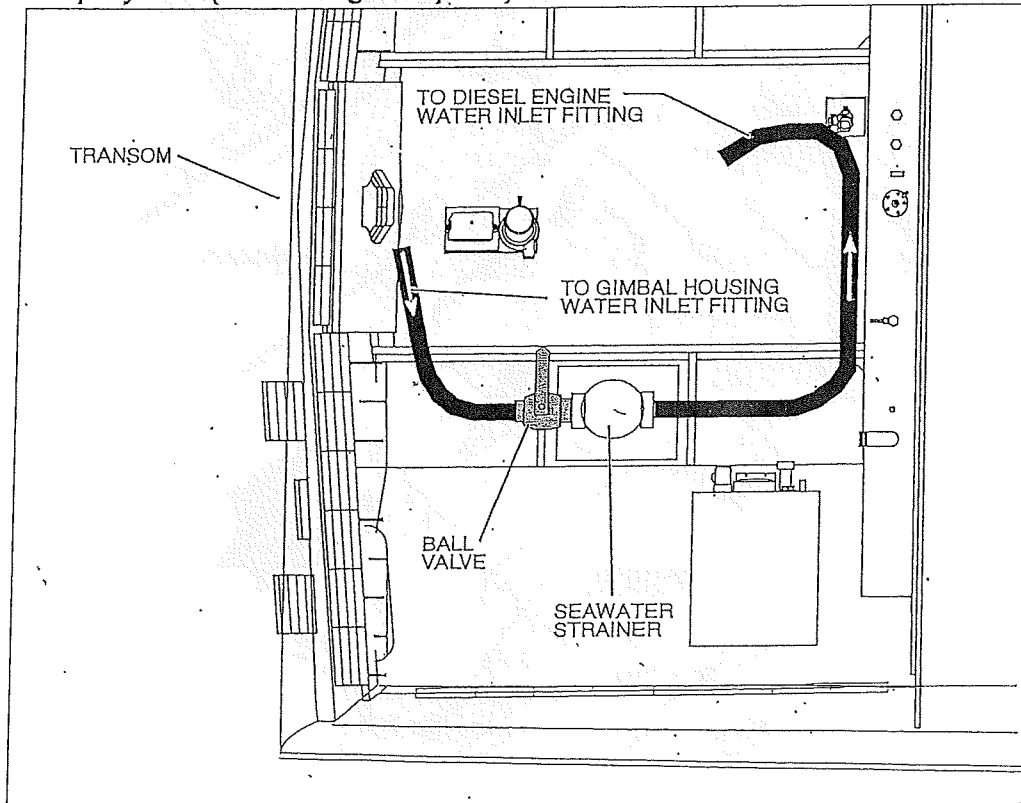


2859 Express (SC)

Layout View

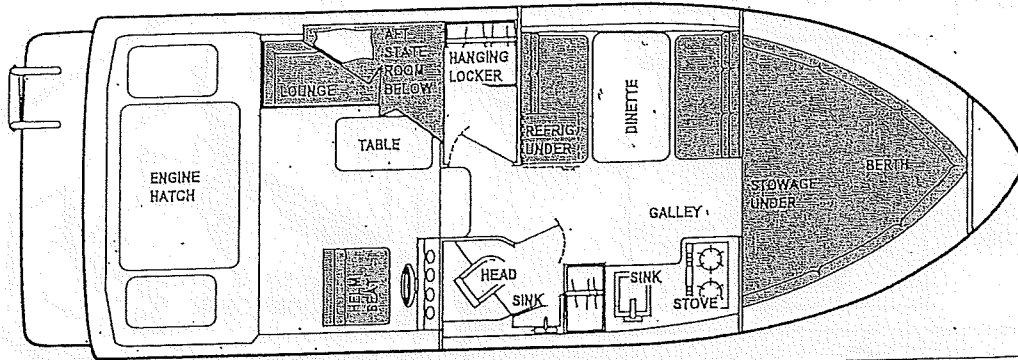


Overall Length	Bridge Clearance	Beam	Maximum Draft	Fuel Capacity (gal)	Water Tank Capacity (gal)	Holding Tank Capacity (gal)
27' 8"	9' 1"	9' 9"	3' 0"	102	36	30


Hull Exterior Hardware

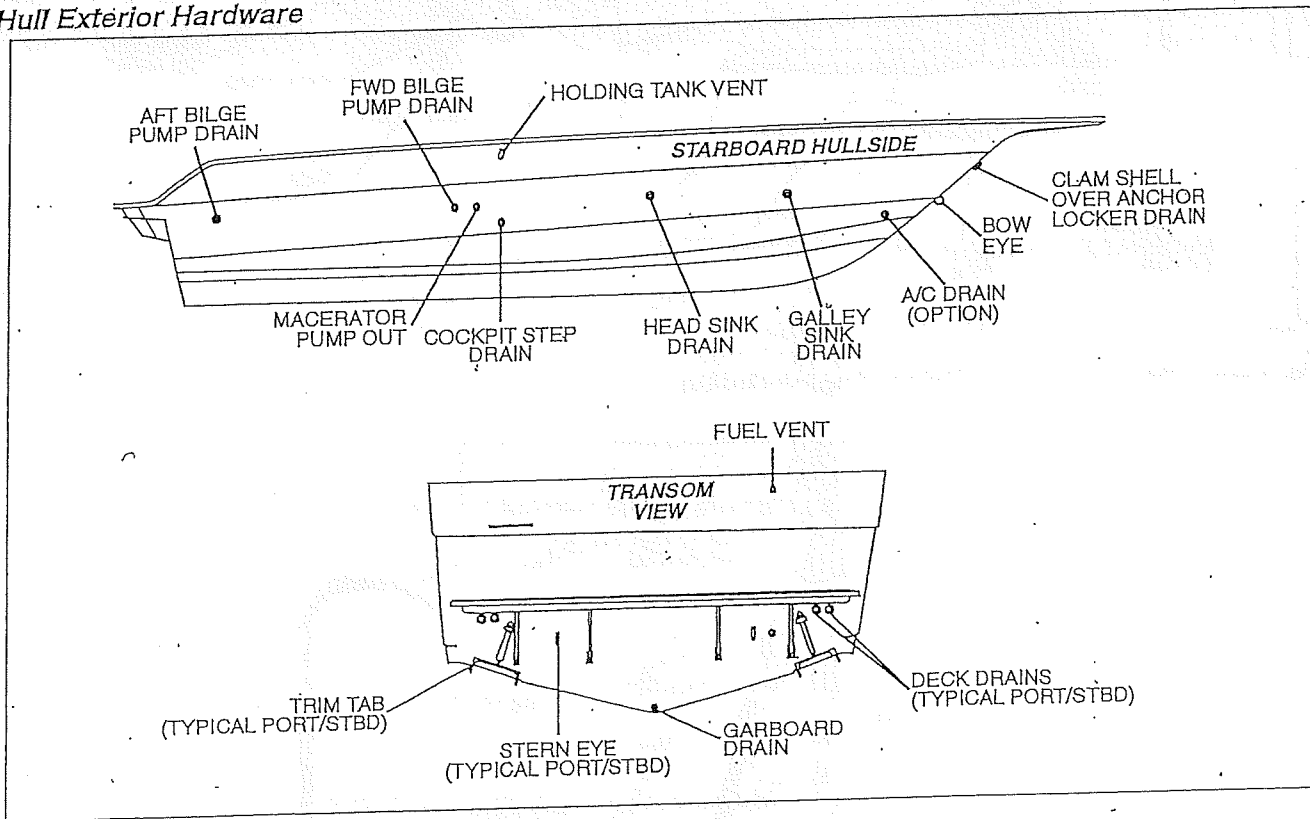


Marine Head System

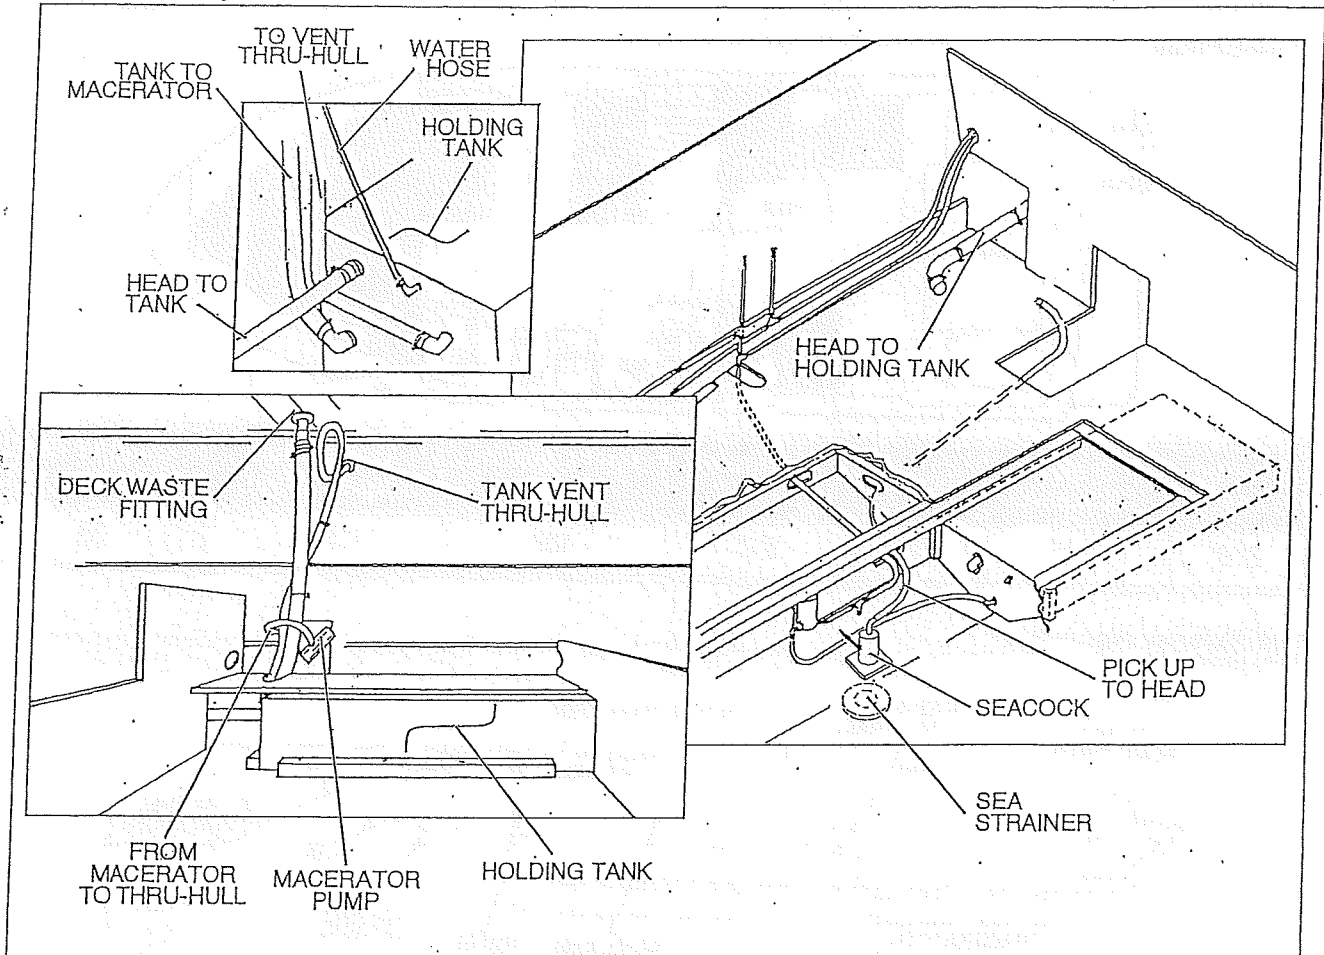


Seawater Pickup System (Diesel Engine Option)

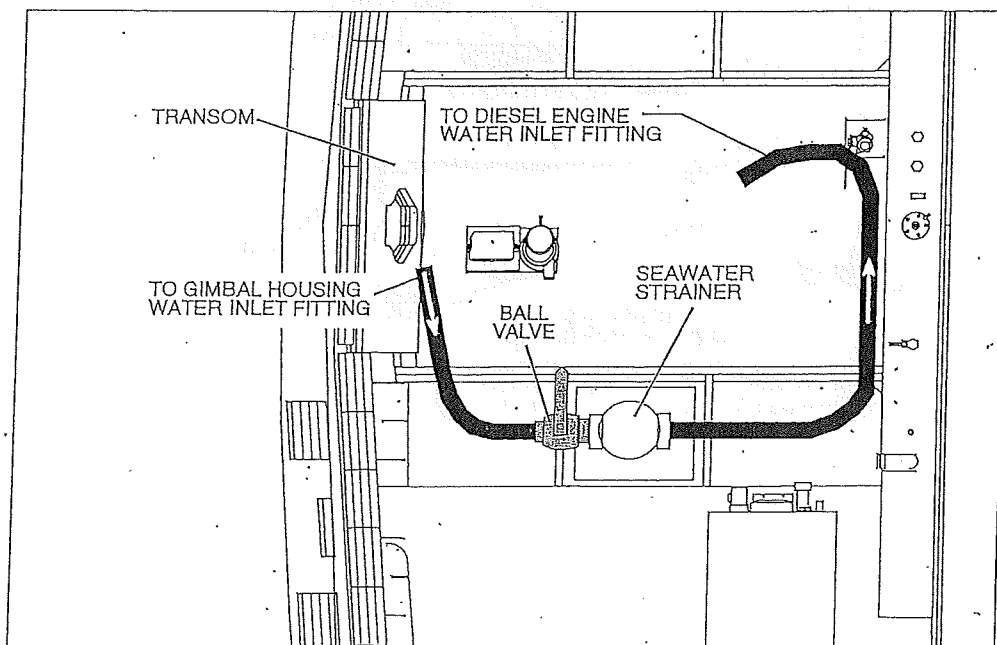


Shower Drain System

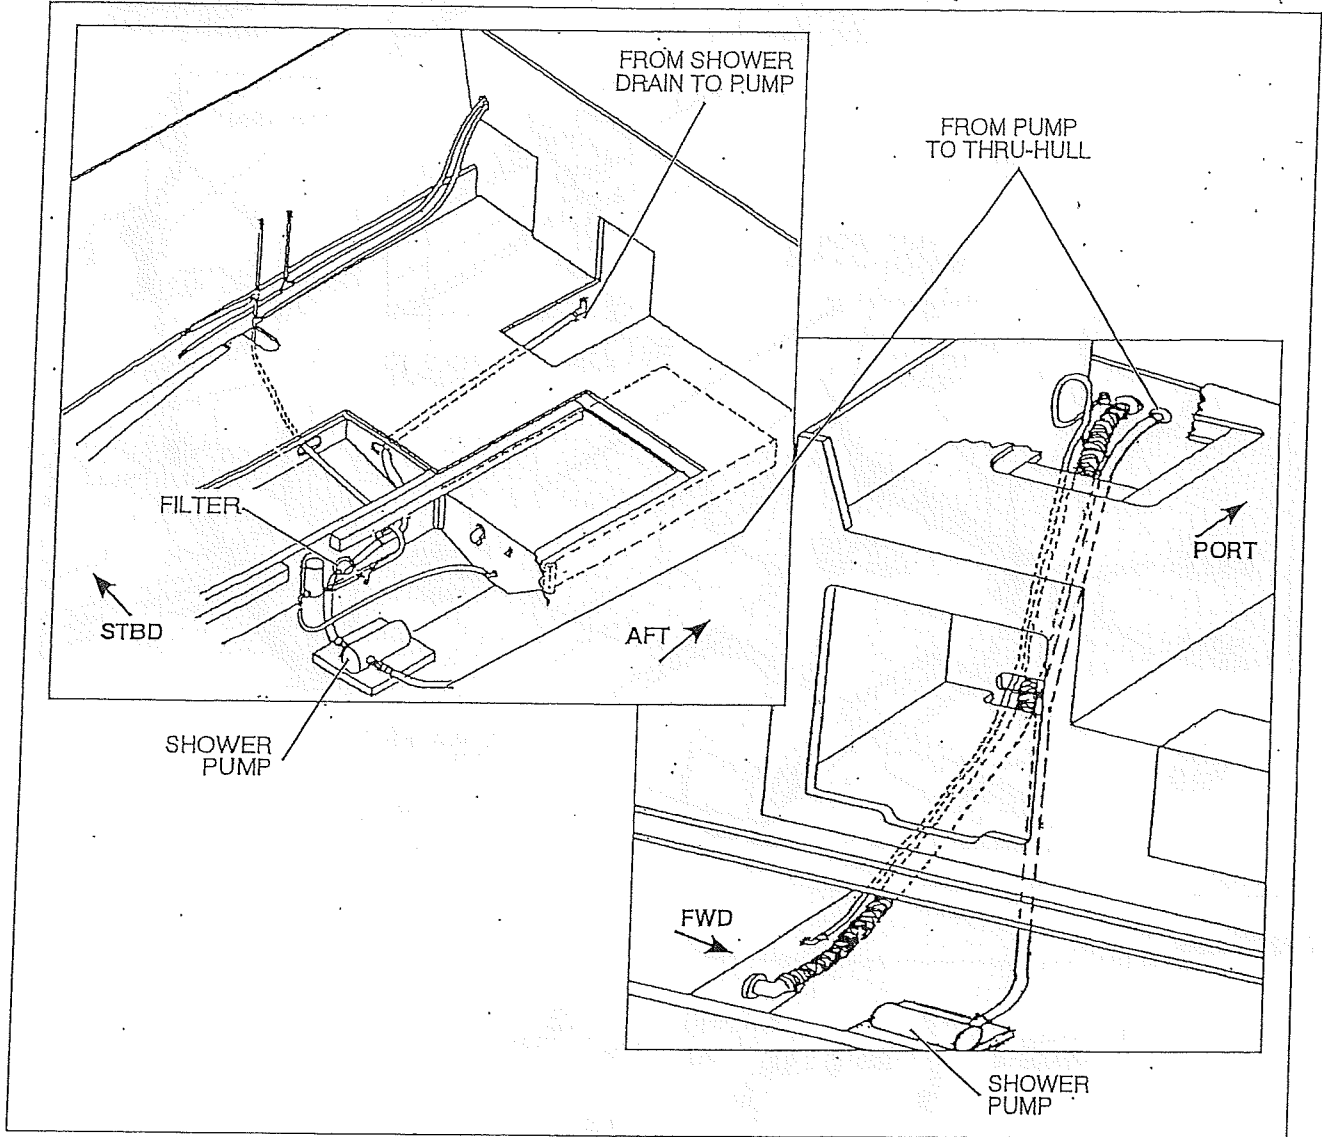


Galley Sink Drain

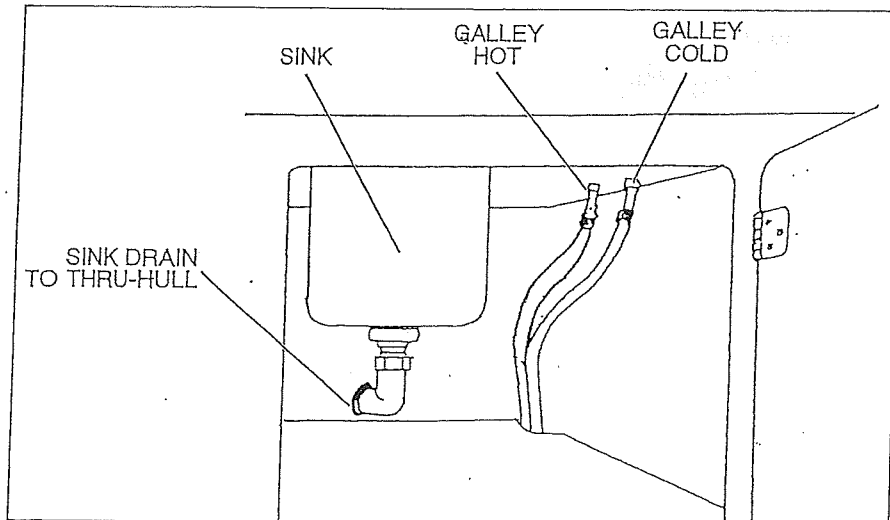


Deck 12 Volt DC Wire Routing

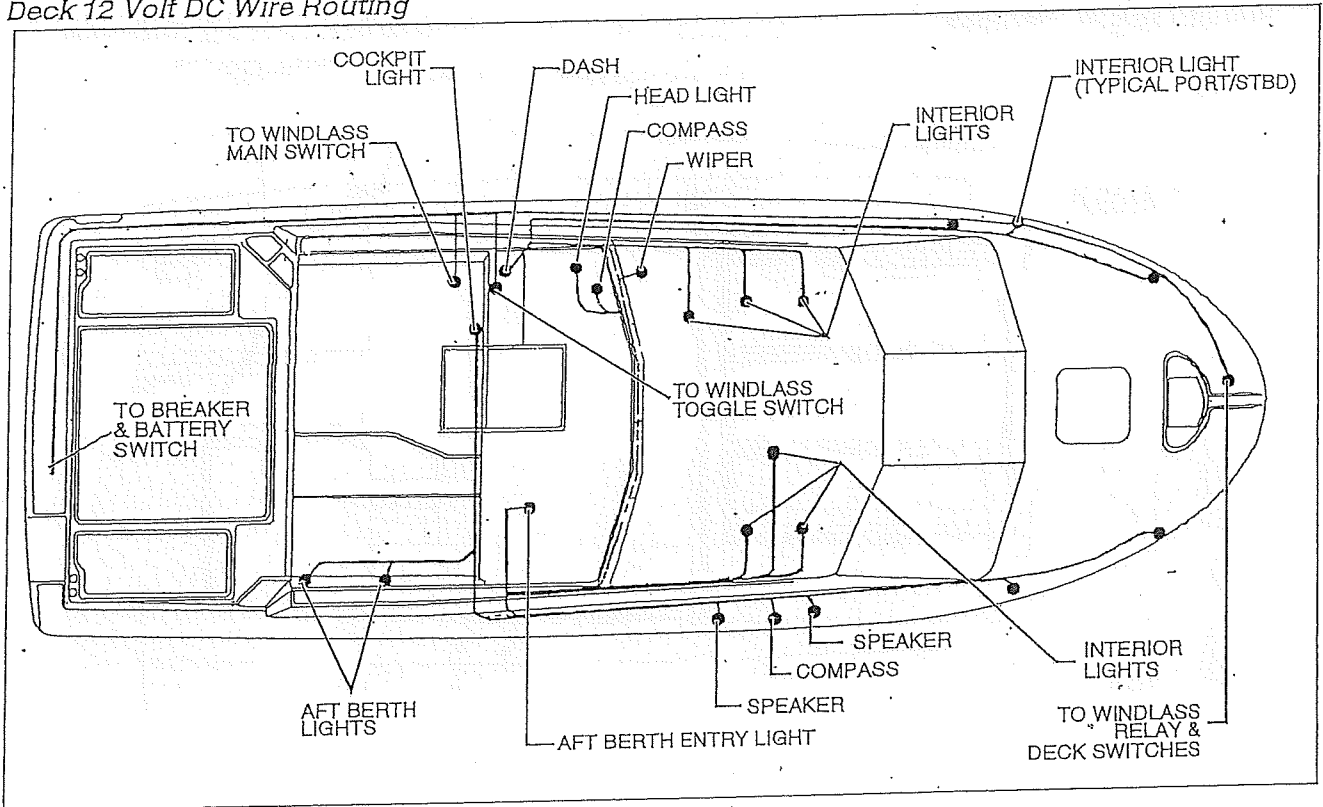


Hull 12 Volt DC Wire Harness

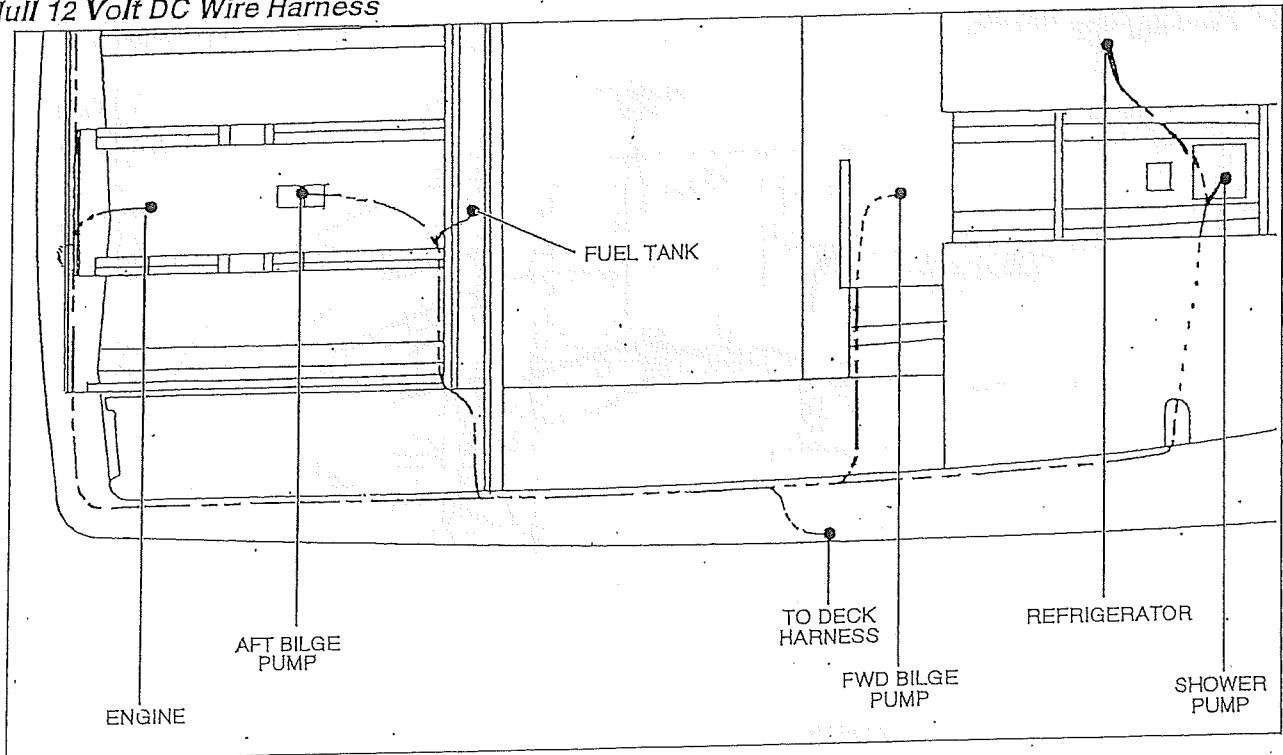


Hull 110 Volt AC Harness

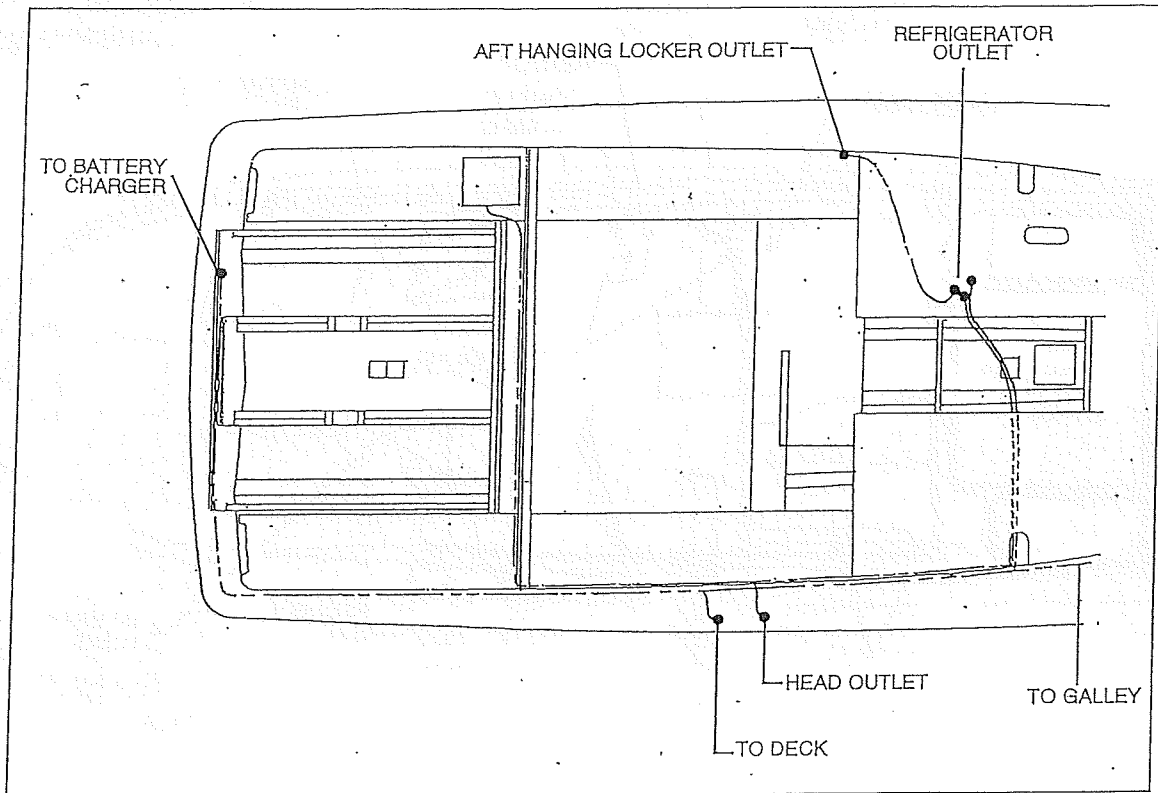


Air Conditioning Routing

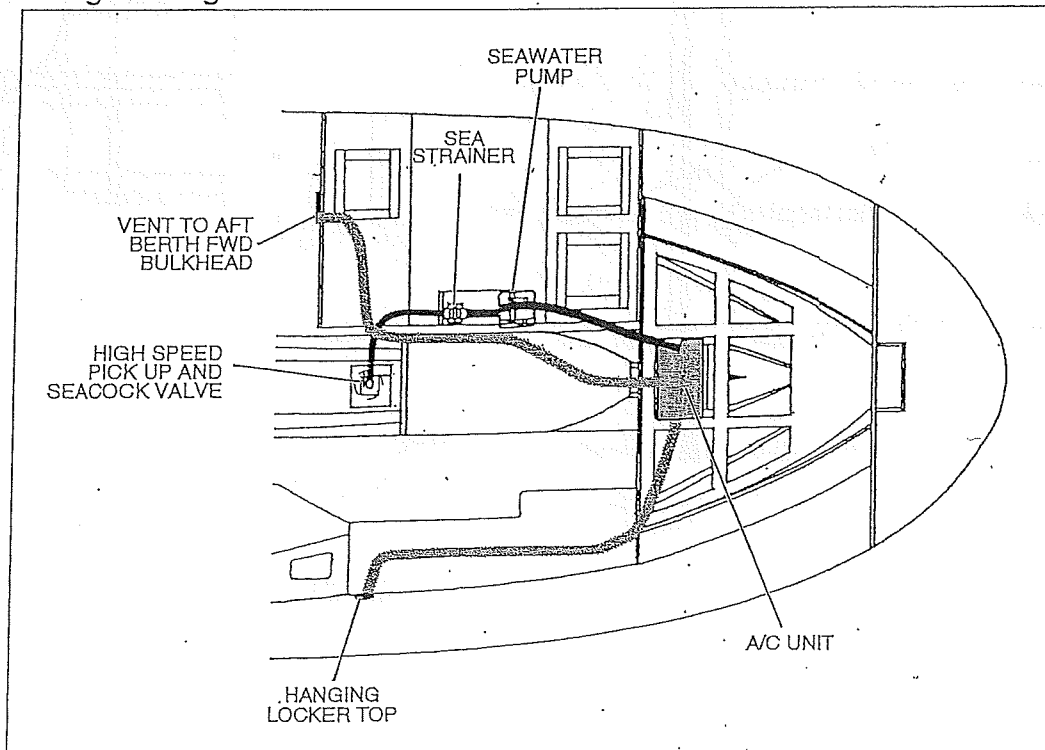

Helm Area

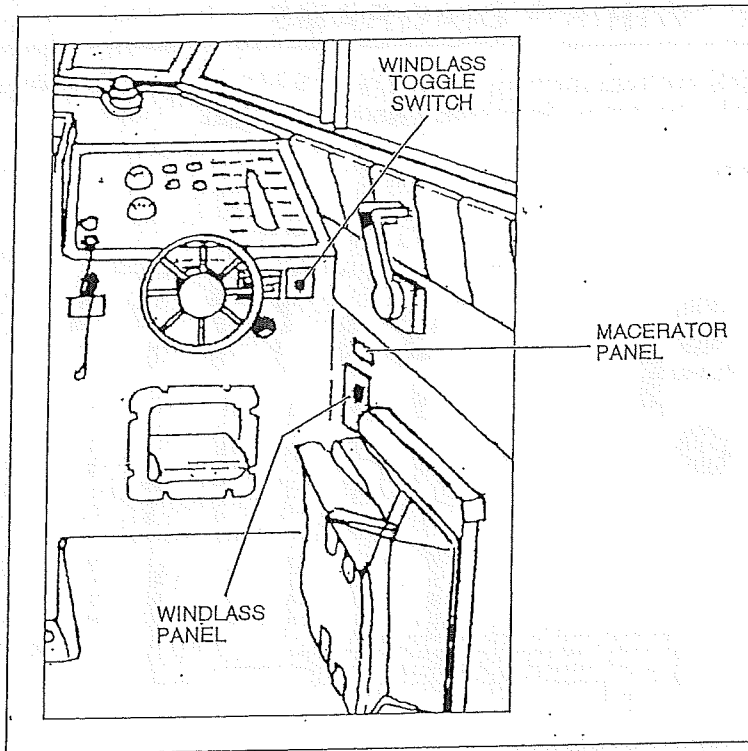


Fuel System

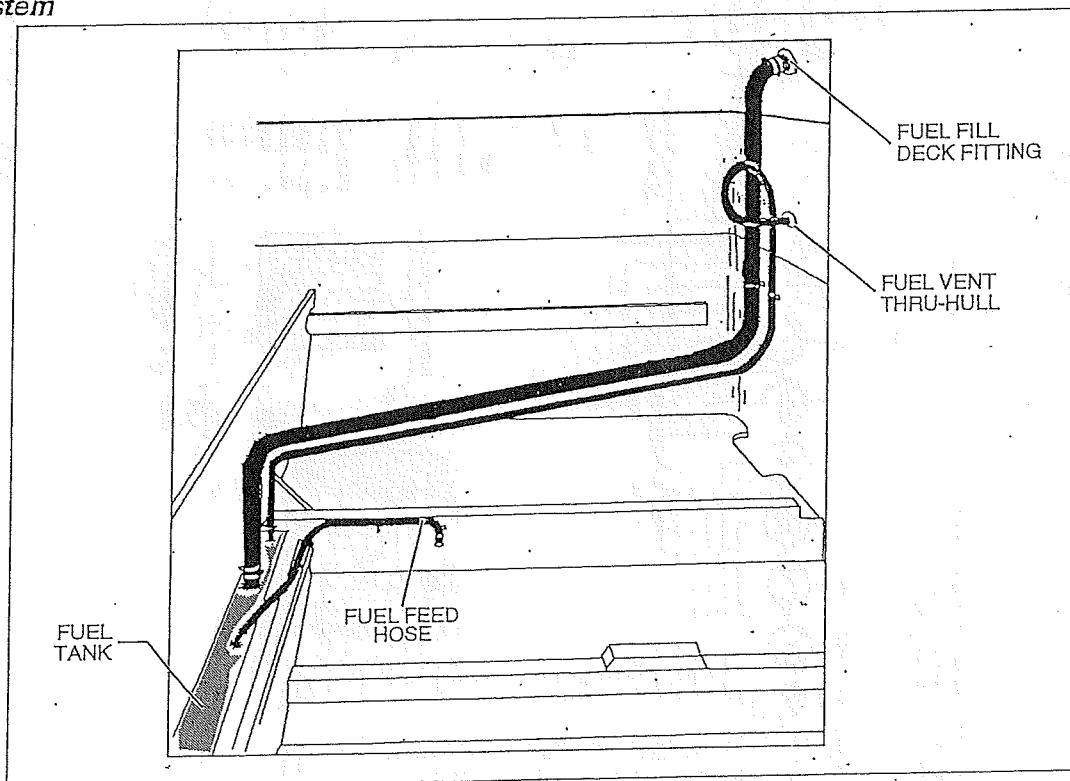


CHAPTER 4: WIRING DIAGRAMS

Please read the electrical sections included in the Owner's Manual and this Owner's Manual Supplement for important safeguards concerning your boat's electrical system.


2252 Express (CP)

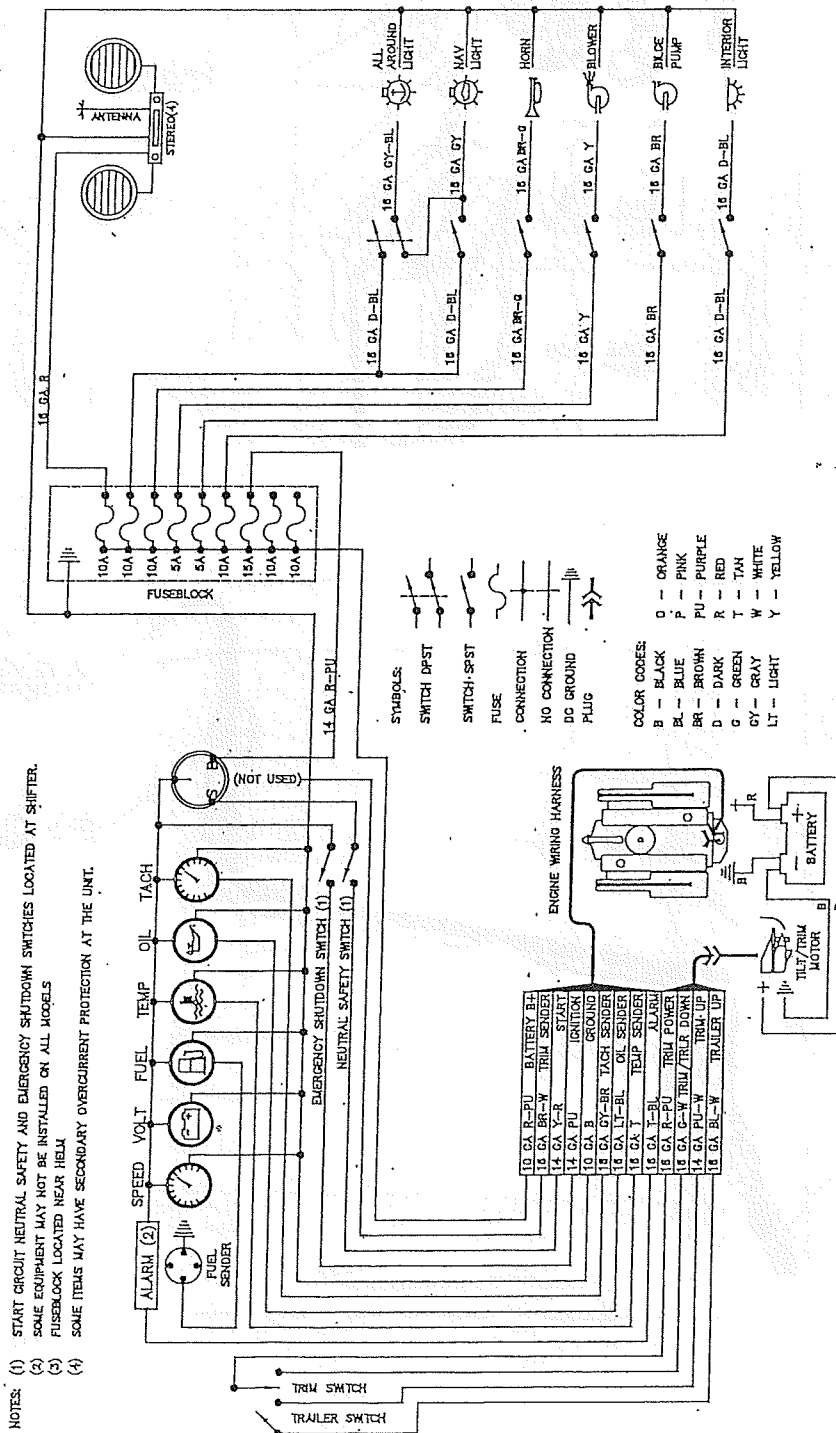


2355 Sunbridge (SJ)

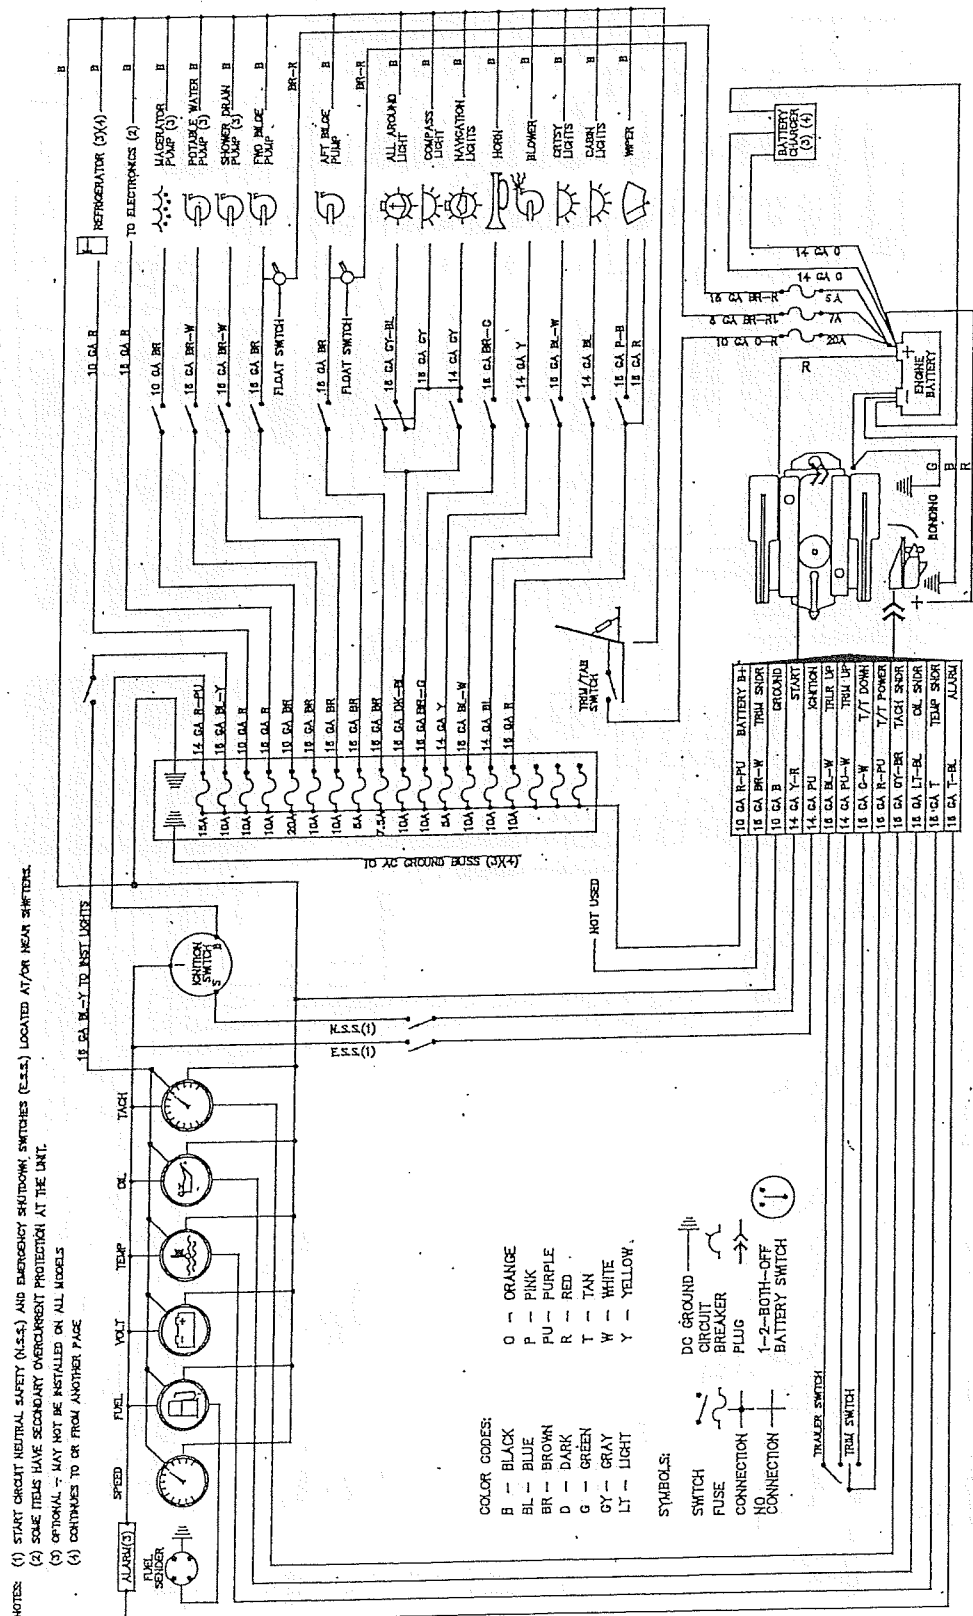


2855 Sunbridge (ST), Gas Engine

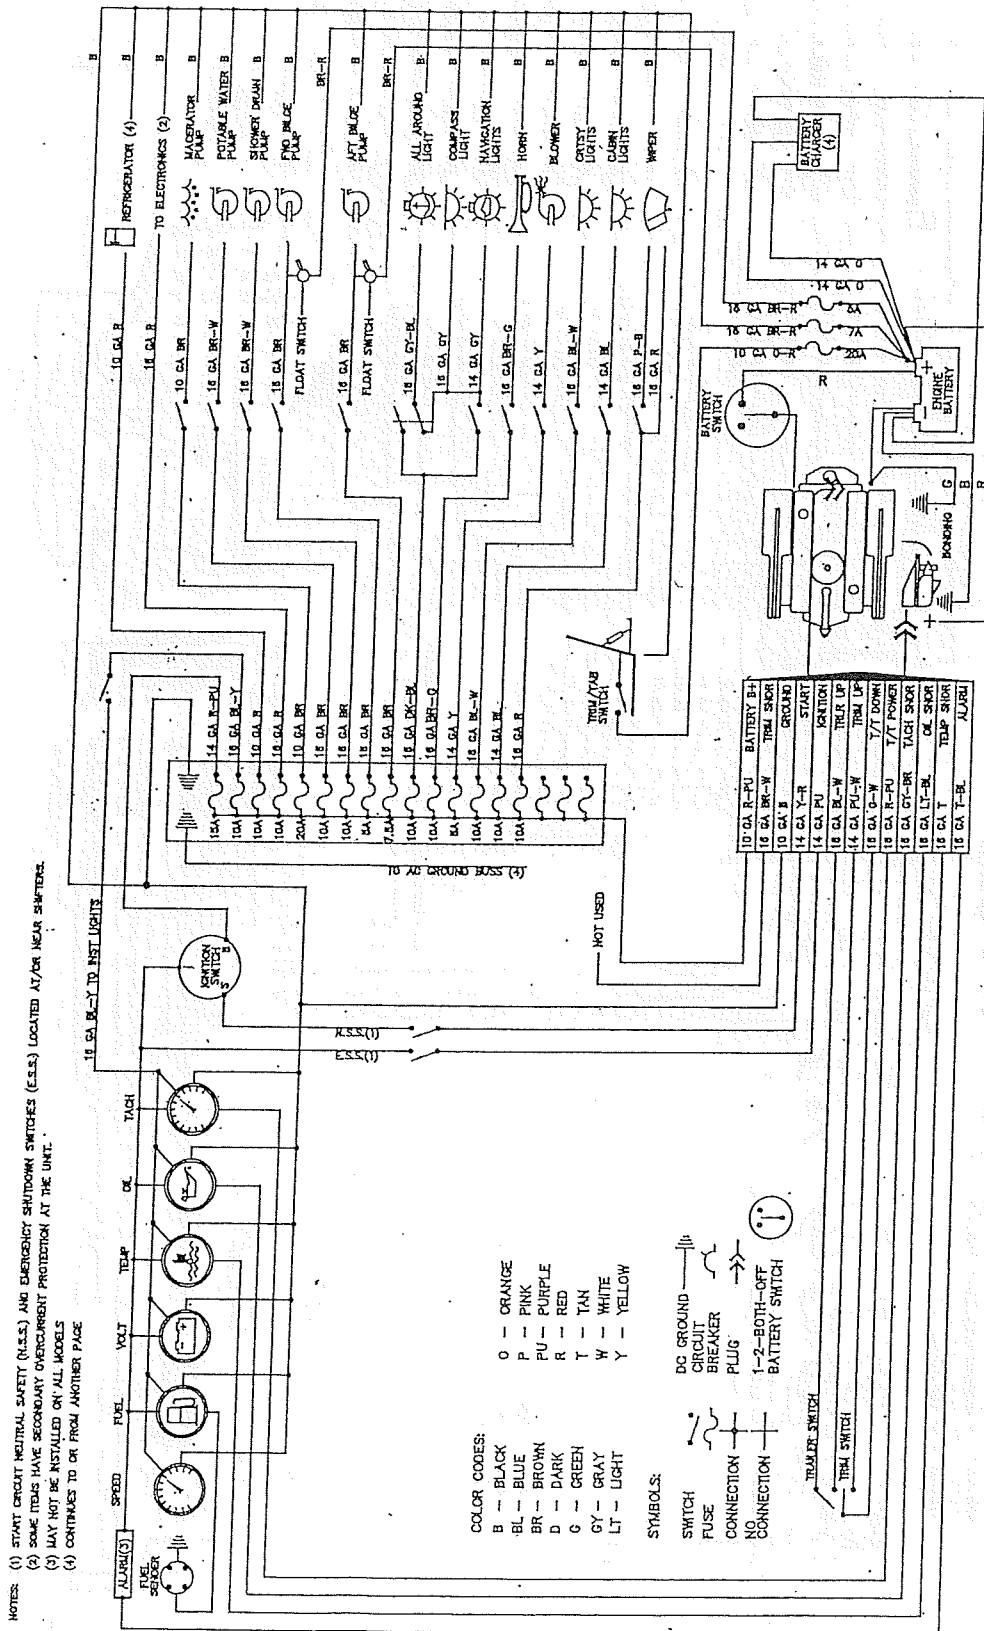


2855 Sunbridge (ST), Diesel Engine

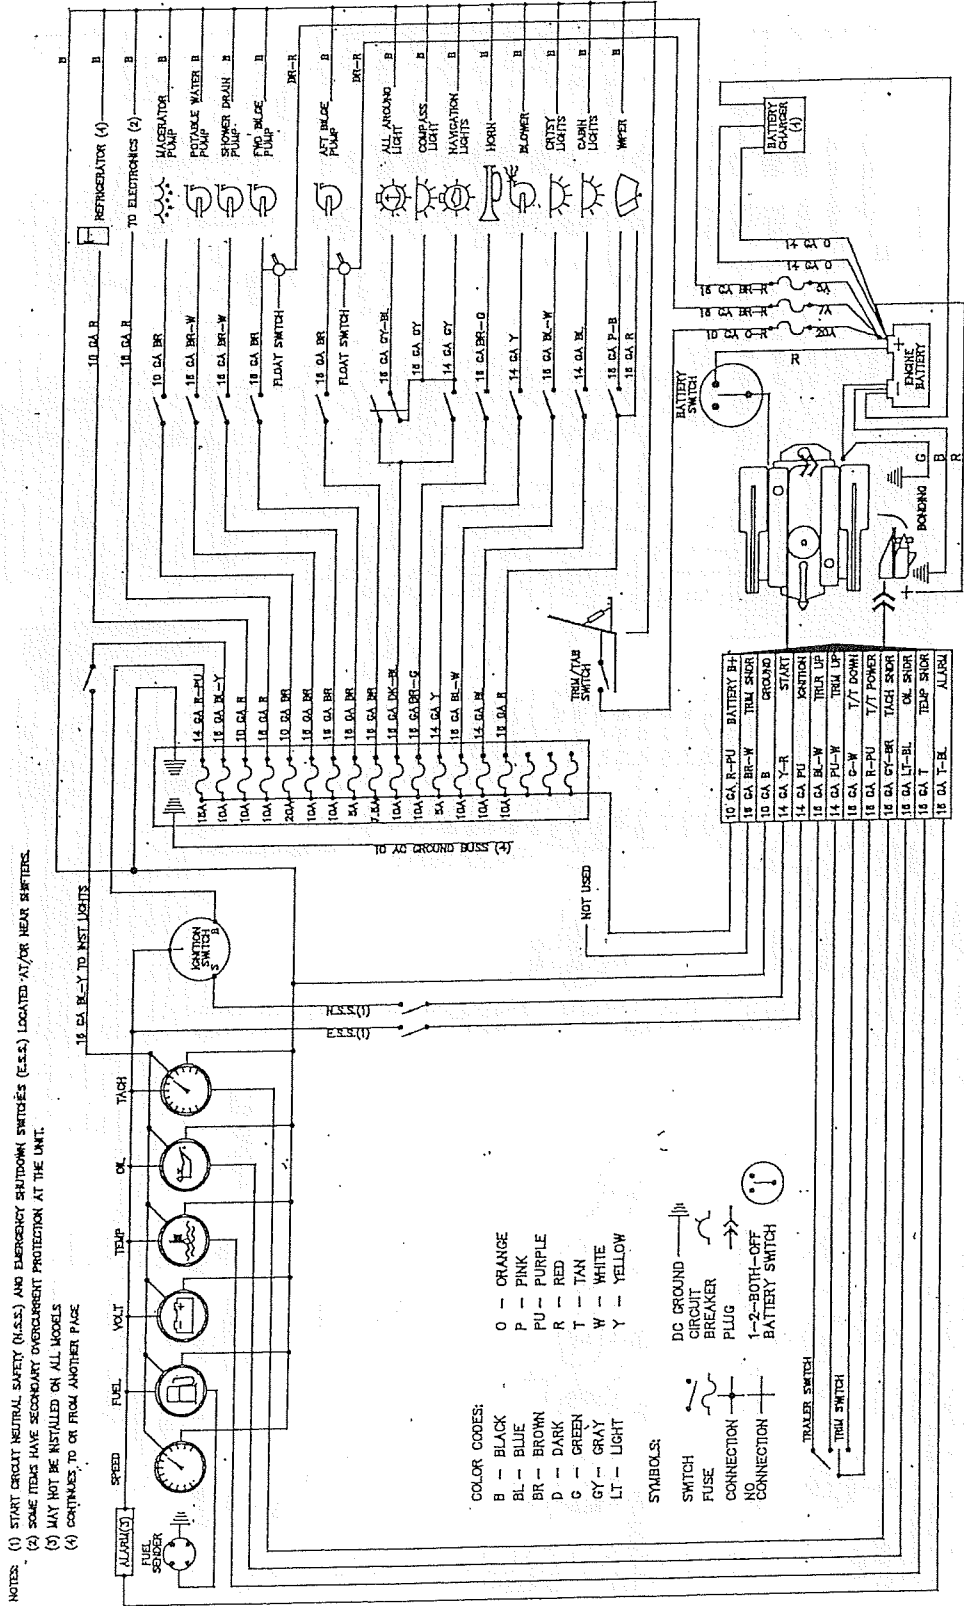


2858 Command Bridge (EC), Gas Engine

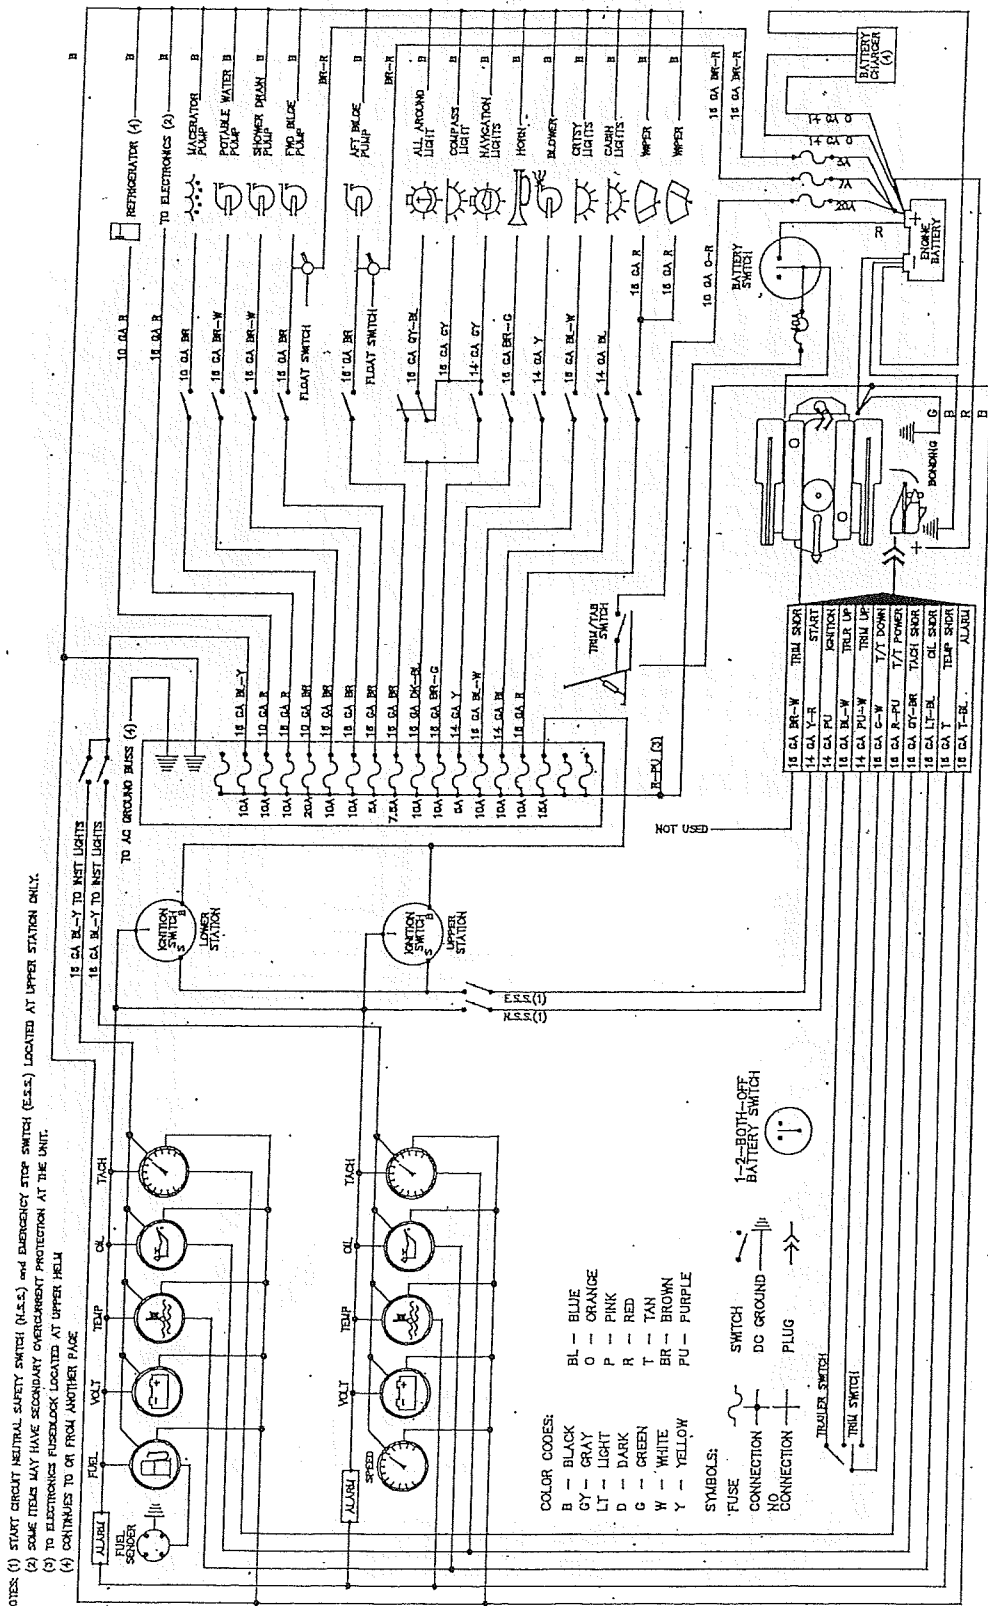


2858 Command Bridge (EC), Diesel Engine

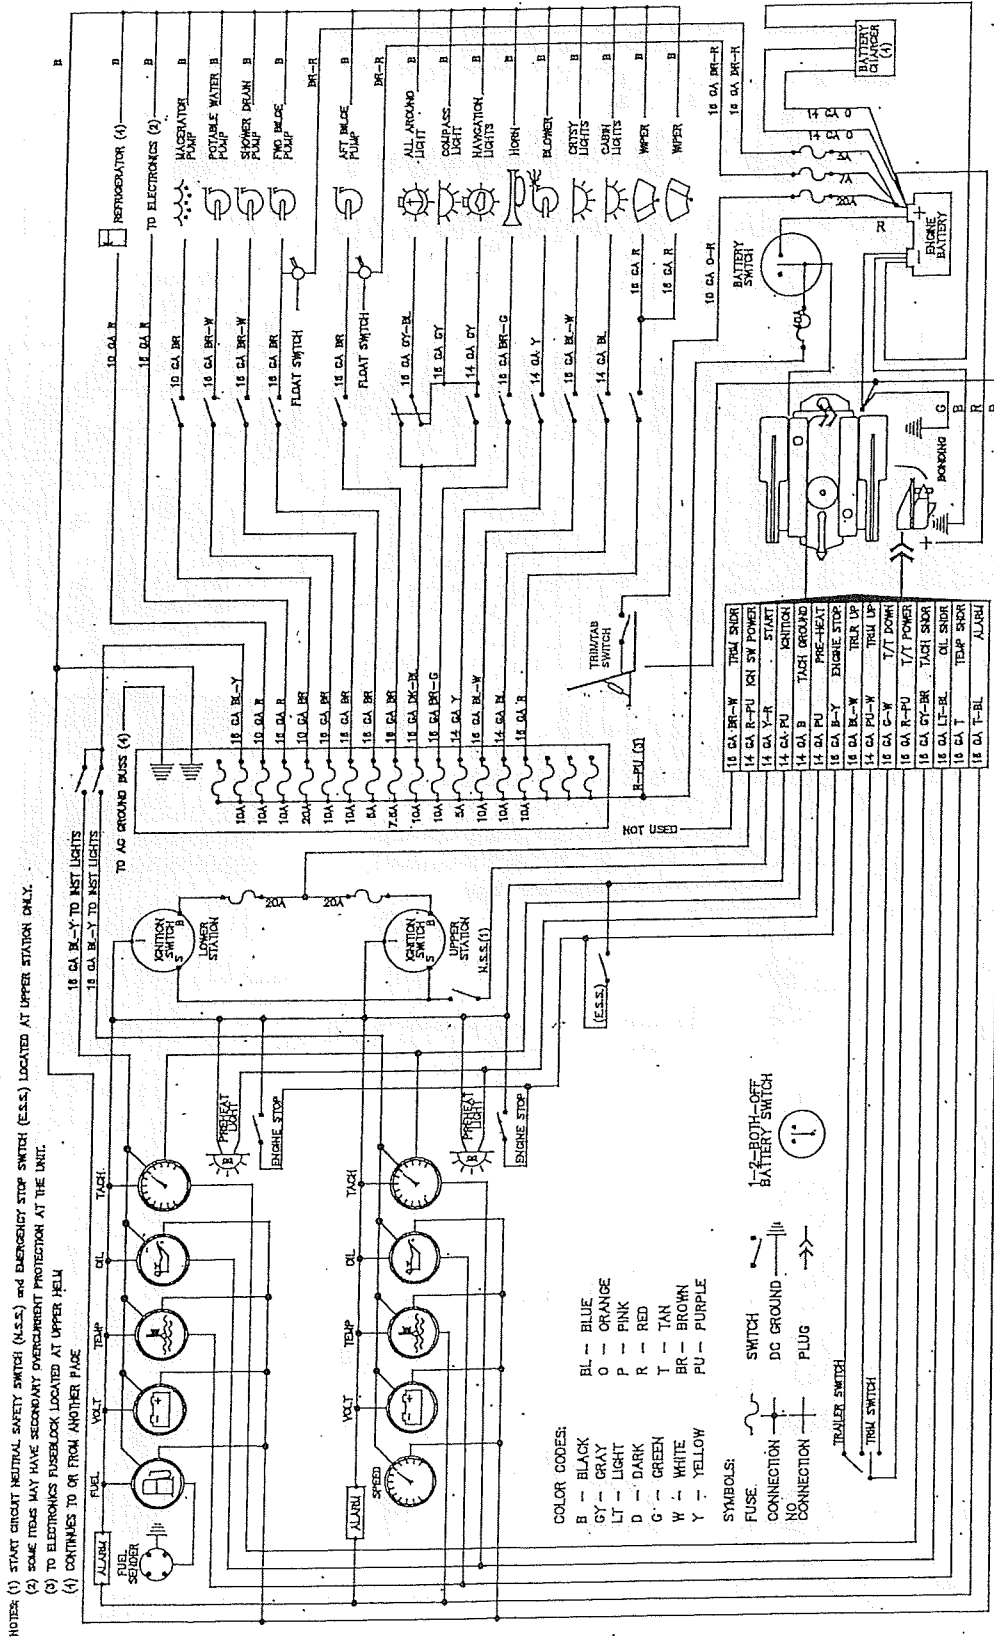


2859 Express (SC), Gas Engine

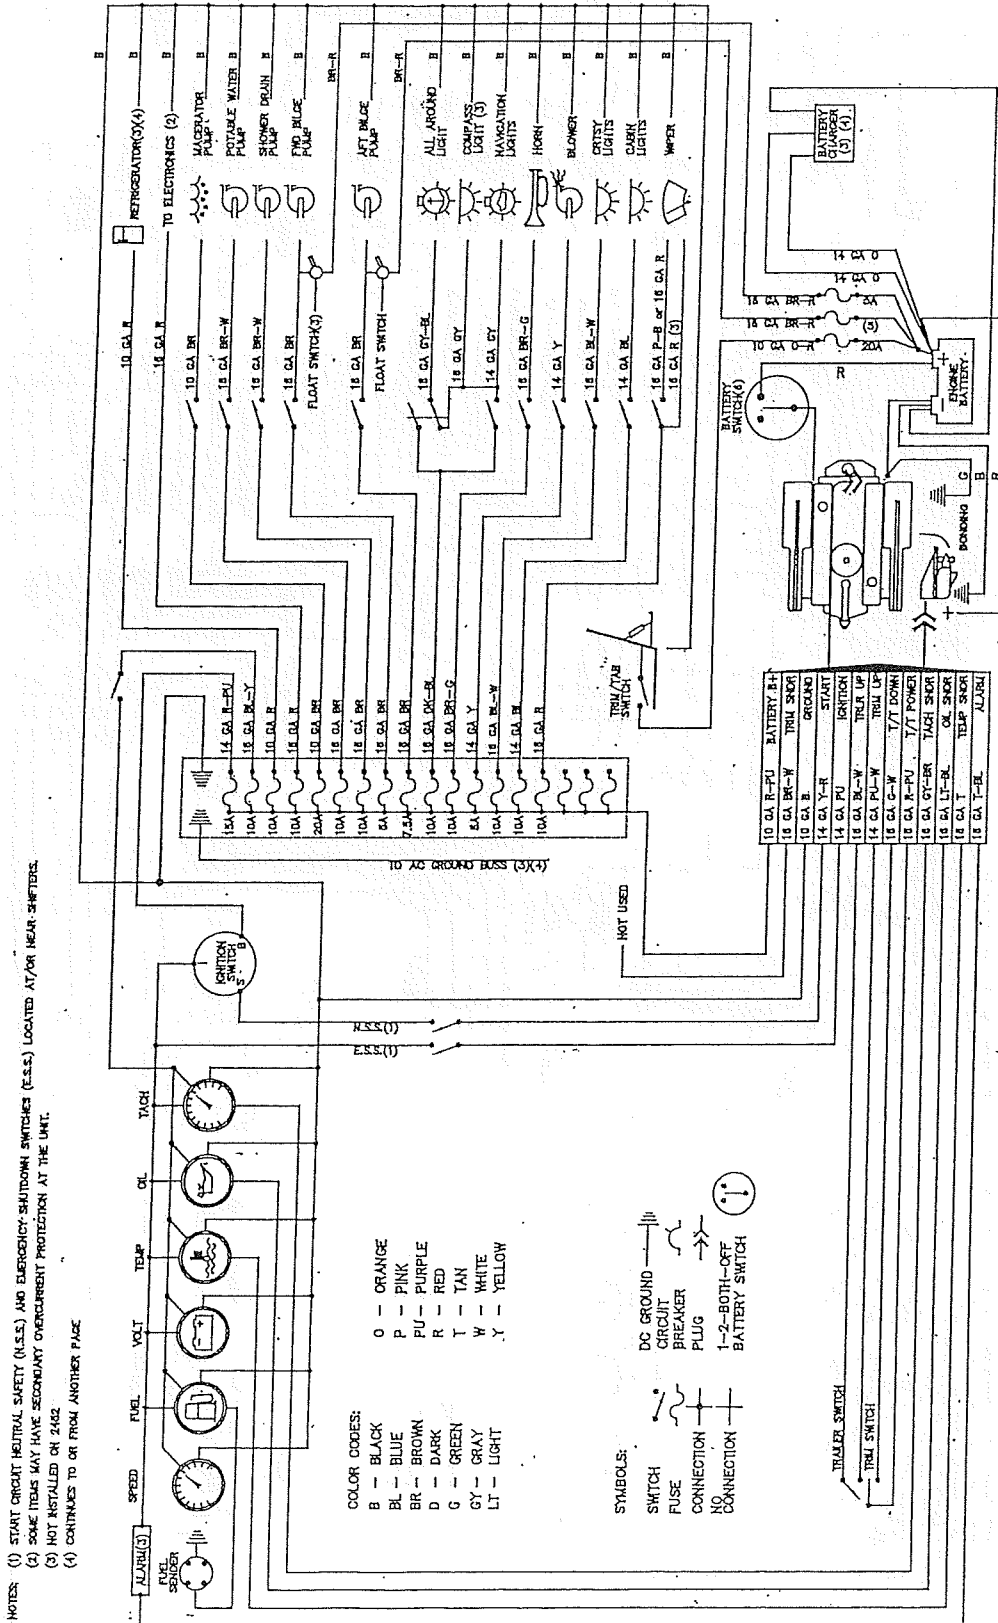



2859 Express (SC), Diesel Engine

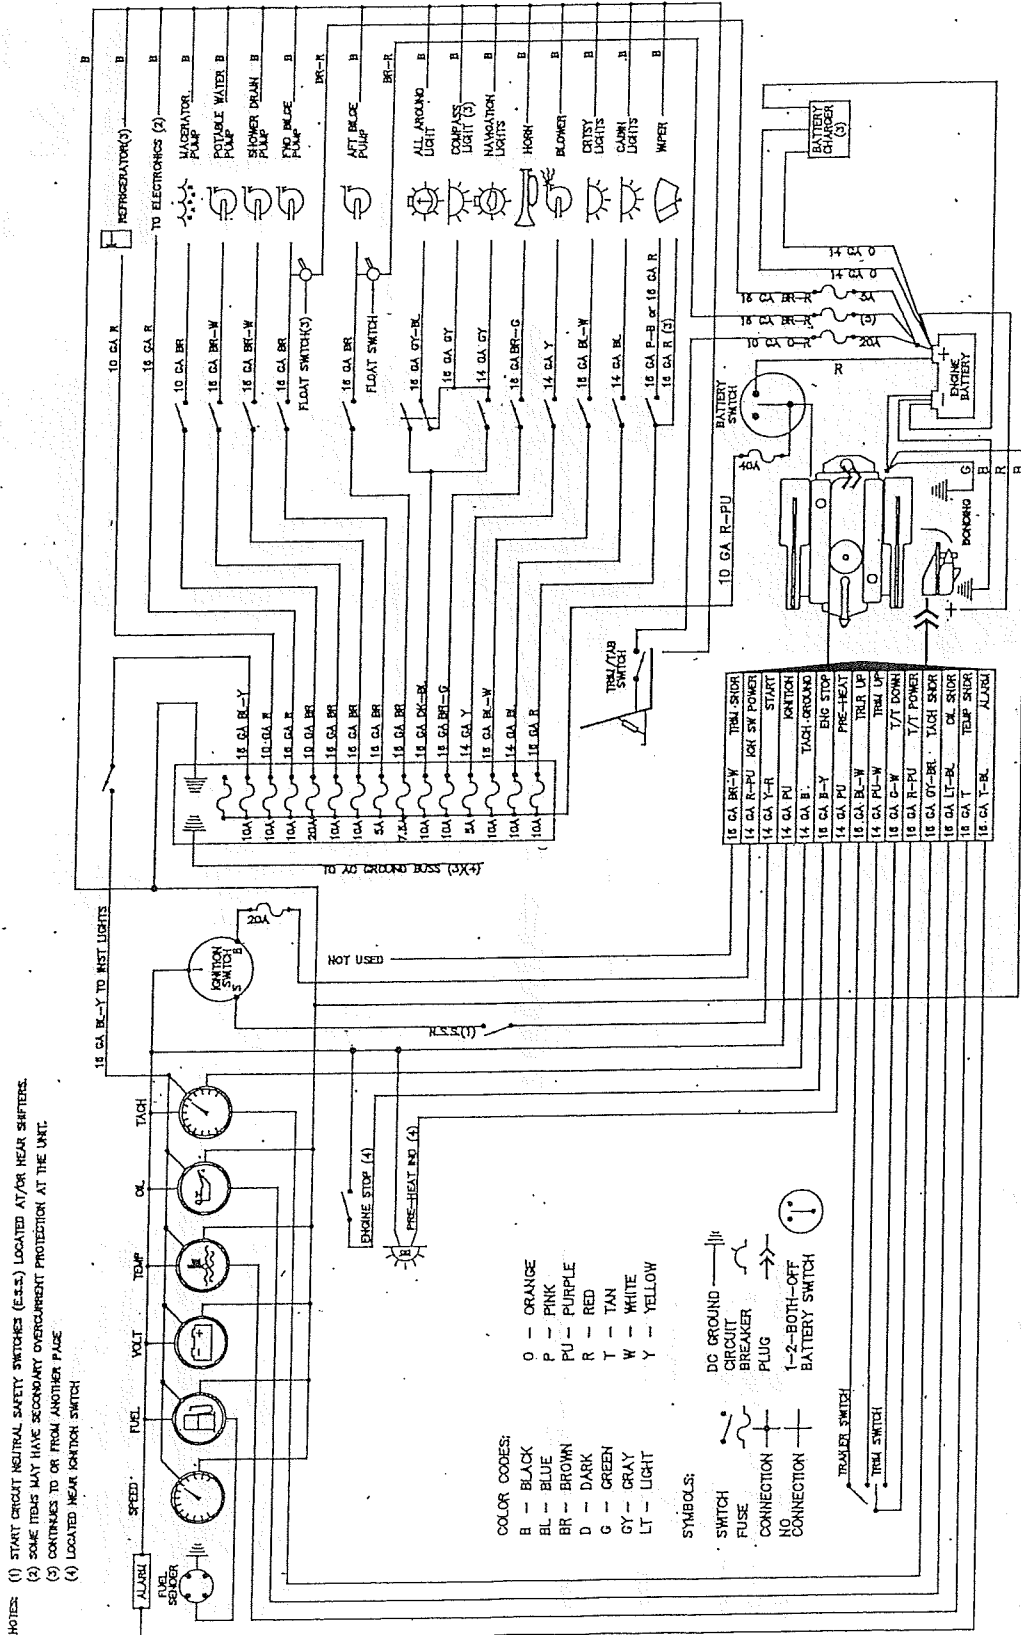

Single Dockside Wiring Diagram

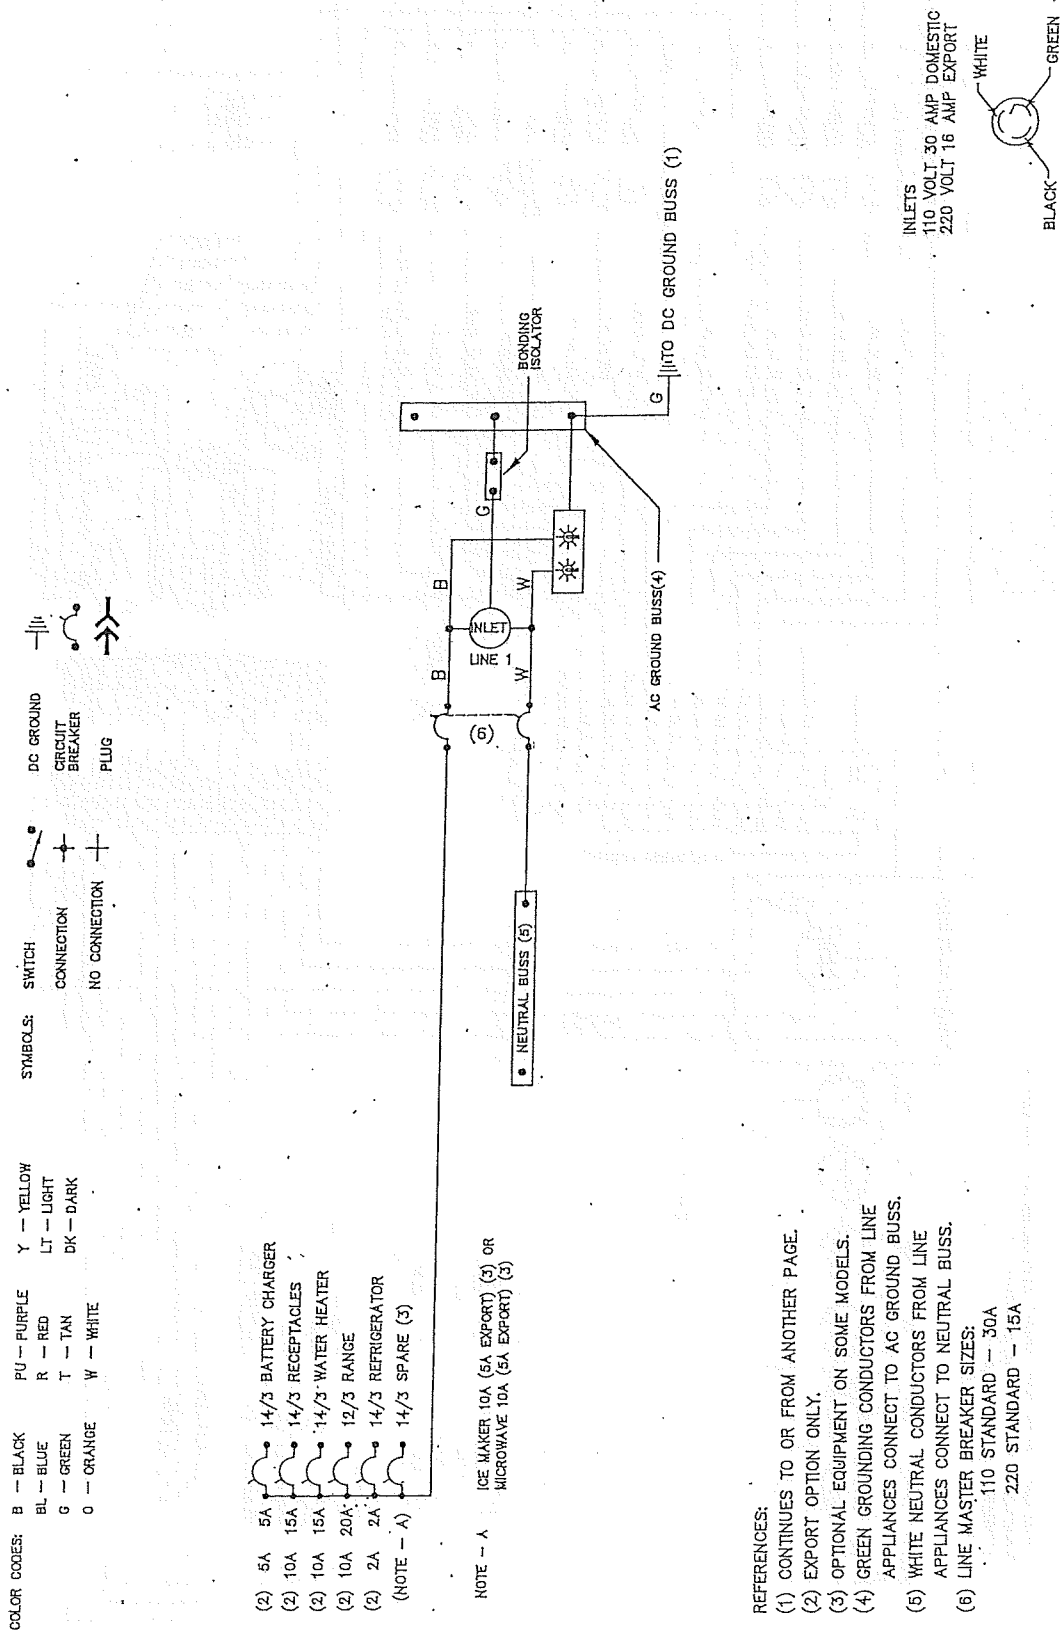






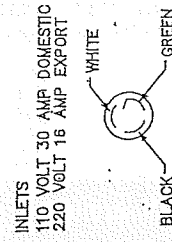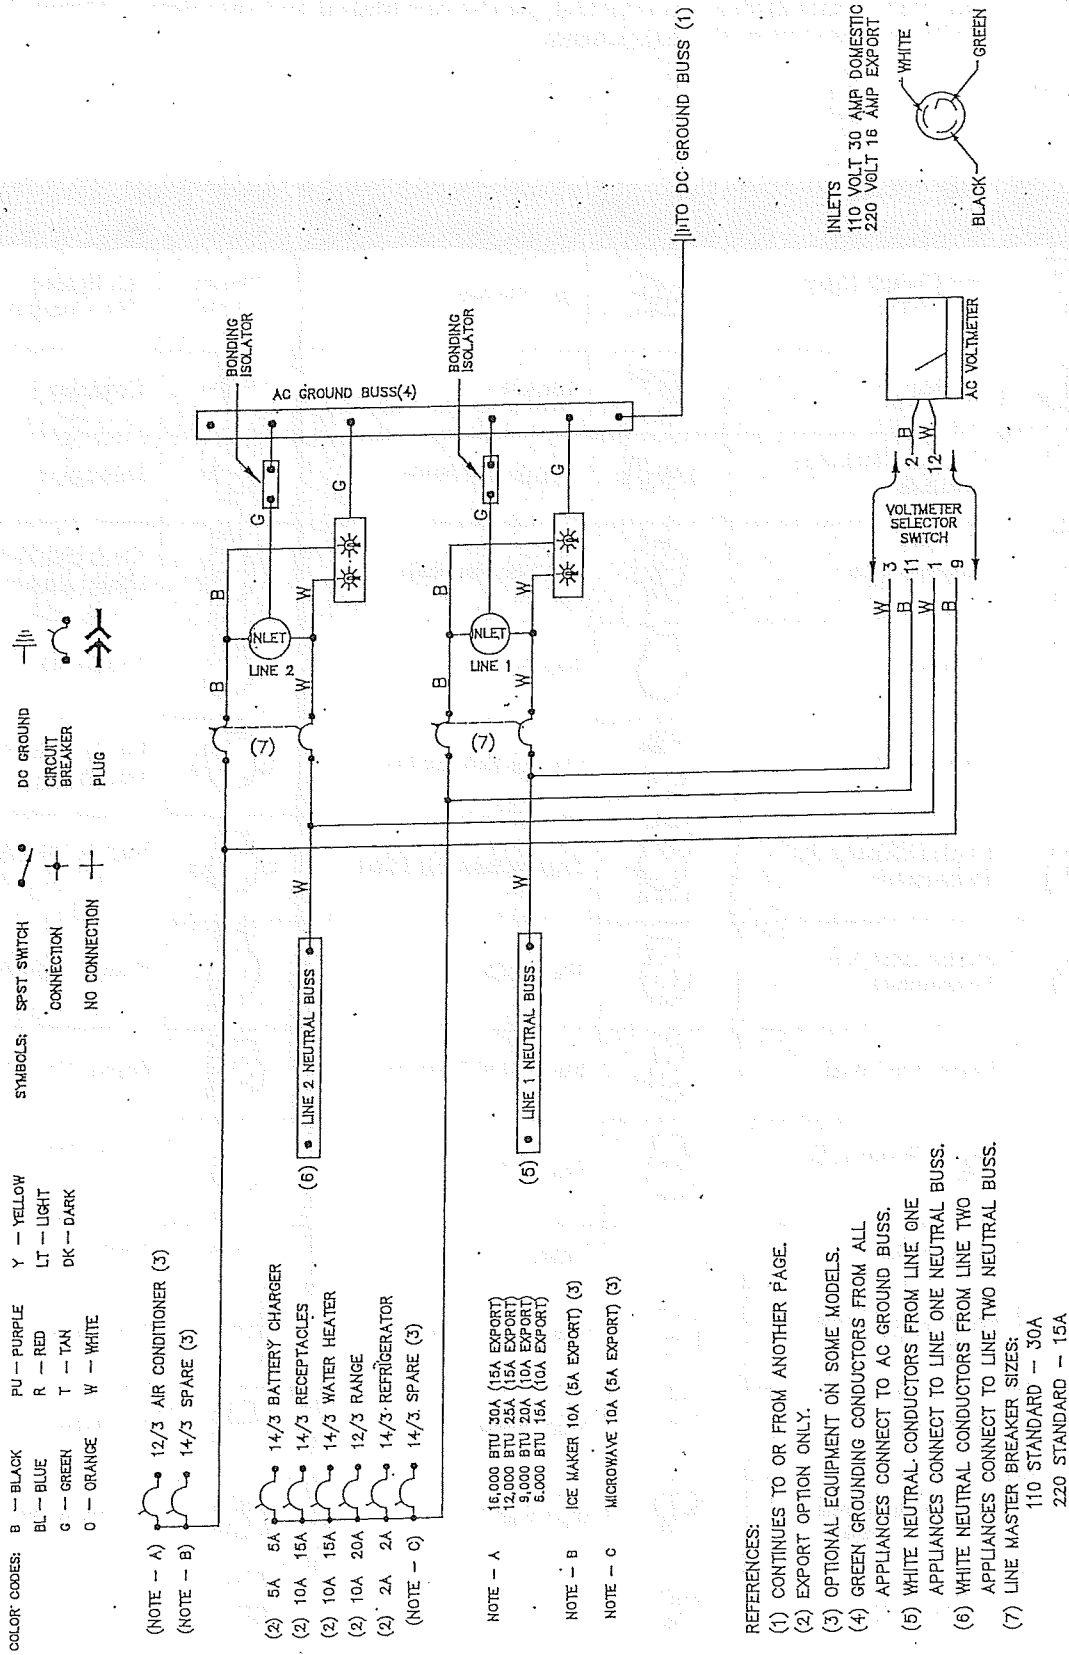







































Double Dockside Wiring Diagram



CHAPTER 5: ISO SYMBOLS

These ISO symbols may be used throughout your boat, the Owner's Manual and this Owner's Manual Supplement to identify and describe various systems and components.

Definitions

	Description		Description		Description
	Air Cooled Charge Air Cooler		Air, General		Air, Intake (For Combustion)
	Anchor		Blower		Compass
	Counter Clockwise Rotation		Crankshaft Power		Disengage
	Elapsed Time		Electric Generator		Electrical Preheat for Diesel Engine
	Engage		Engine		Engine Air Intake
	Engine Coolant		Engine Exhaust Gas		Engine Exhaust Gas Pressure
	Engine Exhaust Gas Temperature		Engine Inlet Air Filter		Engine Inlet Air Pressure
	Engine Inlet Air Temperature		Engine Oil		Engine Oil Filter
	Engine Oil Level		Engine Oil Pressure		Engine Oil Temperature
	Engine Rotation Speed, R/MIN		Engine Start		Engine Water Jacket Drain
	Exhaust Gas		Filter		Fresh Water
	Fresh Water Cooled Charged Air		Fresh Water Tank		Fuel, Diesel
	Fuel Filter		Fuel General		Fuel Level
	Fuel, Liquid Propane Gas		Fuel Shut Off		Fuel Tank, Diesel
	Fuel Tank, LPG		Fuel Tank, Unleaded		Fuel, Unleaded

	Description		Description		Description
	Heat Exchanger		Holding Tank		Horn
	Hydraulic Oil		Hydraulic Oil Filter		Hydraulic Oil Level
	Hydraulic Oil Pressure		Hydraulic Oil Temperature		Hydraulic System
	Hydraulic System Malfunction		Interior Light		Lift Point
	Light		Lubricating Oil		Malfunction
	No Open Flame		Oil Tank		Outboard Drive
	Outboard Drive Tilt		Pressure		Propeller
	Propshaft Power		Propulsion System Trim		Propulsion System Trim, Bow Down
	Propulsion System Trim, Bow Up		Pump		Read Owner's Manual
	Seawater		Shift Only Fwd-N-Rev		Sling Location
	Tank		Throttle/Shift		Transmission
	Transmission Oil		Transmission Oil Filter		Transmission Oil Level
	Transmission Oil Malfunction		Transmission Oil Pressure		Transmission Oil Temperature
	Trim Tab Operation		Trim Tab Operation, Bow Down		Trim Tab Operation, Bow Up
	Volume Empty		Volume Full		Volume Half Full
	Warning		Warning Electrical Hazard		Warning Fire Risk
	Warning Hot		Waste Water, Sewage		Water Flushing Connector
	Windshield Washer Tank		Windshield Wiper & Washer		

WARRANTY

Bayliner warrants to the original purchasers of its 1998 and 1999 model boats, purchased from an authorized dealer, operated under normal, noncommercial use that the selling dealer will: (A) Repair any structural hull defect which occurs within five (5) years of the date of delivery; and (B) Repair or replace any parts found to be defective in factory material or workmanship within one (1) year of the date of delivery.

What Is Not Covered

This limited warranty does not apply to:

1. Engines, drive trains, controls, props, batteries, or other equipment or accessories carrying their own individual warranties;
2. Engines, parts or accessories not installed by Bayliner;
3. Plexiglass windscreen breakage; rainwater leakage on runabout models; rainwater leakage through convertible tops; minor gelcoat discoloration, cracks or crazing or air voids;
4. Hull blisters that form below the waterline;
5. Normal deterioration, i.e. wear, tear, or corrosion of hardware, vinyl, tops, vinyl and fabric upholstery, plastic, metal, wood, or trim tape;
6. Any Bayliner boat which has been overpowered according to the maximum horsepower specifications on the capacity plate provided on each Bayliner outboard boat;
7. Any Bayliner boat used for commercial purposes;
8. Any defect caused by failure of the customer to provide reasonable care and maintenance.

Other Limitations

THERE ARE NO OTHER EXPRESS WARRANTIES ON THIS BOAT. TO THE EXTENT ALLOWED BY LAW:

1. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF ONE YEAR.
2. Neither Bayliner nor the selling dealer shall have any responsibility for loss of use of the boat, loss of time, inconvenience, commercial loss or consequential damages.
3. Some jurisdictions do not allow limitations on how long any implied warranty lasts, so the above limitation may not apply to you. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your Obligation

In order to comply with regulations, it is essential that your limited warranty registration card be submitted within 30 days of delivery of your boat. Return of the limited warranty registration card is a condition precedent to limited warranty coverage. Before any warranty work is performed, we require that you contact your dealer to request warranty assistance.

YOU MUST GIVE US WRITTEN NOTICE OF YOUR WARRANTY CLAIM PRIOR TO THE EXPIRATION OF YOUR LIMITED WARRANTY AND ALLOW US AN OPPORTUNITY TO RESOLVE THE MATTER.

We require that you return your boat, at your expense, to your selling dealer or, if necessary, to the Bayliner factory. You will be responsible for all transportation, haulouts and other expenses incurred in returning the boat for warranty service.

Bayliner Marine Corporation

PO Box 9029

Everett, WA 98206

Phone: 360-435-8957

FAX: 360-403-4235